

# PROGRAMMABLE AC POWER SOURCE

DP060LM DP120LM DP180LM

**INSTRUCTION MANUAL** 

# PROGRAMMABLE AC POWER SOURCE

DP060LM DP120LM DP180LM

**INSTRUCTION MANUAL** 

# \_\_\_\_\_ Preface \_\_\_\_\_

Thank you for purchasing our Programmable AC Power Source DP060LM / DP120LM / DP180LM.

For safe and correct use of the electrical product, please first read "Safety Precautions" on the next page.

#### Alert symbols in this manual

This manual uses the following alert symbols. The instructions by these alert symbols shall be carefully obeyed to ensure equipment operator's safety and prevent damage to equipment.

# **⚠ WARNING**

Equipment handling could result in death or serious injury. This symbol contains information to avoid such risk.

# 

Equipment handling could result in minor or moderate injury, or property damage. This symbol contains information to avoid such risk.

#### This manual consists of the following chapters.

If it is the first time for you to use this product, start with "1. Outline."

- 1. Outline: Explains the overview, configuration, and features of this product.
- 2. Preparation before Use: Explains the preparations carried out before installation or operation.
- 3. Basic operation: Explains the component names and basic operations.
- 4. Advanced Operation: Explains the operations more extensively.
- 5. Description of Screen and Menu: Explains the screen configuration and menu composition.
- 6. Remote Control: Explains the remote control via communication interface.
- 7. Options: Explains the available options.
- 8. Peripherals: Explains the equipment used with this product.
- 9. Troubleshooting: Explains the remedies when an error message is displayed, or when a failure is suspected.
- 10. Maintenance: Explains the methods of storage, repackaging, transportation, and maintenance.
- 11. Specifications: Provides the list of specifications of functions and performance.

#### Scope of contents

In this manual DP060LM/DP120LM/DP180LM are covered.

The description of this manual applies to products with firmware version 2.00 or above which are ordered after July 1st, 2019.

For details on checking the firmware version, see Chapter 10.4.

# ——— Safety Precautions ———

For safe use, ensure to obey the following warnings and considerations.

We are not responsible for damage resulting from failure to obey these warnings and considerations.

This product is an insulation Class I device (with a protective conductor terminal) complying with the JIS and IEC standards.

### • Ensure you obey the instructions in this instruction manual.

This instruction manual contains instructions for safe operation and use of this product.

Before using this product, please read this manual first.

All the warning items contained in this instruction manual are intended for preventing risks that may lead to serious accidents. Ensure to obey them.

#### Ensure to ground.

Ensure to connect the protective conductor terminal of the power input terminal of this product to an earth ground so that ground resistance is  $100 \Omega$  or less. If the product is not certainly grounded, an electric shock might occur.

To prevent electric shock, ensure that the protective grounding conductor is connected before you connect a cable to the power input terminals L, L1, L2, L3, and N.

For grounding, use a power cable of sufficient ampacity for the maximum current consumption (see Table 2-5).

# • Check the power supply voltage.

This product operates on the power supply voltage specified in "2.4 Grounding and Power Connections". Before connecting this product to a power supply, make sure that the voltage of distribution board conforms to the power supply voltage rating of the product. The input voltage is noted as line voltage in three-phase four-wire input, unless otherwise noted.

# • If you notice anything strange

If this product produces smoke, unusual odor, or strange sound, immediately cut the power to the product and stop using it.

Should you encounter any anomaly like above, immediately contact us or our agent. Never use it until the repair is completed.

#### Do not operate in an explosive atmosphere.

An explosion or other such hazard may result.

#### Do not remove the cover.

This product has high-voltage portions inside. Never remove the cover.

When inspection into the inside of the product is needed, never allow anybody to touch the innards except our certified service engineers.

## Do not modify the product.

Never modify the product. Modification to the product may pose a new risk. We may refuse the repair of a modified product at fault.

# Prevention of electric shock by output voltage

The maximum output of this product is  $\pm$  908 V when output phase configuration is single-phase three-wire. Be careful to avoid electric shock. Directly touching the output or changing the cable connection while the output is on may cause electric shock.

#### This product weights over 100 kg.

Do not carry it alone, or you may suffer physical injury.

#### Do not expose this product to water.

When this product is used in wet condition, it may cause an electric shock and a fire. If this product is exposed to water, cut the power at the distribution board immediately, and contact NF Corporation or one of our representatives.

• If lightning occurs, power off this product and cut the power at the distribution board.

A lightning may cause an electric shock, a fire and a failure.

#### Safety symbols

The following shows the general definitions of the safety symbols used on the product main unit and in the instruction manual.



#### Refer to the instruction manual

This notifies the user of potential hazards and indicates that he/she must refer to the instruction manual.



#### Electric shock hazard

This indicates that an electric shock may occur under specific conditions.



#### Protection conductor terminal

This indicates that the terminal needs to be grounded in order to prevent electric shock accidents.

Before operating the equipment, ensure to connect this terminal to an earth ground so that ground resistance is  $100 \Omega$  or less.

# **⚠ WARNING**

#### Warning

Equipment handling could result in death or serious injury. This symbol contains information to avoid such risk.

# **⚠** CAUTION

#### Caution

Equipment handling could result in minor or moderate injury, or property damage. This symbol contains information to avoid such risk.

# Other symbol

# $\perp$

# Chassis

This indicates that the terminal (or external conductor for a connector) is connected to the chassis.

# Request about disposal

For environmental preservation, pay attention to the followings when you dispose of this product.

- a) Do not discard this product in domestic household waste. This product shall be disposed of through an appropriate industrial waste disposer.
- b) This product does not include a battery.
- c) This product does not contain mercury.

# **Table of Contents**

	Page
Preface	i
Safety Precautions	ii
List of Figures	xi
List of Tables	xiii
1. Outline	1
1.1 Overview	2
1.2 Series Lineup	2
1.3 Features	3
Preparation before Use	7
2.1 Check before Use	8
2.2 About Installation Environment	9
2.3 Cautions during Moving and Transportation	12
2.4 Grounding and Power Connections	13
2.5 Output Cable Connection	17
2.5.1 Single-phase output	18
2.5.2 Polyphase output	20
2.6 How to Tilt Control Panel	21
2.7 Simple Operation Check	23
2.8 Calibration	26
3. Basic Operation	27
3.1 Component Name	28
3.1.1 Front	28
3.1.2 Rear	29
3.1.3 Control panel	31
3.2 Power On/Off	32
3.2.1 Before Turning on the Power	32
3.2.2 Power On	33
3.2.3 Screen Display and Operations at Starting Up	33
3.2.4 The Settings Loaded after Startup	34
3.2.5 Checking the output phase configuration	34
3.2.6 Checking the Rated Power	34
3.2.7 Power Off	34
3.3 Basic Key Operations	35
3.3.1 Changing the Output Function (Continuous/Sequence/Simulatio	n)35
3.3.2 Item Selection	35
3.3.3 Using Soft-keys	36
3.3.4 Closing Windows	37

3.3.5	Entering Values (Numerical Entry Box)	38
3.3.6	Entering Strings (Character String Entry Box)	39
3.3.7	Using Shortcut Operations (SHIFT Key)	40
3.4 Usi	ing the Continuous Function	41
3.4.1	Setting output phase configuration	41
3.4.2	Setting the AC/DC Mode and the Signal Source	43
3.4.3	Setting the Output Range	46
3.4.4	Setting Waveforms	47
3.4.5	Setting the Output Voltage (Single-phase Output)	49
3.4.6	Setting the Output Voltage (Polyphase Output)	50
3.4.7	Setting the Output Frequency	52
3.4.8	Setting the Output On/Off Phase	52
3.4.9	Turning the Output On or Off	53
3.4.10	Using the Measurement Function	54
3.4.11	Switching the Display Format (RMS/AVG/Peak) of the Measured Value	55
3.4.12	Enlarge Display Letters for the Measured Value	57
3.4.13	Clearing the Output Current Peak-hold Value	59
3.4.14	Switching the Target Phase of which the Measured Values are Dis	played
(Polyph	ase Output)	61
4. Advance	d Operation	63
4.1 Usi	ing Limiter, Setting Limiter	64
4.1.1	Use Peak Current Limiter	64
4.1.2	Using RMS Current Limiter	66
4.1.3	Using Voltage Setting Range Limit	68
4.1.4	Using Frequency Setting Range Limit	69
4.1.5	About Wattage Limiter	70
4.2 Usi	ing Sequence Function	71
4.2.1	Basics	71
4.2.2	Parameters of Sequence Function	74
4.2.3	Example of Output Using Sequence Function	77
4.2.4	Process Flow in a Step	77
4.2.5	Edit a Sequence	79
4.2.6	Load a Sequence	82
4.2.7	Execute a Sequence	86
4.2.8	Save a Sequence	90
4.2.9	Clear/Rename Sequence	94
4.2.10	Set so as the Sequence Function is Selected at Power-on	98
4.2.11	Sequence Control by CONTROL I/O	99
4.2.12	Screen Overview	99
4.2.13	Change Output Parameter during Output ON	101
4.3 Usi	ing Power Fluctuation Testing (Simulation) Function	103
4.3.1	Basics	103

4.3	.2	Simulation Function Parameters	105
4.3	.3	Output Examples Using Simulation Function	107
4.3	.4	Process Flow in a Step	109
4.3	.5	Editing Simulation	109
4.3	.6	Loading a Simulation	112
4.3	.7	Executing Simulation	115
4.3	.8	Saving Simulation	117
4.3	.9	Clear/Rename Simulation	121
4.3	.10	Set so as the Simulation Function is Selected at Power-on	125
4.3	.11	Simulation Control by CONTROL I/O	126
4.3	.12	Screen Overview	126
4.4	Mea	asuring Harmonic Current	128
4.4	.1	Harmonic current	128
4.4	.2	Basics	128
4.4	.3	Measured Value Display Method	129
4.5	Mea	asuring Inrush Current	130
4.5	.1	Inrush Current	130
4.5	.2	Basics	131
4.5	.3	Measurement Method	131
4.5	.4	Measurement Tips	132
4.6	Usir	ng Clipped Sine Wave	132
4.7	Out	putting Arbitrary Waveform	135
4.7	.1	Basics	135
4.7	.2	Arbitrary Waveform Creation Procedure	136
4.7	.3	Arbitrary Waveform Creation Example	136
4.7	.4	Transferring Arbitrary Waveform	136
4.7	.5	Outputting Arbitrary Waveform	139
4.8	Usir	ng Memory Function	140
4.8	.1	Basic Setting Memory	141
4.8	.2	Arbitrary Waveform Memory	148
4.8	.3	Sequence Memory	152
4.8	.4	Simulation Memory	153
4.9	Usir	ng USB Memory Function	154
4.10	Usir	ng Monitor Function	155
4.11	Usir	ng Remote Sensing Function	158
4.12	Usir	ng AGC Function	161
4.13	Usir	ng Autocal Function	164
4.14	Adjı	usting DC Offset	168
4.15	Usir	ng for Unbalanced Polyphase Output	169
4.16	Usir	ng as DC Power Supply	171
4.17	Sett	ing Voltage using External DC Input Signal	173
4.1	7.1	Using External Signal in AC-VCA Mode	173

	4.17	7.2 Using External Signal in DC-VCA Mode	175
	4.18	Control Using External Control Function	176
	4.18	3.1 Using CONTROL I/O	177
	4.18	3.2 Control of DIP or RIN	182
	4.19	Synchronizing the Output Frequency with the Power Line or the External Signal	183
	4.20	Amplifying the External Signal Input	185
	4.21	Turning the Output On or Off Rapidly	186
	4.22	Enabling Automatic Output-On at Power-On	188
	4.23	Power Unit Energization Setting (Using Under the Restricted Rated Power)	189
	4.24	Key Lock	191
	4.25	Beep	191
	4.26	Changing the Background Color and the Contrast of the Screen	192
	4.27	Restoring to the Factory Default Setting (Reset)	194
5.	Desc	ription of Screen and Menu	197
	5.1	Screen Configuration	198
	5.1.	1 Status Icon	199
	5.1.	2 Measured Value Display Items	200
	5.1.	3 Output Setting Display Items	201
	5.1.	4 Warning and Error Display	201
	5.2	Menu Composition	202
	5.2.	1 Menus of the Continuous Function	202
	5.2.	2 Menus of the Sequence Function	203
	5.2.	Menus of the Simulation Function	204
	5.2.	4 Menus of the Memory Function	204
	5.2.	5 System Menus	205
6.	Rem	ote Control	207
	6.1	Communication Interface	208
	6.1.	1 USB	208
	6.1.	2 RS232	210
	6.1.	3 GPIB	212
	6.1.	4 LAN	214
	6.2	Remote/Local State Switching	216
	6.2.	1 Remote State	216
	6.2.	2 Local State	216
7.	Optic	ons	217
	7.1	Remote Controller	218
	7.2	Fixing Bracket	218
	7.3	Replacement Air Filter	219
	7.4	Power Cable	220
8.	Perip	herals	221
	8.1	Peripherals Line-up	222
	8 1	1 Immunity Test Software (DP0408)	222

	8.1.2	Voltage Dips Simulator (DP4170 Series)	. 222
	8.1.3	Reference Impedance Network (DP4160 Series)	222
	8.2	Using in Combination with DIP or RIN	223
	8.2.	The Case the Voltage Drop Due to Wiring is Small	223
	8.2.2	Compensating the Voltage Drop by the FEEDBACK Connector of DIP or RIN	223
9.	. Trouk	pleshooting	. 227
	9.1	Error Messages and Error Handling	228
	9.1.	1 Error Message Screen	. 228
	9.1.2	2 If an Error Message is Displayed	228
	9.1.3	3 If an Error Occurs Repeatedly	. 229
	9.1.4	Protection Operation Types	230
	9.1.	5 Error Message List	. 231
	9.2	When a Failure is Suspected	235
1(	0. Maint	tenance	241
	10.1	Preface	242
	10.2	Daily Maintenance	. 242
	10.3	Storage, Repackaging, Transportation	244
	10.4	Checking Firmware Version	.244
11	1. Spec	ifications	247
	11.1	Output phase Configuration	248
	11.2	Output Function	248
	11.3	Output Range	. 248
	11.4	AC/DC Mode	.249
	11.5	Signal Source	250
	11.6	AC Output	. 251
	11.7	DC Output	253
	11.8	Output Voltage Stability	254
		Distortion of Output Voltage Waveform	
	11.10	Power Input	255
	11.11	Withstand Voltage and Insulation Resistance	255
	11.12	Measurement Function	255
	11.13	Power Unit Energization Setting	259
	11.14	Current Limiter	260
	11.15	Setting Range Limit Function	. 262
	11.16	Remote sensing	. 263
	11.17	AGC	. 264
	11.18	Autocal	. 265
	11.19	Sequence	. 266
	11.20	Simulation	. 267
	11.21	Clipped Sine Wave	268
	11.22	Arbitrary Wave	. 268
	11.23	External Signal Input	269

11.23.1 External Synchronous Signal Input (Signal Source SYNC only)	269
11.23.2 Voltage Setting Signal Input (Signal Source VCA only)	269
11.23.3 External Signal Input (only EXT and ADD)	270
11.24 General Function	270
11.25 Memory Function	271
11.26 Self-diagnosis/Protection Function	272
11.27 External Control Function	272
11.27.1 CONTROL I/O	273
11.27.2 Control of Peripherals by Device Control	274
11.28 External Interface	274
11.29 USB Memory Interface	275
11.30 Waveform Monitor Output	276
11.31 EMC	277
11.32 Operation Environment	277
11.33 Externals, Weight, and Terminal Block	278
11.34 Option	278
11.35 Outline Dimensional Drawing	280
Index	283

# Figures and Tables

# ■List of Figures

	Page
Figure 1-1 Model Naming System	2
Figure 2-1 How to Use the Adjuster Foot	9
Figure 2-2 Assembly Diagram of Stabilizer	10
Figure 2-3 Prohibited arrangement method	11
Figure 2-4 Power Input Terminal	16
Figure 2-5 Terminal Block Layout	17
Figure 2-6 How to Attach Resin-molded Cover in Single-phase Output	19
Figure 2-7 How to Attach Resin-molded Cover in Polyphase Output	21
Figure 3-1 Component Name (Front)	28
Figure 3-2 Component Name (Rear)	29
Figure 3-3 Component Name (Control Panel)	31
Figure 4-1 Step-control Parameters and intra-Step Parameters	72
Figure 4-2 Step Behavior	73
Figure 4-3 Stop Phase	76
Figure 4-4 Example of Sequence	77
Figure 4-5 Process Flow in Sequence Step	78
Figure 4-6 Branch Operation/Stop Operation	78
Figure 4-7 Sequence Edit View	100
Figure 4-8 Sequence Control View (Output Off State)	100
Figure 4-9 Sequence Control View (Output On State/Sequence in Execution)	100
Figure 4-10 Sequence Control View (Output On State/Sequence Stopped)	101
Figure 4-11 Simulation Function Steps	105
Figure 4-12 Voltage Dip Simulation Example	107
Figure 4-13 Voltage Change Simulation Example	108
Figure 4-14 Process Flow through Simulation Steps	109
Figure 4-15 Stop Operation	109
Figure 4-16 Simulation Edit View	126
Figure 4-17 Simulation Control View (Output Off State, Simulation Stopped)	127
Figure 4-18 Simulation Control View (Output On State, Simulation Running)	127
Figure 4-19 Simulation Control View (Output On State, Simulation Stopped)	127
Figure 4-20 Current Waveform Containing Many Harmonic Components	128
Figure 4-21 Inrush Current Example	130
Figure 4-22 Clipped Sine Wave	132
Figure 4-23 USB Memory Folder Structure	
Figure 4-24 Sensing input terminals	159
Figure 4-25 The Message Window to be Shown Before the Automatic Output-Or	n After the

Power-On	188
Figure 5-1 Component Name (Display Areas on the Screen)	198
Figure 5-2 Menu Composition	202
Figure 7-1 Remote Controller External View	218
Figure 7-2 Correspondence between Front Grills and Air Filters	219
Figure 8-1 The Control Cable Connection Diagram of DP060LM and DP4162	(RIN) in
Single-phase Output	225
Figure 8-2 The Control Cable Connection Diagram of DP060LM and DP4173/DP417	72 (DIP) in
Three-phase Output	225
Figure 9-1 Error Message Screen Example	228
Figure 11-1 Range of Ambient Temperature/Humidity	277
Figure 11-2 DP060LM (Type2L cabinet)	280
Figure 11-3 DP120LM (Type4L cabinet)	281
Figure 11-4 DP180LM (Type5L cabinet)	282

# ■List of Tables

	Page
Table 1-1 Series Line-up	
Table 2-1 List of Content	8
Table 2-2 Heat Value	9
Table 2-3 Mass	
Table 2-4 Power Input Terminal	14
Table 2-5 Maximum Power/Current Consumption	14
Table 2-6 Screw Size of Output Terminal	18
Table 3-1 Component Name (Front)	28
Table 3-2 Component Name (Rear)	30
Table 3-3 Component Name (Control Panel)	31
Table 3-4 How the Rated Power Icon is Displayed Depending on the Power Unit Energiz	
Setting	
Table 3-5 Character String Entry List	
Table 3-6 Shortcut Operations	
Table 3-7 Description of the AC/DC Mode	
Table 3-8 Description of the Signal Source	
Table 3-9 List of the Selectable Combinations of the AC/DC Mode and the Signal Source	
Table 3-10 The Setting Range per Output Range	
Table 3-11 Main Measurement Functions	
Table 3-12 The Measuring Mode for the Measured Values of the Output Voltage and O	-
Current	
Table 4-1 Wattage Limiter Value per Phase (Reference value)	
Table 4-2 Parameters of Sequence Function	
Table 4-3 Example of Editing Sequence	
Table 4-4 Simulation Function Parameters	
Table 4-5 Simulation Function Steps and Settable Step Parameters	
Table 4-6 Voltage Dip Simulation Edit Example	
Table 4-7 Voltage Change Simulation Edit Example	
Table 4-8 Different Output Voltage Settings Depending on Clip Depth Setting Method	
Table 4-9 Content Saved in Sequence Memory	152
Table 4-10 Content Saved in Simulation Memory	
Table 4-11 Setting pattern of external control, remote sensing and AGC / Autocal	. 158
Table 4-12 Setting Range of DC Offset Adjustment Value	. 168
Table 4-13 CONTROL I/O Pin Assignment	
Table 4-14 Step Sync Code	178
Table 4-15 Memory Specification	178
Table 4-16 The Output Terminal Impedance in the Output Off State when the Activation o	of the
Output Relay is Disabled	. 186
Table 4-17 Setting Items to be Reset	. 194
Table 5-1 Component Name (Display Areas on the Screen)	198

Table 5-2 Status Icons	199
Table 5-3 Measured Value Display Items	200
Table 5-4 Output Setting Display Items	201
Table 5-5 Menus of the Continuous Function	202
Table 5-6 Menus of the Sequence Function	203
Table 5-7 Menus of the Simulation Function	204
Table 5-8 Menus of the Memory Function	204
Table 5-9 System Menus	205
Table 7-1 Fixing Bracket Model Names	218
Table 7-2 Replacement Air Filter Model Names	219
Table 7-3 Power Cable Model Names	220
Table 9-1 Description of the Error Message Screen	228
Table 9-2 Error Message List	231
Table 9-3 Actions When a Failure is Suspected	235

# 1. Outline

1.1	Overview ·····	2
1.2	Series Lineup ·····	2
1.3	Features ·····	3

# 1.1 Overview

Programmable AC power source DP060LM/DP120LM/DP180LM are multi-phase programmable AC power source which inherit the performance and the function of DP series and support reverse power flow\* for a short time. This product can be switch to single-phase mode, single-phase three-wire mode, and three-phase four-wire mode. It provides various interfaces such as the external control input/output, communication interface and remote controller, and the program function such as sequence and simulation to address a wide variety of usage.

\* It is to be noted that regeneration from the load is described as "reverse power flow" in this manual. Also, it is to be noted that DC regeneration is described as "sink current" and DC power running is described as "source current".

# 1.2 Series Lineup

This product operates single-phase model or polyphase model of the output capacity shown in Table 1-1 when setting output phase configuration. The model naming system is shown in Figure 1-1.

	Output phase configuration setting	DP060LM	DP120LM	DP180LM
	Cabinet type	Type2L	Type4L	Type5L
ver	1P2W* (Single-phase two-wire)	6 kVA	12 kVA	18 kVA
Rated Power	1P3W (Single-phase three-wire)	4 kVA	8 kVA	12 kVA
Rai	3P4W (Three-phase four-wire)	6 kVA	12 kVA	18 kVA

Table 1-1 Series Line-up

<sup>\*</sup> It is not compatible with polyphase system connection using DP series option system cable.

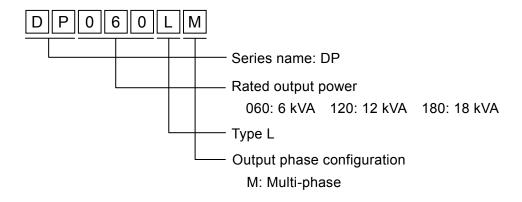


Figure 1-1 Model Naming System

# 1.3 Features

# ■ Switchable phase configuration

The output phase configuration (single-phase two-wire / single-phase three-wire / three-phase four-wire) can be switched in one cabinet.

# Various interfaces to address a variety of usage

The interface to use for the remote controlling from a computer or sequencer is equipped. USB and RS232 interface are standard, and either GPIB or LAN (LXI 1.4) interface can be chosen when ordering. You can use a contact/TTL signal to turn the output on/off or switch the memory without using a computer. The product also offers the status output for showing the device status and the output which is synchronized with Sequence or Simulation step. With these functions you can achieve various types of systemization and automatization. The AGC function and Autocal function for calibrating the output voltage drop are also provided.

#### Sequence function

User can program a sequence to change output voltage, frequency, waveforms and so on with this function, which provides automation of switching continuously a number of testing conditions.

## ■ Power fluctuation test (=Simulation) function

User can simulate power line abnormalities, such as blackout, voltage rise, voltage drop, abrupt phase change, abrupt frequency change, and so on.

# ■ Variable current limiter

This function can limit the effective value and the positive/negative peak value of the output current where the limiting value is variable. You can set the limiter so that the output is turned off when the limited condition continues for a certain time.

#### ■ Short reverse power flow

This product support reverse power flow for 20 ms. User does not need to consult with the power companies about power system interconnection because this product processes the reverse power internally and does not regenerate to the power system when the reverse power flow is occurring.

#### ■ Power input

For DP060LM and DP120LM, either single-phase input or three-phase three-wire input or three-phase four-wire input can be chosen when ordering. For DP180LM, either three-phase three-wire input or three-phase four-wire input can be chosen.

## ■ Feature-rich measurement function

On the panel the product displays the effective value, peak value, average DC value, current peak-hold value, and active/apparent power of the output voltage/current. Furthermore, the power factor, crest factor, reactive power, and harmonic current are also measured and displayed.

## ■ Control Software included by default

You can perform the following operations by using Control Software included in the attached CD-ROM:

- Operations same as those performed on the control panel
- Editing/transferring/exporting the arbitrary waveform data\*
- Data logging (importing the measured values)
- Editing/transferring/exporting\*/performing Sequence
- Editing/transferring/exporting\*/performing Simulation

# ■ USB memory support (supported format type: FAT32)

You can write/read the following data to/from a commercial USB memory stick:

- Basic setting
- Sequence
- Simulation
- Arbitrary waveform

## ■ Restriction of power usage during operation

The efficiency is improved by about 27 % compared to the linear amplifier method by adopting the switching amplifier method. When the power output is low, the internal loss can be lowered by reducing the number of power units being powered on.

# Selecting specification when ordering

Power Input

Single-phase input\* (1P2W) /three-phase three-wire input (3P3W)

/three-phase four-wire input (3P4W)

- \* Single-phase input can be selected for the model of which the output capacity is 12 kVA or less.
- Communication Interface

GPIB or LAN (LXI 1.4)

# ■ Options (partial)

● Remote Controller

A remote controller with the numeric keypad, jog, and shuttle.

Power Cable

Cables for the power input.

<sup>\*</sup>Exporting the data to USB memory allows the data to be set to DP060LM/DP120LM/DP180LM.

#### ■ Peripherals

Immunity Test Software, Voltage Dips Simulator, Reference Impedance Network are provided as peripherals of this product.

ES0406D, As-517A, As-537, ES4152, ES4153 which are peripherals of ES series cannot be used as those of this product.

• Immunity Test Software (DP0408)

It is application software that performs various low frequency immunity tests including IEC 61000-4-11.

• Voltage Dips Simulator (DP4170 Series)

By combining with this product, single-phase and three-phase voltage dips tests complying with IEC 61000-4-11 can be performed. In addition, "Large capacity model" is also available for IEC 61000-4-34 test.

In this document, it is written as DIP. When using this product in combination with DIP, consult NF Corporation.

Note: When performing the tests specified by the IEC standard, use both DIP and Immunity Test Software.

## • Reference Impedance Network (DP4160 Series)

It is a network of resistance and inductance to simulate the impedance of the commercial power system. By combining with this product, impedance specified by IEC 61000-3-3 can be realized. In addition, "Large capacity model" is also available for IEC 61000-3-11 test.

In this document, it is written as RIN. When using this product in combination with RIN, consult NF Corporation.

# 2. Preparation before Use

2.1	Check before Use ······
2.2	About Installation Environment·····
2.3	Cautions during Moving and Transportation12
2.4	Grounding and Power Connections · · · · · 13
2.5	Output Cable Connection 17
2.6	How to Tilt Control Panel · · · · · 2
2.7	Simple Operation Check · · · · · 23
28	Calibration · · · · · · · · · · · · · · · · · · ·

# 2.1 Check before Use

# ■ Check the safety.

To ensure equipment operator's safety, be sure to read the following sections of the instruction manual.

- Safety Precautions (Page ii)
- 2.4 Grounding and Power Connections

# ■ Check the appearance and contents.

If there is any problem, contact the seller (NF Corporation or our agent) from whom you purchased this product.

• Appearance check

Make sure that there is no damage or dent made during the transportation on the LCD screen, keys, jog, or shuttle of the control panel, or rear connectors.

• Contents (main unit and accessories) check

The contents are listed in Table 2-1. Make sure that all of the main unit and accessories are included.

ıabıe	2-1	LIST	OΤ	Content	

	Content	Quantity
Main unit	Main unit	1
	Instruction Manual	1
Accessories	CD-ROM Contents: Control Software for DP Series Type L, LabVIEW Driver, Instruction Manual (Remote Control), Control Software for DP Series Type L Instruction Manual	1
	Control cable (D-sub 25 pin connector) For device control	1
	Stabilizer * (DP120LM only)	1

<sup>\*</sup> Refer to Figure 2-1 Assembly Diagram of Stabilizer and assemble the stabilizer, because it is necessary to ensure stability of DP120LM.

# 2.2 About Installation Environment

To use safely and maintain the reliability, take the followings into consideration:

- Install the product where the exhaust heat will not damage surroundings.
  - This product performs forced air cooling using a fan. Keep the front and rear, on which the air inlet and outlet are located, away from the wall at least 50 cm to secure air circulation.
  - This product exhausts the heat from the air outlet on the rear. Do not place heat-sensitive objects around the outlet.
  - If you install the product in a closed narrow room, air conditioning equipment is required. The heat value of this product is shown in Table 2-2.

**Table 2-2 Heat Value** 

Model	Rated output	Heat value	
DP060LM	6 kVA	1.8 kW	1550 kcal/h
DP120LM	12 kVA	3.6 kW	3100 kcal/h
DP180LM	18 kVA	5.4 kW	4650 kcal/h


Note: Estimate at power input single-phase 200 V or three-phase three-wire 200 V or three-phase four-wire 380 V (phase voltage 220 V), rated output.

- Install the product on a sturdy place.
  - The floor needs to have enough strength to support the weight of this product. The mass of this product is shown in Table 2-3.

Table 2-3 Mass

Model	Mass
DP060LM	125 kg approx.
DP120LM	200 kg approx.
DP180LM	350 kg approx.

• Do not install this product on a sloped surface. The Adjuster Foot is only for temporary fixing, and cannot support the unit's own weight. You also must not lean on this product or use it as a support. How to use the Adjuster Foot is shown in Figure 2-1.

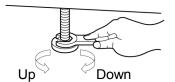

The Adjuster Foot can be moved up by rotating it counterclockwise and moved down by rotating it clockwise as viewed from above. Use an open-end wrench.

(DP060LM / DP120LM: 19mm width, DP180LM:30mm width)

Figure 2-1 How to Use the Adjuster Foot

• There are screw taps for anchor brackets on this product.

• Refer to Figure 2-1 Assembly Diagram of Stabilizer and assemble the stabilizer of accessories of DP120LM, because it is necessary to ensure stability.

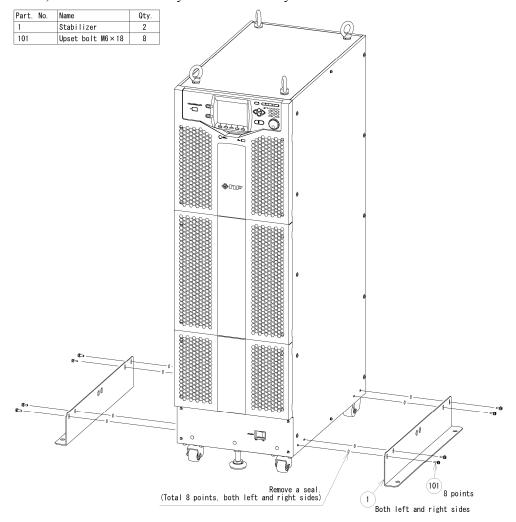


Figure 2-2 Assembly Diagram of Stabilizer

#### About arrangement

#### Stacking arrangement

- The center of gravity becomes high, which poses a risk of falling down. The product does not have a structure for supporting a heavy load.



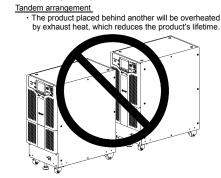


Figure 2-3 Prohibited arrangement method

- Do not place the product on its side, back or top.
- Do not stack the product on top of the other, or place it in front or back of the other (arrangement which makes the cabinet placed behind inhale the exhaust heat of the other).

#### Other installation location conditions

- Use the product indoors, at altitude up to 2000 m.
- Use the product where the temperature is 0 to +50 degrees Celsius, and the humidity is 5 to 85 %RH (the absolute humidity should be 1 to 25 g/m<sup>3</sup>, without condensation). However, on some specifications, the temperature range limit is more strict.
- Do not install the product in the following places:
  - · Place exposed to inflammable gas
    - →This may pose a risk of explosion. Never install and use the product in such a place.
  - · Outdoors, place exposed to direct sunlight, or place near fire or heat source
    - →This may reduce the performance, or cause failure.
  - · Place exposed to briny air
    - →This may cause salt damage.
  - · Place exposed to corrosive gas or water, or humid place
    - →This may cause corrode or failure.
  - · Place near electromagnetic field source, high-voltage equipment, or power line
    - →This may cause malfunction.
  - · Place of frequent vibration
    - →This may cause malfunction or failure.
  - · Dusty place
    - →This may cause failure. Especially do not install the product in a place with conductive dust.
- Electromagnetic emissions from this product may interfere with reception of radio and television broadcasts. Unless the user takes special measures to reduce electromagnetic emissions, using this product in a residential area must be avoided.

# 2.3 Cautions during Moving and Transportation

Follow the instructions below when moving or transporting this product.

Remove all wirings connected to this product.

# **⚠ WARNING**

- Power is still input after turning off the power switch. Be sure to switch off the breaker at the distribution board before removing the wiring. Otherwise, an electric shock might occur.
- Check before movement and transportation
  - Check the weight before moving the product (Table 2-3).

# Moving with casters

The casters attached to this product are intended for use to move the product on a horizontal surface. To move the product on a sloped or uneven surface, a licensed personnel should move it by operating a lifting machine or crane instead of the casters.

- As this product is heavy, whenever it is moved, at least two people are required to move it.
- Move the Adjuster Foot up enough from the floor by using an open-end wrench (DP060LM/DP120LM: 19 mm width, DP180LM: 30 mm width). You can move the Adjuster Foot up by turning it counterclockwise as viewed from above.

# **⚠ WARNING**

- Do not use the casters to move this product on a sloped surface. This product may move automatically due to its own weight, and cause death or severe injury of people around.
- Do not use the casters to move this product on an uneven or irregular surface. This product may fall down, and cause death or severe injury of people around.

# 2.4 Grounding and Power Connections

■ Ensure to ground.

This product uses a line filter. If this product is not grounded, an electric shock might occur.

# **⚠ WARNING**

- Ensure to connect the protective conductor terminal of the power input terminal of this product to an earth ground so that ground resistance is  $100 \Omega$  or less. If the product is not certainly grounded, an electric shock might occur.
- To prevent electric shock, ensure that the protective grounding conductor is connected before you connect a cable to the power input terminals L, L1, L2, L3, and N.
- For grounding, use the optional power cable or a power cable of sufficient ampacity for the maximum current consumption (see Table 2-5).
- Before connecting the product to power source, check the followings.

# **⚠ WARNING**

- The power supply for this product must be taken from the distribution board.
- Be sure to switch off the breaker at the distribution board before connecting this product to the distribution board. Otherwise, an electric shock might occur.
- Route the wire so that the distance between this product and the distribution board switch (breaker) is 3 m or less. If the distance with the distribution board exceeds 3 m, install another switch within 3 m from this product to connect. Use a switch complying with IEC 60947-1 and IEC 60947-3 which can disconnect all L, L1, L2, L3, and N phases. (Protective grounding must not be disconnected.) Mark the switch with a sign indicating that it is a disconnecting device of power input for this product.

These are from requirements in IEC 61010-1.

#### 

 Condensation may form inside the product when the ambient temperature or humidity changes suddenly, for example, after transportation in winter. In such case, leave the product in room temperature enough time to evaporate the condensation, and then connect the product to the power source.

### ■ Check the power source

For safety, use the product in the ranges of input voltage and frequency described below. Connect the product to a distribution board which provides the power sufficiently higher than the maximum power consumption of each model (see Table 2-5).

Voltage range: Single-phase input 170 V to 250 V

Three-phase three-wire input 170 V to 250 V

Three-phase four-wire input 323 V to 433 V (phase voltage 187 V to 250 V)

Frequency range: 50 Hz/60 Hz ±2 Hz

# ■ About power input terminal

**Table 2-4 Power Input Terminal** 

	Power input	DP060LM	DP120LM	DP180LM
	1P2W	M6	MO	_
Screw	3P3W		M8	M10
	3P4W		M6	M10

Note: The power input 1P2W is not selectable for DP180LM.

# ■ About power cable

Use a cable of sufficient ampacity for the maximum current consumption (see Table 2-5). A protective grounding cable should have ampacity higher than or equal to the power cable. For the optional power cable, see 7.4.

**Table 2-5 Maximum Power/Current Consumption** 

		Maximum	Maxi	imum current consu	mption
Model	Rated output	power consumption	Power input 1P2W 170 V	Power input 3P3W 170 V	Power input 3P4W 323 V (phase voltage 187 V)
DP060LM	6 kVA	9 kVA	53 A	31 A	17 A
DP120LM	12 kVA	18 kVA	106 A	62 A	33 A
DP180LM	18 kVA	27 kVA		92 A	49 A

Note: The power input 1P2W is not selectable for DP180LM.

## ■ Power source connection procedure

Check the current capacity of the distribution board before wiring. The wiring must be performed by a professional engineer.

# **⚠ WARNING**

- Be sure to switch off the breaker at the distribution board before connecting this product to the distribution board. Otherwise, an electric shock might occur.
  - 1. Remove the resin-molded cover of power input and output panel in case DP060LM / DP120LM or that of power input panel in case DP180LM.
  - 2. Connect the power cable to the power input terminal of this product. Be sure to tighten the screws firmly.
  - 3. Attach the resin-molded power input and output / input terminal cover so that the cables pass through the cutout.
  - 4. Ensure that the power switch of this product is turned off, and then connect the power cable to the distribution board.


# 


- Be sure to check phases L, L1, L2, L3 and N are correctly connected between this product and the distribution board.
- If this product whose power input is three-phase four-wire input (3P4W) is used without connecting N, it may be damaged. Be sure to connect all power cables.

# **⚠ WARNING**


- Do not use this product when the resin-molded terminal cover is removed. Otherwise, an electric shock might occur.
- Use enough thick cables to prevent touching live conductive parts after attaching the resin-molded terminal cover. If a thin cable is connected, fingers may enter the gap between the resin-molded terminal cover and the cable, resulting in electric shock, therefore attach some additional guards.

#### DP060LM/DP120LM

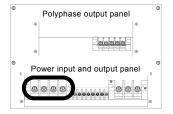


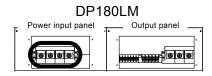


# Power input single-phase

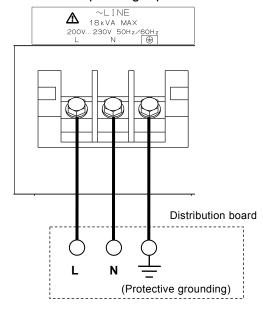

# Power input three-phase three-wire

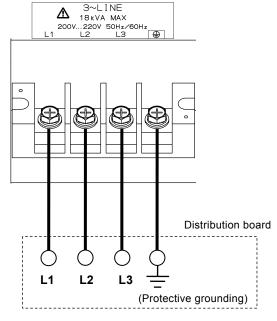

# Power input three-phase four-wire

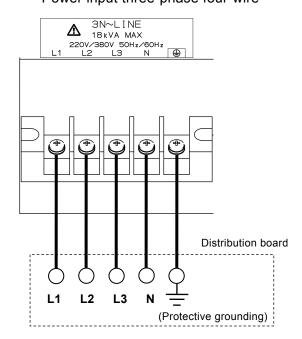

**Figure 2-4 Power Input Terminal** 

The figure shows the panel notation of the DP120LM.

# 2.5 Output Cable Connection


■ Before connecting, check the followings.

# **⚠ WARNING**

• Be sure to turn off the power switch of this product and switch off the breaker at the distribution board, before touching the output terminal. Otherwise, an electric shock might occur.

#### ■ About output terminal

The output terminal is divided into two terminals, polyphase output terminal and single-phase output terminal as shown in Figure 2-5. Single-phase output terminal is used in single-phase two-wire output (1P2W), Polyphase output terminal is used in single-phase three-wire output (1P3W) and three-phase four-wire (3P4W). Table 2-6 shows the screw sizes of the output terminals of each model.

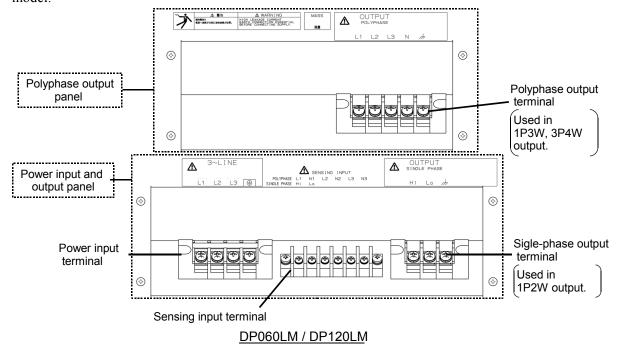

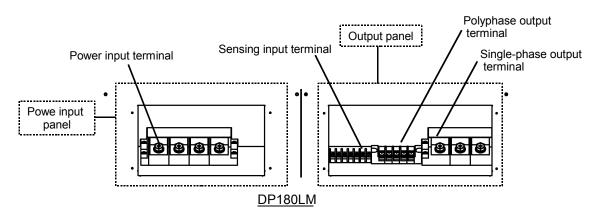


Figure 2-5 Terminal Block Layout

Power input terminal of this figure is for power input three-phase three-wire.

**Table 2-6 Screw Size of Output Terminal** 

	DP060LM	DP120LM	DP180LM
Single-phase output terminal	M6 screw	M8 upset bolt	M10 upset bolt
Polyphase output terminal	M6 screw	M6 screw	M6 screw

## ■ Connection procedure

The connection procedure of the single-phase output terminal follows the description in 2.5.1, and that of the polyphase output terminal follows 2.5.2.

# - A CAUTION -

- In the single-phase two-wire (1P2W) output, do not connect anything to the polyphase output terminal.
- In the single-phase three-wire (1P3W) output and the three-phase four-wire (3P4W) output, do not connect anything to the single-phase output terminal.
- In the single-phase three-wire (1P3W) output, do not connect anything to the L3 terminal.

# 2.5.1 Single-phase output

# ■ Connection procedure

- 1. Remove the resin-molded cover of power input and output panel in case DP060LM / DP120LM or that of output panel in case DP180LM.
  - Also remove the single-phase output terminal cover in case DP120LM.
- 2. Connect the single-phase output terminal to the load with a cable. Be sure to tighten the screws firmly. If you want to ground the output terminal at one point only, ground the Lo terminal. The Hi terminal should not be grounded. If the load has a ground terminal, connect it to the chassis terminal of the output terminal of this product.

# **⚠** CAUTION

- The output terminal that can be grounded is the Lo terminals. Do not ground the Hi terminal.
- 3. Attach the single-phase output terminal cover with the bent part of the cover facing back side in case DP120LM.
- 4. Attach the resin-molded cover of power input and output panel in DP060LM / DP120LM or that of output panel in DP180LM so that the cables pass through the cutout.

#### **⚠ WARNING**

- Do not use this product when the resin-molded terminal cover is removed. Otherwise, an electric shock might occur.
- Use enough thick cables to prevent touching live conductive parts after attaching the resin-molded terminal cover. If a thin cable is connected, fingers may enter the gap between the resin-molded terminal cover and the cable, resulting in electric shock, therefore attach some additional guards.
- When no load is connected, attach the resin-molded terminal cover so that the cutout of the cover faces upside.
- Do not remove the polyphase output terminal cover.
- Attach the polyphase output terminal cover so that the cutout of the cover faces upside.

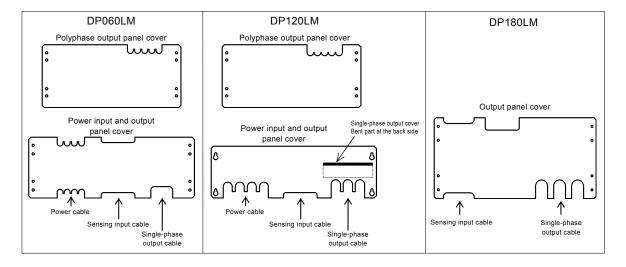


Figure 2-6 How to Attach Resin-molded Cover in Single-phase Output

#### 2.5.2 Polyphase output

#### ■ Connection procedure

- 1. Remove the resin-molded cover of polyphase output panel in case DP060LM / DP120LM or that of output panel in case DP180LM.
- 2. Connect the output terminal to the load with a cable. Connect voltage lines to the L1, L2, and L3 output terminals of this product. Connect a neutral line to the N terminal of output terminal of this product, if necessary. Be sure to tighten the screws firmly. The N terminal can be grounded. If the load has a ground terminal, connect it to the chassis terminal of the output terminal of this product.

#### - ⚠ CAUTION -

- The output terminal that can be grounded is the N terminal. Do not ground any of the L1, L2, and L3 terminals.
- Do not apply current exceeding the maximum current per phase (see 11.6 and 11.7) to any output terminal including N terminal.
- 3. Attach the resin-molded cover of polyphase output panel in case DP060LM / DP120LM or that of output panel in case DP180LM so that the cables pass through the cutout.

#### **⚠ WARNING**

- Do not use this product when the resin-molded terminal cover is removed. Otherwise, an electric shock might occur.
- Use enough thick cables to prevent touching live conductive parts after attaching the resin-molded terminal cover. If a thin cable is connected, fingers may enter the gap between the resin-molded terminal cover and the cable, resulting in electric shock, therefore attach some additional guards.
- When no load is connected, attach the resin-molded terminal cover so that the cutout of the cover faces upside.
- Attach the single-phase output terminal cover with the bent part of the cover facing front side without removing the cover in case DP120LM.

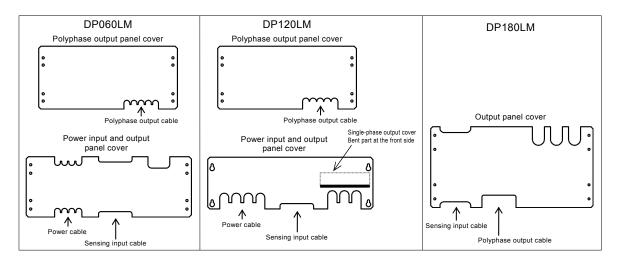



Figure 2-7 How to Attach Resin-molded Cover in Polyphase Output

#### 2.6 How to Tilt Control Panel

You can tilt up the control panel to operate it in DP060LM / DP120LM. There is a lever in the back under the control panel, which is locked with the hook of the chassis, being pulled by a spring. The hook consists of two steps, which can be used to tilt the control panel and fix it in two ways.


#### ■ Operation procedure

1. Pull the lever in the back under the control panel. The handle moves toward you and the lock of the control panel is released.

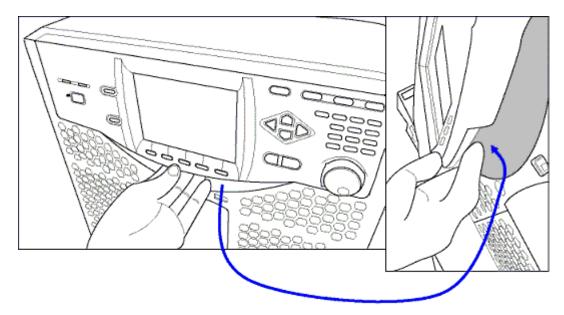

Pull the lever in the back

2. While holding the lever in pulled position, tilt the control panel by desired degree.

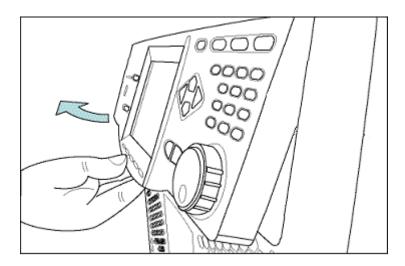

3. Release the lever slowly. The control panel will be locked.

# **⚠ WARNING**


• When closing the control panel, pull the lever and press down on the panel slowly in order to avoid pinching your fingers.

# 2.7 Simple Operation Check


This section describes how to perform a simple operation check when you purchased a new product, or after storing the product for a long period. This check should be performed without load. If you are not satisfied with the results verified at the operation check, please request the repair to us or our agent.

#### ■ Operation procedure

- 1. Connect the product to the mains referring to "2.4 Grounding and Power Connections".
- 2. Attach the resin-molded output terminal cover and the output cable holder without connecting anything to the output terminals or any other terminal/connector.
- 3. Switch on the breaker of the distribution board, and then turn on the power switch of this product. Check that all LEDs on the control panel illuminate for several seconds, and then turn off, and that our logo mark appears on the LCD screen (see 3.2.3). If LAN interface is equipped, "LXI" is displayed below the logo mark.

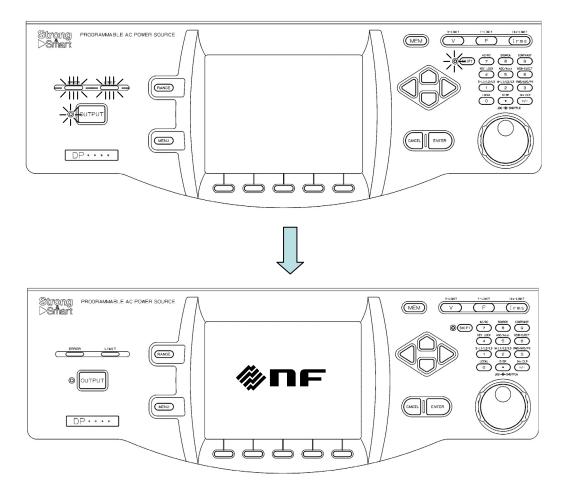


- 4. Set the output phase configuration to the one that checks operation. Refer to 3.4.1 about setting output phase configuration.
- 5. Except when you purchased a new product, refer to 4.27 Restoring to the Factory Default Setting (Reset) to initialize the product to factory defaults. The product will be reset, and display the Continuous screen automatically.
- 6. When you purchased a new product, the product will start and then display the Continuous screen automatically.
- 7. Check that the measured values of 100 V range, AC-INT, V, and I are displayed in rms, and that the AC voltage (ACV) is set to 0 V.

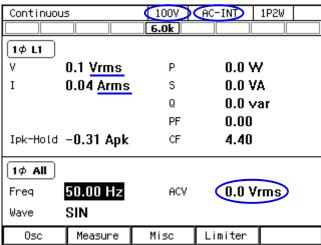


24


8. As shown in the figure below, check that the icon 3 All is displayed for the three-phase output, and check that the icon 2 All is displayed for the single-phase three-wire output. Press the [Osc] soft-key and select [6: Phs Mode] to display the [Phase Mode] window, and check that the mode is set to [Balance] (balanced mode).


#### Three-phase output

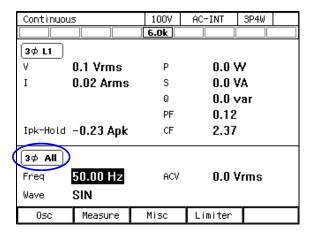

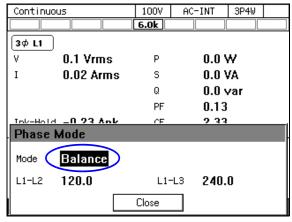


#### Single-phase three-wire output

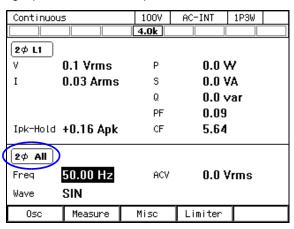

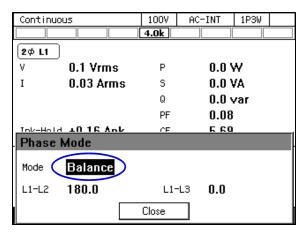

9. Press the OUTPUT key to turn the output on. Press the V key to open the numerical entry box for AC voltage (ACV). Raise the AC voltage setting value gradually by using the jog, shuttle, arrow keys, and numeric keypad.

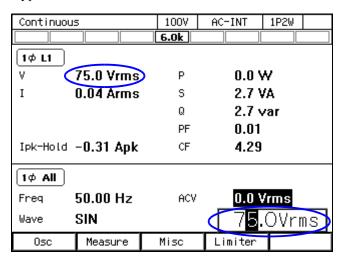

#### 2.8 Calibration


When the product needs calibration, contact us or our agent.

# 3. Basic Operation

3.1	Component Name · · · · · 28
3.2	Power On/Off ····· 32
3.3	Basic Key Operations35
3.4	Using the Continuous Function · · · · · 41

# 3.1 Component Name

# 3.1.1 Front

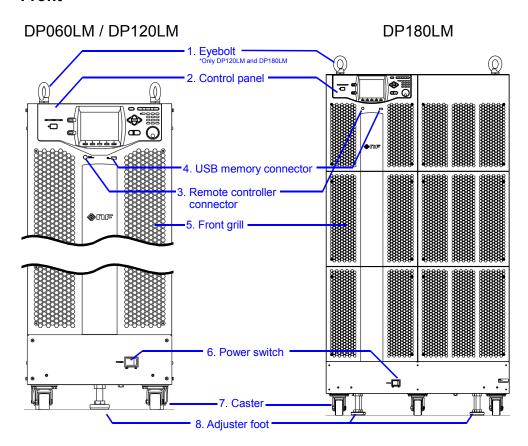

**Figure 3-1 Component Name (Front)** 

**Table 3-1 Component Name (Front)** 

No.	Name	Description	Refer to		
1	Eyebolt	Used to suspend and move the product with a crane.  (Only DP120LM and DP180LM)	_		
2	Control panel  Configures the settings and turns the output on or off. Information such as setting values and measured values is displayed on the LCD screen.				
3	Remote controller connector	Optional remote controller can be connected.	7.1		
4	USB memory connector	USB memory can be connected.	4.9		
5	Front grill	The fresh air inlet. An air filter is attached.	10.2		
6	Power switch	Turns the power on/off.	3.2		
7	Caster	In DP060LM / DP120LM, caster with the freely movable front-wheels and fixed rear-wheels. In DP180LM, caster with all the freely movable.  Can be used to move this product in the horizontal location.	2.3		
8	Adjuster Foot	Can be used to fix this product temporarily in the horizontal location.	2.2		

#### 3.1.2 Rear

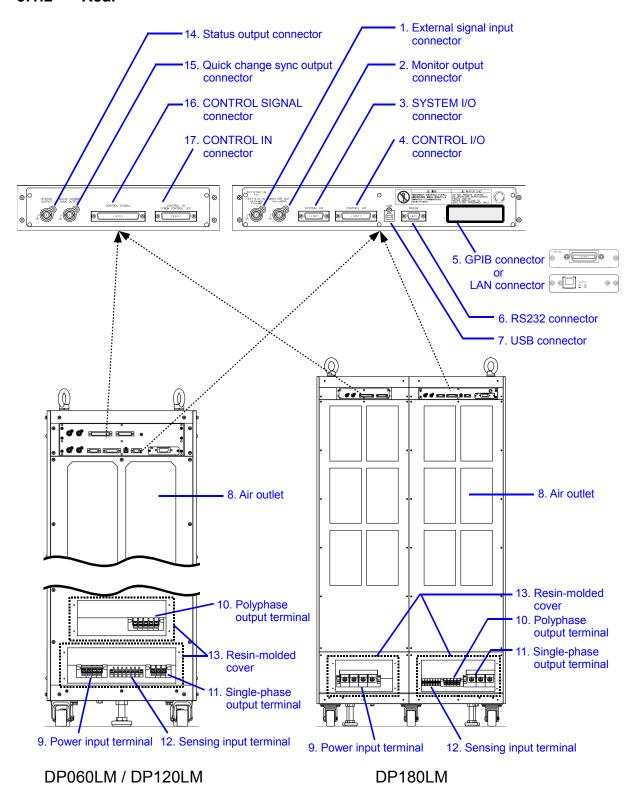


Figure 3-2 Component Name (Rear)

**Table 3-2 Component Name (Rear)** 

No.	Name	Description	Refer to			
1	External signal input connector	Used when controlling the voltage value setting by the external signal (VCA), when synchronizing the output frequency with the external signal (SYNC), and when outputting the amplified external signal (EXT, ADD).	4.17, 4.19, 4.20			
2	Monitor output connector	Can observe waveforms of the output voltage and output current when connected to a unit such as oscilloscopes.	4.10			
3	SYSTEM I/O connector	Not used.	-			
4	CONTROL I/O connector	Used to control this product externally by logic signal and non voltage contact. Also it can obtain the state of this product with a logic signal.  It is connected CONTROL IN connector (No.17) with the attached control cable (25 pin) when using DIP or RIN.	4.18, 8.1.2, 8.1.3			
5	GPIB connector or LAN connector	GPIB or LAN communication interface. Either one can be chosen when ordering.	6.1.3, 6.1.4			
6	RS232 connector	RS232 communication interface.	6.1.2			
7	USB connector	USB communication interface.	6.1.1			
8	Air outlet	Air outlet for exhausting the heat.	2.2			
9	Power input terminal	Power input terminal. Power input is 1P2W or 3P3W or 3P4W, either of which can be chosen when ordering. (The power input 1P2W is not selectable for DP180LM.) Figure 3-2 shows the case of power input 3P3W.	2.4			
10	Polyphase output terminal					
11	Single-phase output terminal	Output terminal for the single-phase two-wire.	2.5			
12	Sensing input terminal	Connect to the load end that is located in the distance from the main unit to detect its voltage. Common among the single-phase two-wire, single-phase three-wire, and three-phase four-wire output.	4.11			
13	Resin-molded cover	Covers the power input terminal, the sensing input terminal, the single-phase output terminal and the polyphase output terminal. When no load is connected, attach the cover so that the cutout of the cover comes on the upside.	2.4, 2.5			
14	Status output connector	Output sync signal in quick change operation and fluctuation test. It is used as trigger signal to record waveform.	4.18.1, 4.18.2			
15	Quick change sync output connector	Output sync signal in quick change operation. It is connected to quick change sync input connector on DIP.	4.18.1, 4.18.2, 8.1.2			
16	CONTROL SIGNAL connector	It is connected to CONTROL SIGNAL connector on DIP or RIN.	4.18.2, 8.1.2, 8.1.3 4.18.2,			
17	CONTROL IN connector  It is connected CONTROL I/O connector (No.4) with the attached control cable (25 pin) when using DIP or RIN.					

----- Notes -----

• Connectors No.14 to 16 can be used only when connecting between No.4 and No. 17 connector with the attached control cable.

-----

# 3.1.3 Control panel

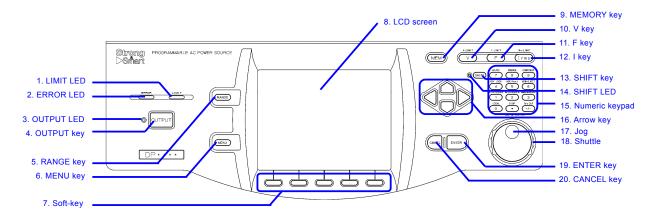


Figure 3-3 Component Name (Control Panel)

No.	Name	Description	Refer to
1	LIMIT LED	Illuminates when the peak current limiter,	4.1
		RMS current limiter, or active wattage	
		limiter activates.	
2	ERROR LED	Illuminates when an error is detected.	9.1
3	OUTPUT LED	Illuminates in the output on state.	3.4.9
4	OUTPUT key	Turns the output on or off.	3.4.9
5	RANGE key	Switches between the 100 V and 200 V	3.4.3
	-	ranges.	
6	MENU key	Displays the root menu.	3.3.1
7	Soft-key	Assigned with the functions displayed at the	5.1
		bottom of the LCD screen.	
8	LCD screen	Displays the measured values or menu.	5.1
9	MEMORY key	Displays the Memory View.	4.8
10	V key	Opens the numerical entry box for the	3.4.5,
		output voltage setting.	3.4.6
11	F key	Opens the numerical entry box for the	3.4.7
		frequency setting.	

Table 3-3 Component Name (Control Panel) (continued)

No.	Name	Description	Refer to
12	I key	Opens the RMS current limiter set window.	4.1.2
13	SHIFT key	Turns on or off the shift state, which	3.3.7
		enables Shortcut operations.	
14	SHIFT LED	Illuminates when the shift state is turned on.	3.3.7
15	Numeric keypad	Used to enter a value directly.	3.3.5
16	Arrow key	Used to move across the items or	3.3
		incrementing/decrementing the value by	
		one step.	
17	Jog	Used to move across the items or	3.3
		incrementing/decrementing the value by	
		one step.	
18	Shuttle	Used to move across the items in the	3.3
		selection box or incrementing/decrementing	
		the value. The greater the turning angle is,	
		the faster you move or	
		increment/decrement.	
19	ENTER key	Confirms the selection.	3.3
20	CANCEL key	Returns to the previous state without	3.3
	_	confirming the selection. The numerical	
		entry box is closed when the value was	
		incremented or decremented using the jog,	
		shuttle, or arrow key.	


#### 3.2 Power On/Off

# 3.2.1 Before Turning on the Power

This product can output AC 320 V/DC 454 V at a maximum for a single-phase output, it can also output AC 640 V at a maximum between the wires for a single-phase three-wire output. The wrong operations may cause the electric shock or result in malfunction of your load. Please check the following before starting operations.

- When you use this product for the first time, we recommend you to perform the test operation without any connection to the output (without loads) with the instruction manual at your side.
- Double-check the connection to the power supply. Ensure that the cable is appropriate for the current consumption and firmly connected.
- Double-check the connection to the output. Ensure that the cable is appropriate for the output current and firmly connected.

#### 3.2.2 Power On

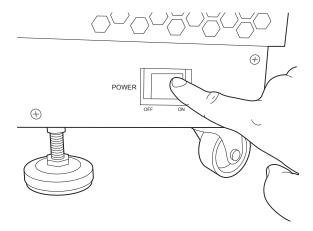


Press "On" side of the power switch.

#### 3.2.3 Screen Display and Operations at Starting Up

When you power on the cabinet, all LEDs in the control panel illuminate. The LEDs are lighted off after a while and the following contents are displayed in the order below.

- 1. The "NF" logo mark is displayed for a few seconds or more than 10 seconds. The length for which this logo is displayed depends on your model and system.
- 2. The self check is performed and the result is displayed. If any problem is detected the startup process halts in the self check screen shown in the figure below. Check the self check result and press the ENTER key to resume the startup process.

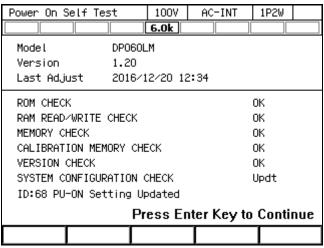

- 3. Depending on the output function selection setting at power-on, the Continuous function screen, Sequence function screen, or Simulation function screen is displayed. For detailed information about the output function selection at power-on setting, see 4.2.10 and 4.3.10.
- 4. If the output function selection is set to the Continuous function and the output-on at power-on setting is on, the output is turned on after the confirmation message to inform that the output is automatically turned on is displayed for about 10 seconds. If you press the ENTER key while this message is displayed, you can cancel the setting of automatic output-on. For detailed information about the output-on at power-on setting, see 4.22.

#### 3.2.4 The Settings Loaded after Startup

For the Continuous function, the output settings are invoked from the Basic Setting Memory No.1 and other settings are loaded from the System Setting Memory. For details, see 4.8 and 11.25. For the Sequence function and the Simulation function, the factory default settings are loaded for the content of each step.

#### 3.2.5 Checking the output phase configuration

On the screen after startup, the output phase configuration icon is displayed in the position shown in the screen below. This case is single-phase output. See 3.4.1 about the setting output phase configuration.



#### 3.2.6 Checking the Rated Power

On the screen after startup, the rated power icon is displayed in the position shown in the the screen below. The value in the icon indicates the maximum electric power that can be output. In this case, the maximum electric power is 6.0 kVA.

If the rated power is restricted by the power unit energization setting, the icon is highlighted as shown in Table 3-4. For detailed information about the power unit energization setting, see 4.23.



Table 3-4 How the Rated Power Icon is Displayed Depending on the Power Unit Energization Setting

Normal icon	All power unit energization settings are enabled. The rated power is set to the
Example : <b>6.0k</b>	maximum value that the model system and the power supply voltage can provide.
Highlighted icon	Because some power unit energization settings are disabled, the rated power is
Example: 4.0k	restricted.

...... Notes .....

• For a polyphase output, the rated power is displayed for each phase.

#### 3.2.7 Power Off

Disable the output and ensure the OUTPUT LED is off before pressing "Off" side of the power switch. All screens disappear and all LEDs turn off, then the power input and the output are blocked inside the system.


# 3.3 Basic Key Operations

# 3.3.1 Changing the Output Function (Continuous/Sequence/Simulation)

To change the Continuous/Sequence/Simulation function, press the MENU key. This operation displays the root menu shown in the screen below.

Five icons are available in the root menu. The cursor location is informed by the highlighted icon. The description of the icon at the cursor location is displayed in the box located at the bottom of the screen.

Move the cursor to the function you want to select by using arrow keys or the jog. Each icon in upper line represents the Continuous function, Sequence function, and Simulation function from the left. When you press the ENTER key, the screen for the selected function is displayed. You cannot change the function in the output on state. However, you can move to the Memory function screen or System function screen.

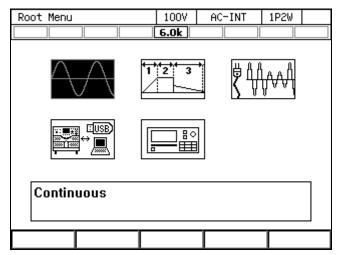

#### 3.3.2 Item Selection


You can move the cursor (highlighted icon) by using arrow keys or the jog. However, some items cannot be selected depending on your system. These items are skipped when moving the cursor. If you press the ENTER key, the item under the cursor is selected and run. If the item is a menu, the menu screen, window, or selection box is displayed. If you press the CANCEL key, the menu in the upper hierarchy is displayed without selection or execution of that item.

#### ■ Selection box

If the menu has numbers before its menu items as shown in the screen below (selection box), pressing the corresponding number on the numeric keypad also selects and runs the item. You can also move the cursor by using the shuttle.


If you select an item with  $\blacktriangleright$  on the right, the selection box in the lower hierarchy menu is displayed. In addition to the ENTER key, you can also use  $\rightarrow$  arrow key to open the selection box of that menu.

You cannot select grayed items in a selection box, which are different depending on setting.

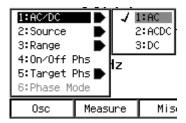


#### ■ Data list box

When selecting data in the memory, the data list box shown in the screen below is displayed. To select a data in a data list box, hover the cursor over the box by using the arrow keys or jog and press the ENTER key. This operation enables the cursor to move over each data in the data list box. Hover the cursor over the item you want to select by pressing the up or down arrow key or turning the jog or shuttle and press the ENTER key.

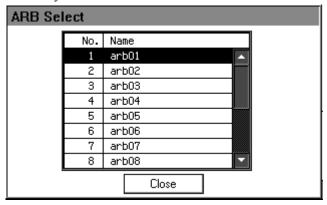

#### 3.3.3 Using Soft-keys

When the soft-key function is displayed at the bottom of the LCD screen as shown in the screen on the next page, pressing a soft-key performs the function assigned to that key.

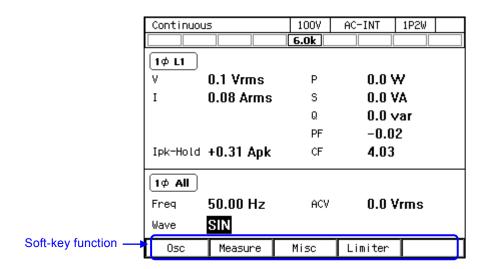


#### 3.3.4 Closing Windows

■ The window with the [Close] button

Following three methods are available to close the window with the [Close] button shown in the figure below.


- Move the cursor to the [Close] button in the window by using the arrow keys or the jog and press the ENTER key.
- Press the CANCEL key.
- Press the soft-key under the [Close] button (third button from the left).

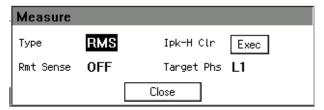

#### ■ Window with the [OK]/[Cancel] button

Following three methods are available to close the window with the [OK] button or [Cancel] button shown in the figure below.

- Move the cursor to the [OK] button or [Cancel] button in the window by using the arrow keys or the jog and press the ENTER key.
- Press the CANCEL key. To do so, perform the same operation as you did to select the [Cancel] button
- Pressing the soft-key under the [OK] button (fourth button from the left) means same as selecting the [OK] button. Similarly, pressing the soft-key under the [Cancel] button (second button from the left) means same as selecting the [Cancel] button.

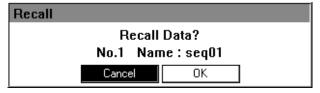

#### 3.3.5 Entering Values (Numerical Entry Box)

#### ■ Entering values with arrow keys/jog or shuttle

For an item to set value, hover the cursor over the value (which will be highlighted) and press the ENTER key to open a numerical entry box shown in the screen below in which you can enter a value. Move to the desired digit by using the right or left arrow key and increment/decrement the value by using the up or down arrow key/the jog or shuttle. During the edit, the value is confirmed every time it is incremented or decremented. The value for the voltage or frequency output is applied even during the edit. If you press the ENTER key or the CANCEL key, the numerical entry box is closed.



#### ■ Enter values directly by using the numeric keypad


For an item required to set values, hover the cursor over a value (which will be highlighted) and enter a new value by using the numeric keypad. A numerical entry box opens as you start entering a value, and the entered value is displayed. Press the ENTER key to confirm the value. The previous values for the voltage or frequency output are held until you press the ENTER key. If you press the CANCEL key, the settings are not changed.

------ Notes -----

- If you already know the value to set, the direct entry using the numeric keypad will be convenient.
- If you want to increment/decrement the value by one step at one time, use the up and down arrow key.
- If you want to increment/decrement the value by a large amount step by step, use the jog.
- If you want to increment/decrement the value by a large amount quickly, use the shuttle.

### 3.3.6 Entering Strings (Character String Entry Box)

Enter the name of the data when saving it to the internal memory or USB memory. In this case, hover the cursor over the string (which will be highlighted) and press the ENTER key. This operation opens a character string entry box shown in the screen below.

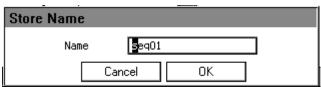

When you turn the jog or press the up or down arrow key in a character string entry box, the character at the cursor (highlighted character) is changed in a way shown in Table 3-5. When you press a key in the numeric keypad, the corresponding value or symbol is entered. To move the cursor position, use the right or left arrow key. When you press the ENTER key, the edited string is confirmed and the character string entry box is closed.

#### **Table 3-5 Character String Entry List**

← Turning the jog in the counterclockwise direction	Turning the jog in the clockwise direction
Pressing the down arrow key	Pressing the up arrow key $\rightarrow$
ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnop	oqrstuvwxyz
	0123456789!#\$%&'()+,;=@[]^_`{}~□
	(Note) $\square$ indicates a space.

------ Notes -----

• The name of the data which will be saved in the internal memory or USB memory must be 20 characters long at a maximum.

#### 3.3.7 Using Shortcut Operations (SHIFT Key)

When you press the SHIFT key, the SHIFT LED illuminates. In this state (shift state), pressing one of the V, F, I, and any keys in the numeric keypad enables shown in Table 3-6. In this instruction manual, pressing a key in the shift state is denoted by "(SHIFT) + X."

If you press the SHIFT key once more in the shift state, the SHIFT LED is lighted off and the shift state exits.

------ Notes -----

- The shift state is kept until you press the SHIFT key next time. Therefore, continuous Shortcut operations can be performed.
- You do not have to hold down the SHIFT key while you press another key.

\_\_\_\_\_\_

**Table 3-6 Shortcut Operations** 

Shortcut	Item	Description	Refer to
SHIFT + V	V-LIMIT	Opens the setting window for the voltage setting range limit.	4.1.3
SHIFT+F	F-LIMIT	Opens the setting window for the frequency setting range limit.	4.1.4
SHIFT + Irms	Ipk-LIMIT	Opens the peak current limiter set window.	4.1.1
SHIFT)+(1)	S-L1/L2/L3 <sup>†</sup>	Switches the target phase to be configured in the following order: L1, L2, L3 (unbalanced mode), All Phase, and All Line (balanced mode).	3.4.6, 4.15
SHIFT)+2	M-L1/L2/L3 <sup>†</sup>	Switches the target phase of which the measured value is displayed in the following order: L1, L2, L3, L1-L2, L2-L3, L3-L1.	3.4.14
SHIFT + 3	RMS/AVG/PK <sup>†</sup>	Switches the display format of the measured value in the following order: RMS, AVG, PK.	3.4.11
SHIFT + 4	KEY LOCK	Enables/Disables the key lock.	4.24
SHIFT + 5	AGC/Acal	Opens the AGC/Autocal set window.	4.12, 4.13
SHIFT + 6	USB-EJECT	Performs the eject operation for removing a USB memory.	4.9
SHIFT + 7	AC/DC	Switches the AC/DC mode in the following order: AC, ACDC, DC.	3.4.2
SHIFT + 8	SOURCE	Switches the signal source in the following order: INT, VCA, SYNC, EXT, ADD.	3.4.2
SHIFT + 9	CONTRAST	Changes to the state in which the contrast is selected in the LCD set window.	4.26
SHIFT)+O	LOCAL	Exits the Remote state between the device connected to the communication interface and enters the Local state in which the panel operations are accepted.	6.2
SHIFT+•	DISP	Switches the measured value display mode between normal and simple.	3.4.12
SHIFT + (+/-)	Ipk CLR	Clears the current peak-hold value.	3.4.13

Note: If you change the item presented with † symbol using a Shortcut operations, the setting is not saved in the System Setting Memory (see 11.25).

# 3.4 Using the Continuous Function


### 3.4.1 Setting output phase configuration

You can switch output phase configuration.

When switching output phase configuration, the internal memory No.1 settings are loaded at the output phase configuration after switching. (See 4.8.1)

#### Operation procedures


1. Press the MENU key to move to the root menu in the Continuous function, and then select [System]. The system setting window opens.

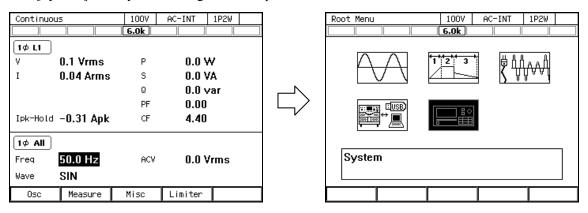



#### ---- Notes

- Move to the root menu in the Continuous function. The output phase configuration cannot be changed in the Sequence or Simulation function.
- Turn off the output before moving to the root menu. You cannot move to the root menu in the output on state.

2. Press the [OutPhsMd] soft-key, and open the setting window of output phase configuration.

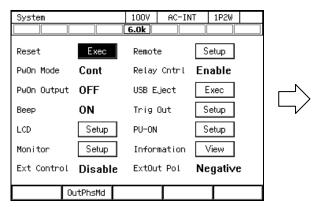


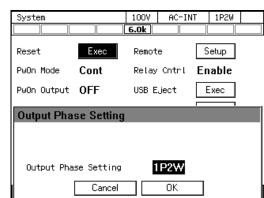

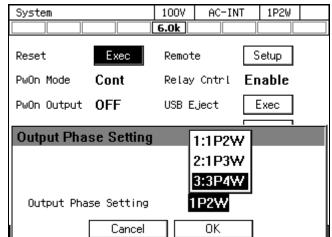

3. Move the cursor to the desired output phase configuration and press the ENTER key.

4. After the screen below is displayed, turn off the power and change the wiring (output cable and sensing cable).

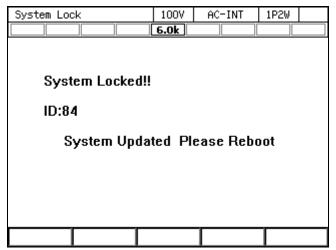

5. Cycle the power of the product.

#### - ⚠ CAUTION -

- In the single-phase two-wire (1P2W) output, do not connect anything to the polyphase output terminal.
- In the single-phase three-wire (1P3W) output and the three-phase four-wire (3P4W) output, do not connect anything to the single-phase output terminal.
- In the single-phase three-wire (1P3W) output, do not connect anything to the L3 terminal.

## **⚠ WARNING**

• Be sure to turn off the power switch of this product and switch off the breaker at the distribution board, before touching the output terminal. Otherwise, an electric shock might occur.

#### 3.4.2 Setting the AC/DC Mode and the Signal Source

The description of the AC/DC mode is shown in Table 3-7. The description of the signal source is shown in Table 3-8. The selectable combinations of the AC/DC mode and the signal source are shown in Table 3-9.

- If the load is a transformer whose core saturates even with small amount of DC component, select the AC mode.
- If you output AC less than 40 Hz, select the ACDC mode. You cannot set the frequency to less than 40 Hz in the AC mode.
- In the AC mode, if the output is a waveform that has a long cycle or is dissymmetric in terms of positive and negative (e.g. when the phase is changed rapidly or the different values are set for the positive and negative in the peak current limiter), the waveform may be transformed by the DC component removing function of the AC mode. If you want to make the output waveform similar to the signal source, select the ACDC mode.

Table 3-7 Description of the AC/DC Mode

AC/DC mode	Description			
AC	Only the AC voltage can be set. The AC coupling is used between the signal			
	source and the amplification section and the DC component is removed.			
ACDC	The AC voltage and the DC voltage can be set respectively. The DC coupling			
	is used between the signal source and the amplification section and both of			
	the AC component and the DC component are output.			
DC	Only the DC voltage can be set; the AC voltage is fixed to zero. The DC			
	coupling is used between the signal source and the amplification section.			

**Table 3-8 Description of the Signal Source** 

Signal source	Description
INT	The signal source is internal. Set the output voltage, output waveform, frequency, output on phase, and output off phase through the control panel or the remote control.
VCA	The signal source is internal. The output voltage can be controlled with the external DC input signal. The output voltage setting cannot be set through the control panel or the remote control. All conditions except for output voltage setting is same as INT.
SYNC	The signal source is internal. The frequency of the internal signal source is synchronized with the external input signal or the power line. The frequency setting cannot be set through the control panel or the remote control. All conditions except for output frequency setting is same as INT.
EXT	The signal source is external. Outputs the amplified external input signal. Set the voltage gain through the control panel or the remote control.
ADD	The signal source is the total of the external and the internal signal source. Set the voltage gain for the external input signal, output voltage for the internal signal source, output waveform, frequency, output on phase, and output off phase through the control panel or the remote control.


Table 3-9 List of the Selectable Combinations of the AC/DC Mode and the Signal Source

Output	AC/DC	Signal source				
phase configuration	mode	INT	VCA	SYNC	EXT	ADD
1P2W	AC	AC-INT	AC-VCA	AC-SYNC	AC-EXT	AC-ADD
	ACDC	ACDC-INT	-	ACDC-SYNC	ACDC-EXT	ACDC-ADD
	DC	DC-INT	DC-VCA	-	ı	-
1P3W	AC	AC-INT	AC-VCA	AC-SYNC	ī	-
	ACDC *1	ACDC-INT	-	ACDC-SYNC	ı	-
	DC	-	-	-	ī	-
3P4W	AC	AC-INT	AC-VCA	AC-SYNC	-	-
	ACDC *1	ACDC-INT	-	ACDC-SYNC	-	-
	DC	-	-	=	-	-


<sup>\*1:</sup> The DC voltage cannot be set in 1P3W or 3P4W of the ACDC mode.


#### ■ Operation procedures using soft-keys

1. Press the [Osc] soft-key and select [1:AC/DC].

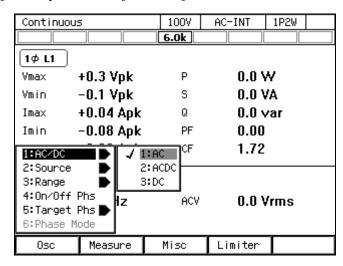


2. In the displayed selection box, select the desired AC/DC mode.

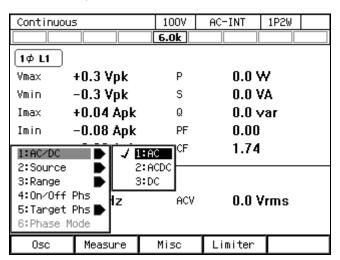

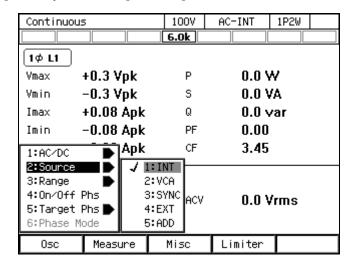

3. Press the [Osc] soft-key and select [2:Source].


4. In the displayed selection box, select the desired signal source.

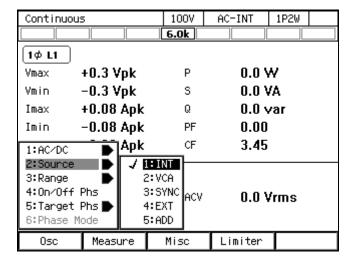

#### Operation procedures by using shortcuts


1. SHIFT + 7 Switching the AC/DC mode

Press the SHIFT key to enter the shift state (the SHIFT LED illuminates). When you press the 7 key of the numeric keypad during the shift state, the AC/DC mode is switched in the following order: AC, ACDC, DC, AC. Some modes may be skipped and cannot be selected depending on the signal source.

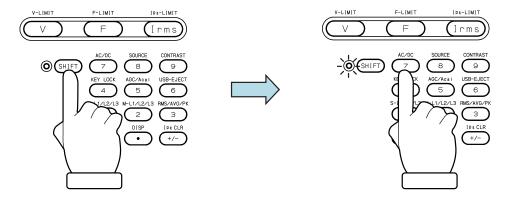

## 2. SHIFT + 8 Switching the signal source

Press the SHIFT key to enter the shift state (the SHIFT LED illuminates). When you press the 8 key of the numeric keypad during the shift state, the signal source is switched in the following order: INT, VCA, SYNC, EXT, ADD, INT. Some signal sources may be skipped and cannot be selected depending on the AC/DC mode.

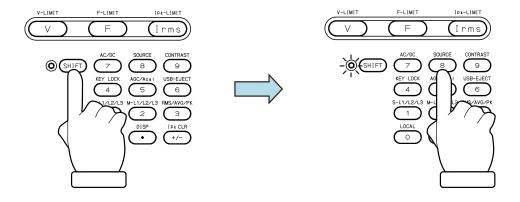

## 3.4.3 Setting the Output Range

You can select the 100 V range or 200 V range. Table 3-10 shows the setting range for each range.

------ Notes -----


• You cannot switch the output range in the output on state.

Table 3-10 The Setting Range per Output Range


Setting Item				Setting Range			
				100 V range	200 V range	Unit	
DC voltage				-227.0 to +227.0	-454.0 to +454.0	V	
	Phase Voltage		SIN, CLP	0.0 to 160.0	0.0 to 320.0	Vrms	
			ARB	0.0 to 454.0	0.0 to 908.0	Vp-p	
AC voltage	Line voltage	1P3W	SIN	0.0 to 320.0	0.0 to 640.0	Vrms	
>		3P4W	SIN	0.0 to 277.2	0.0 to 554.2	Vrms	
External Input Gain			ain	0.0 to 227.0	0.0 to 454.0	Times	
Peak current limiter (positive)			positive)				
Peak current limiter (negative)				Refer to 11.14			
RMS current limiter							
Voltage Setting Limit				Refer to 11.15			

#### Operation procedures using soft-keys

1. Press the [Osc] soft-key and select [3:Range].

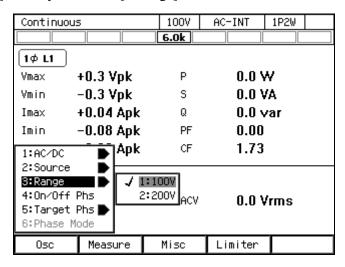

2. In the displayed selection box, select the desired output range.

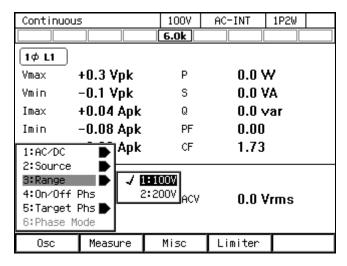

■ Operation procedures using the RANGE key

The range is toggled between 100 V range and 200 V range every time you press the RANGE key.

#### 3.4.4 Setting Waveforms

You can select a waveform of the internal signal source from sine wave (SIN), clipped sine wave (CLP, three types available), and arbitrary waveform (ARB, 16 types available). See 4.6 for details on the clipped sine wave, and 4.7 on the arbitrary waveform.

---- Notes -----

• The AC voltage setting (ACV) is common between SIN and CLP, but ARB is independent of these. When you switch the waveform selection among SIN, CLP, and ARB, the AC voltage setting is also switched. The DC output voltage setting (DCV) is same regardless of the waveform setting.

• The waveform can be changed in the output on state, but the AC output voltage setting (ACV) is also switched as described above if you switch the waveform selection between SIN, CLP, and ARB. Set ACVs for SIN, CLP, and ARB in the output off state before you change the waveform in the output on state.


\_\_\_\_\_\_

#### ■ Operation procedure

1. Select the [Wave] item.


Continuou	5	1007	AC-INT	1P2W	
		6.0k			
1φ L1					
Vmax	+0.3 Vpk	Р	0.0 Y	٧	
Vmin	-0.1 Vpk	S	0.0 V	Ά	
Imax	+0.31 Apk	Q	0.0 v	ar	
Imin	-0.31 Apk	PF	-0.0	1	
Ipk-Hold	+0.31 Apk	CF	4.08		
1φ All					
Freq	50.00 Hz	ACV	0.0 V	rms	
Wave	SIN				
0sc	Measure	Misc	Limiter		

2. In the displayed selection box, select the desired waveform (SIN, CLP, ARB).

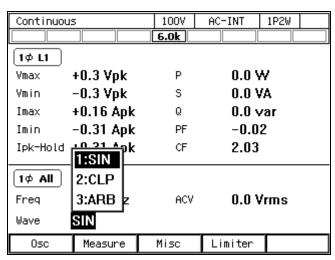

3. If you select CLP or ARB, the [Select] icon (Select) is displayed next to it. When you move the cursor over the [Select] icon, the clip ratio or crest factor is displayed for the clipped sine wave, or the arbitrary waveform data name for the arbitrary waveform. When you press the ENTER

key, the setting window opens for the clipped sine wave or the selection window opens for the arbitrary waveform. In this window, set or select items as needed.

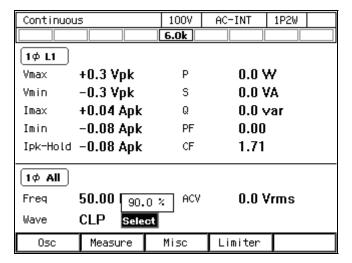

#### 3.4.5 Setting the Output Voltage (Single-phase Output)


Set the AC component and DC component separately for the output voltage of the internal signal source. For the AC component, set the output voltage in the ACV item. For the DC component, set it in the DCV item.

----- Notes

- The output voltage setting is common between SIN and CLP, but ARB is independent of these. When you switch the waveform setting among SIN, CLP, and ARB, the output voltage setting is also switched.
- In the ACDC mode, the voltage setting range limit is applied to the additional values of the AC voltage setting (recalculated to a peak value) and the DC voltage setting. For details, see 4.1.3.

■ Operation procedures for setting the AC voltage

1. Select the [ACV] item and then enter a numeric value. For how to enter values, see 3.3.5.

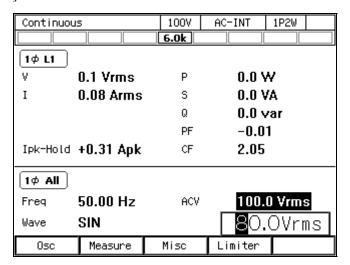


.----- Notes -----

• Set the RMS values for the voltages of the sine wave (SIN) and the clipped sine wave (CLP) and the Peak-to-Peak value for the voltage of the arbitrary waveform (ARB).

-----


- Operation procedures for setting the DC voltage
  - 1. Select the [DCV] item and then enter a numeric value. For how to enter values, see 3.3.5.

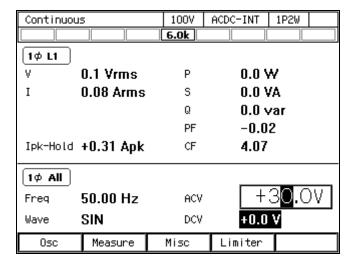


# 3.4.6 Setting the Output Voltage (Polyphase Output)

This section describes the operations in the balanced mode in a polyphase output. In the balanced mode, the phase voltage and the line voltage are set for all phases at once. To enter the balanced mode, select the [Osc] soft-key  $\rightarrow$  [6: Phase Mode] to open the phase mode set window, and select [1:Balance] in the Mode item. For details on the unbalanced mode, see 4.15.


- Operation procedures for setting the phase voltage
  - 1. Check the icon in the output display area (see 5.1) is 2♥ All (single-phase three-wire system)/3♥ All (three-phase system). If the different icon is shown, press the [Osc] soft-key and select [5:Target Phs] → [4:All Phs]. Or perform the Shortcut operation (SHIFT) + 1 to switch to [All Phs].

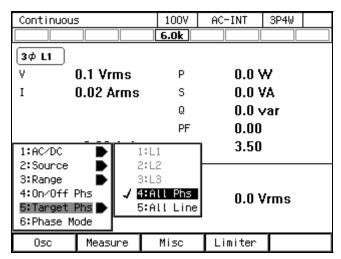

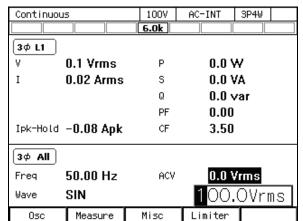


2. Select the [ACV] item and then enter a numeric value. For how to enter values, see 3.3.5.

- Operation procedures for setting the line voltage
  - 1. Press the [Osc] soft-key and select [5:Target Phs] → [5:All Line]. Or perform the Shortcut operation (SHIFT) + 1 to switch to [All Line]. Check that the icon in the output display area (see 5.1) is 2¢ Line (single-phase three-wire system)/(3¢ Line) (three-phase system).

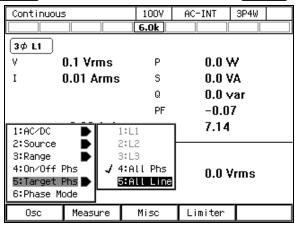

2. Select the [ACV] item and then enter a numeric value. For how to enter values, see 3.3.5.

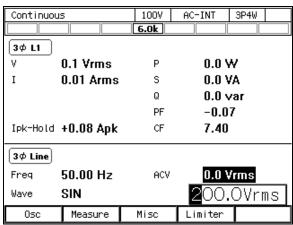

------ Notes -----

• The line voltage can be set only for the sine wave in the balanced mode.


\_\_\_\_\_\_

#### 3.4.7 Setting the Output Frequency

Set the AC component frequency of the internal signal source.

#### ■ Operation procedure

1. Select the [Freq] item and follow the instructions in 3.3.5 to enter a value.

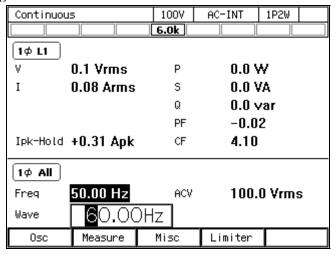


#### 3.4.8 Setting the Output On/Off Phase


Set the phases when the output turns on/off. After the output-on operation, the voltage output is started from the output on phase. After the output off operation, the voltage output is completed when it reaches the output off phase. The output off phase can be disabled. If disabled, the output is turned off immediately after the operation of output off.

#### ■ Operation procedure

1. Press the [Osc] soft-key and select [4:On/Off Phs]. The output on/off phase setting window opens.

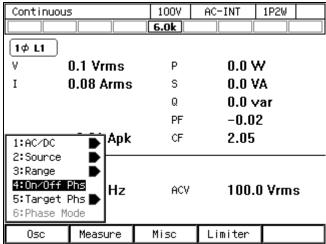

2. Set the on and off phase in the [On Phase] item and [Off Phase] item respectively. If you want to disable the off phase, select [Disable].

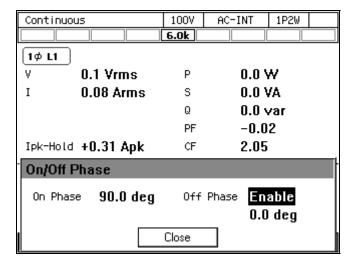


3. Close the window. For how to close the window, see 3.3.4.

------ Notes -----

• The output on/off phase setting is invalid for the Sequence and the Simulation.

# 3.4.9 Turning the Output On or Off

Use the OUTPUT key to turn the output on or off. The OUTPUT LED illuminates in the output on state.

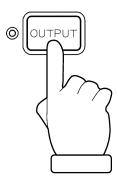

------ Notes ------

• For how to turn the output on or off rapidly, see 4.21.

.....

# 3.4.10 Using the Measurement Function

The measured values are displayed in the measured value area (see 5.1). The main measurement functions of this product are shown in Table 3-11. For details of the display items of the measured value, see 5.1.2.

**Table 3-11 Main Measurement Functions** 

	Item	Description	Unit
V	Output voltage effective value	The effective (RMS) value of the output voltage on the output terminal.	Vrms
Vavg	Output voltage average value	The average DC value of the output voltage on the output terminal.	V
Vmax	Output voltage maximum peak value	The maximum peak value of the output voltage on the output terminal.	Vpk
Vmin	Output voltage minimum peak value	The minimum peak value of the output voltage on the output terminal.	Vpk
I	Output current effective value	The effective (RMS) value of the output current. When the line voltage display is L1-L2/L2-L3/L3-L1, the phase current of the L1/L2/L3 phase is displayed respectively.	Arms
Iavg	Output current average value	The average DC value of the output current.	A
Imax	Output current maximum peak value	The maximum peak value of the output current. When the line voltage display is L1-L2/L2-L3/L3-L1, the phase current of the L1/L2/L3 phase is displayed respectively.	Apk
Imin	Output current minimum peak value	The minimum peak value of the output current. When the line voltage display is L1-L2/L2-L3/L3-L1, the phase current of the L1/L2/L3 phase is displayed respectively.	Apk
Ipk-Hold	Output current peak-hold value	The hold value of Imax or Imin, either of which the value is bigger. When the line voltage display is L1-L2/L2-L3/L3-L1, the phase current of the L1/L2/L3 phase is displayed respectively.	Apk
Р	Active power	The active power provided to the load. The power of the phase is displayed when in the phase voltage display. The total power of all phases is displayed when in the line voltage display.	W
S	Apparent power	The apparent power provided to the load. The power of the phase is displayed when in the phase voltage display. The total power of all phases is displayed when in the line voltage display.	VA
Q	Reactive power	The reactive power provided to the load. The power of the phase is displayed when in the phase voltage display. The total power of all phases is displayed when in the line voltage display.	var

**Table 3-11 Main Measurement Functions (continued)** 

	Item	Description	Unit
PF	Power factor	The power factor of the load. The power factor of the phase is displayed when in the phase voltage display in the polyphase output. It is not displayed when in the line voltage display.	_
CF	Crest factor	The crest factor of the output current (peak value/effective value). It is not displayed for the line voltage display in the polyphase output.	_
F	Synchronization frequency	The measured frequency value of the synchronization signal source when the signal source is SYNC.	Hz

# 3.4.11 Switching the Display Format (RMS/AVG/Peak) of the Measured Value


You can switch the display format of the measured value (RMS/AVG/Peak) for the output voltage and output current. The items which are displayed in each measuring mode are shown in Table 3-12.

Table 3-12 The Measuring Mode for the Measured Values of the Output Voltage and Output Current


Measuring	Items to be Displayed
mode	(Output Voltage, Output Current)
RMS	V, I, Ipk-Hold
AVG	Vavg, Iavg, Ipk-Hold
Peak	Vmax, Vmin, Imax, Imin, Ipk-Hold

# ■ Operation procedures using soft-keys

1. Press the [Measure] soft-key and select [2:Measure]. The [Measure] window opens.

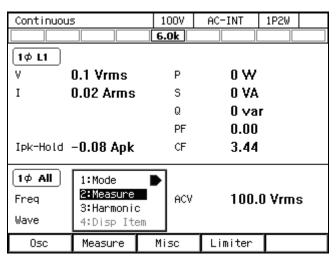


2. Select the [Type] item. In the displayed selection box, select the desired measuring mode.

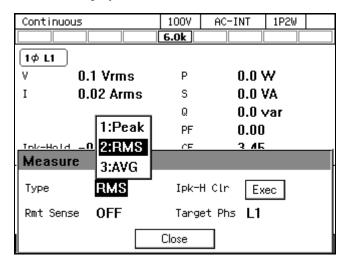


- 3. Close the window. For how to close the window, see 3.3.4.
- Operation procedures by using shortcuts
  - 1. Switching the display format of the measured values


    Press the SHIFT key to enter the shift state (the SHIFT LED illuminates). When you press the 3 key of the numeric keypad during the shift state, the measuring mode is switched in the following order: RMS, AVG, Peak, RMS. Some measuring modes may be skipped and cannot be selected depending on the AC/DC mode.

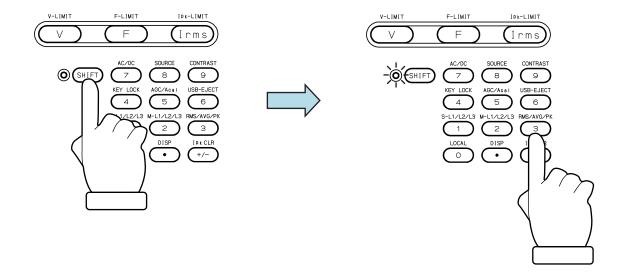

## 3.4.12 Enlarge Display Letters for the Measured Value

You can switch the measured value display mode between normal (normal) and the mode in which the letters are enlarged (simple) shown in the Figure below. In the Simple View mode, three types of measured values are displayed. You can select the measured value being displayed in the Simple View mode.

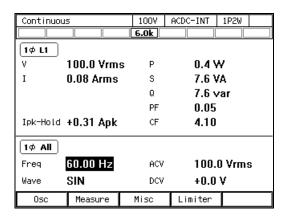

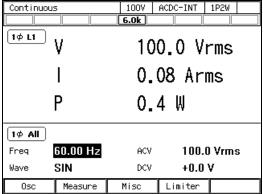


#### --- Notes


- If the measured value display mode is changed to Peak in the Simple View mode, the maximum peak values (Vmax/Imax) are displayed instead of the voltage/current measured value. Also, if the measured value display mode is changed to RMS/AVG from Peak, the effective/average values are displayed instead of the maximum and minimum peak values.
- If the AC/DC mode and the signal source are changed in the Simple View mode, the measured
  voltage values are forced to be displayed instead of the items that are not displayed in the mode after
  the change, such as the power factor or crest factor. If this operation is applied to multiple items, the
  measured current value is displayed for the second item, and the current peak-hold value for the third.
- Switching the measured value display mode (normal/simple)

The mode is toggled between normal and simple every time you perform the Shortcut operation with SHIFT + • You can also change the mode by following the steps below.


- 1. Press the [Measure] soft-key and select [1:Mode].
- 2. Select 1: Normal/2: Simple.

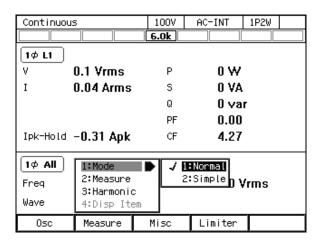

- Selecting the measured value being displayed in the Simple View mode (procedure 1)
  - 1. In the Simple View mode, press the [Measure] soft-key and select [4:Disp Item]. The setting window for display items opens.

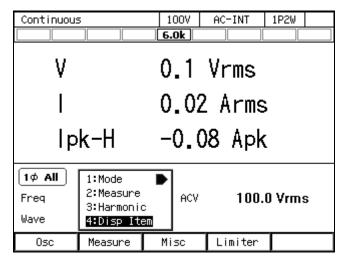


2. In the [Item1] to [Item3] items, select measured values to be displayed.

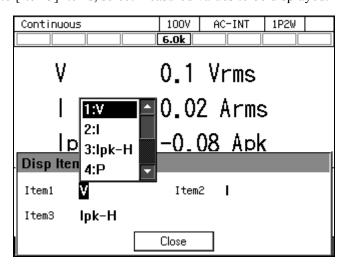

3. Close the window. For how to close the window, see 3.3.4.

■ Selecting the measured value being displayed in the Simple View mode (procedure 2)
In the Simple View mode, hover the cursor over the measured value item and press the ENTER key.
The selection box for choosing display items opens.

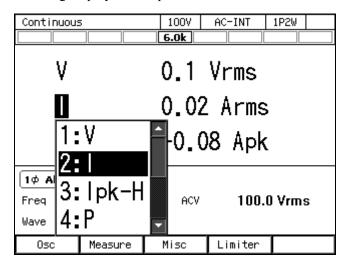


## 3.4.13 Clearing the Output Current Peak-hold Value


The output current peak-hold value is the maximum absolute value of the measured output current peak value, which is then updated appending signs and held. This held value can be cleared. After the held value is cleared, it is updated with the value measured after that. The held value is cleared when the power is turned off.

#### Operation procedures using soft-keys

1. Press the [Measure] soft-key and select [2:Measure]. The [Measure] window opens.

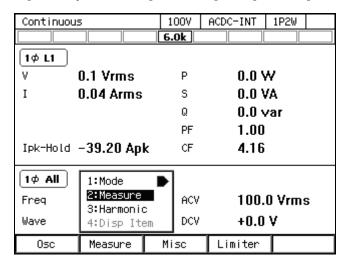


2. Move the cursor to [Exec] of the [Ipk-H Clr] item and press the ENTER key.

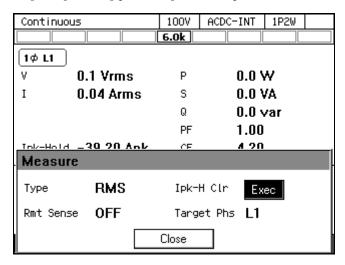

- 3. Close the window. For how to close the window, see 3.3.4.
- Operation procedures by using shortcuts
  - 1. (SHIFT)+ (+/-) Clearing the current peak-hold value

    Press the SHIFT key to enter the shift state (the SHIFT LED illuminates). When you press the
    +/- key in the numeric keypad in the shift state, the output current peak-hold value is cleared.

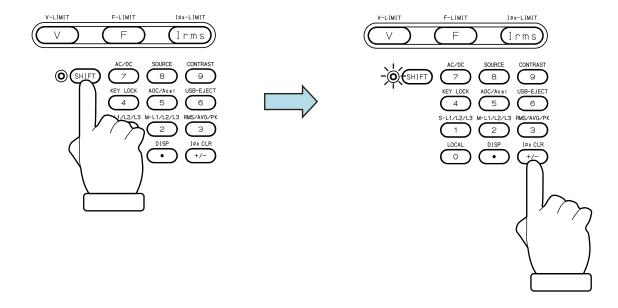

# 3.4.14 Switching the Target Phase of which the Measured Values are Displayed (Polyphase Output)

You can switch the phase of which the measured values are displayed on the LCD screen of polyphase output. You can select the line voltage display.


------ Notes -----

- Even if the line voltage display is selected, the phase voltage is displayed when Peak is selected for the measuring mode. If L1-L2, L2-L3, or L3-L1 is selected, the maximum and minimum peak values of the phase voltage for L1, L2, or L3 is displayed respectively.
- The line voltage display (RMS display) is not the line voltage value that is measured directly.
   This is the value that is calculated based on the phase setting value and the measured phase voltage value.
- In the line voltage display, the measured output current value indicates the phase current. If L1-L2, L2-L3, or L3-L1 is selected, measured values of the phase current for L1, L2, L3 is displayed.
- In the line voltage display, the power factor and crest factor are not displayed.
- In the line voltage display, the measured output power value indicates the output power of the
  phase when in the phase voltage display, and total output power of all phases when in the line
  voltage display.


\_\_\_\_\_\_

#### ■ Operation procedures using soft-keys


1. Press the [Measure] soft-key and select [2:Measure]. The [Measure] window opens.

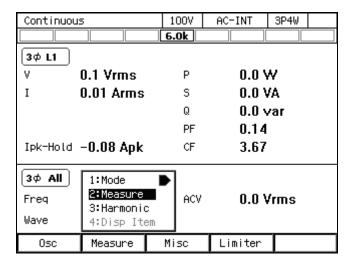

2. In the [Target Phs] item, select the phase of which the measured value is to be displayed. For the line voltage, select L1-L2, L2-L3, or L3-L1.

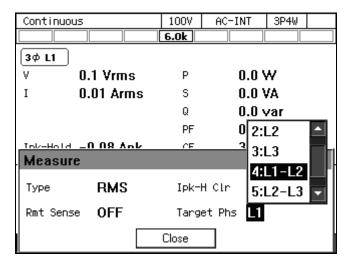

- 3. Close the window. For how to close the window, see 3.3.4.
- Operation procedures by using shortcuts
  - 1. (SHIFT)+ 2 Switches the target phase of which the measured value is displayed Press the SHIFT key to enter the shift state (the SHIFT LED illuminates). When you press the 2 key in the numeric keypad in the shift state, the phase is switched in the order of L1→L2→L1-L2→L1 ... in the single-phase three-wire. In the three-phase, it is switched in the order of L1→L2→L3→L1-L2→L2-L3→L3-L1-L1 ...

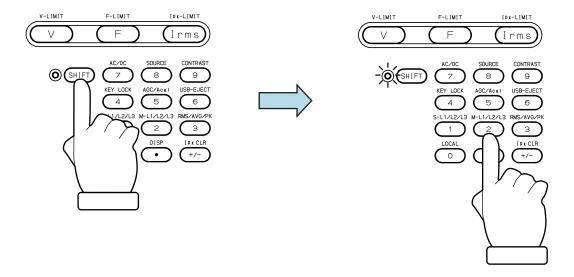

# 4. Advanced Operation

4.1	Using Limiter, Setting Limiter · · · · · 6	4
4.2	Using Sequence Function ······7	1
4.3	Using Power Fluctuation Testing (Simulation)	
	Function ····· 10	
4.4	Measuring Harmonic Current · · · · · 12	
4.5	Measuring Inrush Current · · · · 13	
4.6	Using Clipped Sine Wave · · · · 13	
4.7	Outputting Arbitrary Waveform · · · · 13	
4.8	Using Memory Function 14	
4.9	Using USB Memory Function 15	
4.10	Using Monitor Function · · · · 15	
4.11	Using Remote Sensing Function · · · · 15	
4.12	Using AGC Function · · · · 16	
4.13	Using Autocal Function 16	
4.14	Adjusting DC Offset · · · · 16	8
4.15	Using for Unbalanced Polyphase Output · · · · · 16	
4.16	Using as DC Power Supply 17	1
4.17	Setting Voltage using External DC Input Signal ···· 17	3
4.18	Control Using External Control Function 17	6
4.19	Synchronizing the Output Frequency with the	
	Power Line or the External Signal · · · · 18	3
4.20	Amplifying the External Signal Input · · · · 18	5
4.21	Turning the Output On or Off Rapidly · · · · 18	6
4.22	Enabling Automatic Output-On at Power-On · · · · 18	8
4.23	Power Unit Energization Setting	
	(Using Under the Restricted Rated Power) 18	
4.24	Key Lock 19	
4.25	Beep 19	1
4.26	Changing the Background Color and the Contrast	
	of the Screen ····· 19	2
4.27	Restoring to the Factory Default Setting (Reset) ··· 19	4

# 4.1 Using Limiter, Setting Limiter

#### 4.1.1 Use Peak Current Limiter

Peak value of output current is limited by the peak current limiter. While the limiter is working, icon IPKI is displayed and LIMIT LED illuminates.

Setting values of peak current limiter are variable, and kept independently for each of 100 V and 200 V ranges.

You can choose whether to make the output off or not upon the triggering of the peak current limiter. If you choose to set the output off, specify the continuous operation time of limiter until the output off becomes effective. Whether output off is set or not and the time setting are common regardless of the output ranges.


For the default setting range, see 11.14.

#### ---- Notes -----


- Output current value may be limited by a value that is different from the setting value, depending on the load.
- For an inductive load, overvoltage protection may be triggered due to the operation of peak current limiter. Overvoltage protection may be avoided by lowering the limiter setting value both for negative and positive values.
- When the number of power units that are energized is increased or decreased based on the
  power unit energization setting, the setting values of the peak current limiter are reset to the
  scaled factory default setting in proportion to the number ratio of energized power units. See
  11.14 for details.
- In the polyphase output, the setting of the peak current limiter is common to all phases.
- If the output off after the continuous operation of the limiter for the specified duration is enabled, the setting of output-off phase is ignored.
- In the case that the peak current limiter operates when the setting value of the peak current limiter is set as asymmetry between positive and negative in the AC mode, the DC component is generated in the output. Although the function to remove the DC component of the output works in the AC mode, when the peak current limiter operates intermittently, the DC component may not be removed sufficiently, or the output waveform may be modified.
- In the polyphase output, neutral line current is not limited.

## ■ Operation procedure


1. Push [Limiter] soft-key to select 1: Ipk Limiter (or push (SHIFT) + 1). Opens the peak current limiter set window.

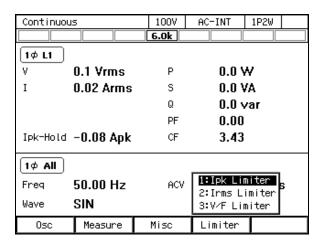

2. In the [+Iop]/[-Iop] item, set the peak current limiter value of positive/negative.

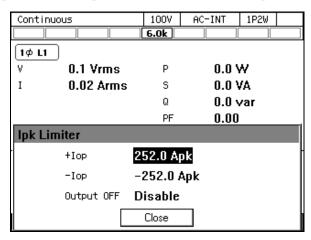

3. Set the [Output OFF] item as [Enable] or [Disable]. When setting to [Enable], also set the time from the start of limiter operation to the output off.

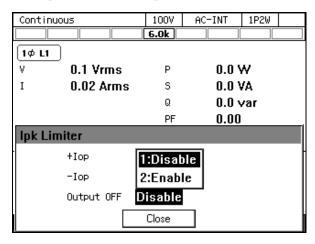

4. Close the window.

## 4.1.2 Using RMS Current Limiter

Effective value of output current is limited by the RMS current limiter. While the limiter is working, icon Irms is displayed and LIMIT LED illuminates.

Setting values of RMS current limiter are variable, and kept independently for each of 100 V and 200 V ranges.

You can choose whether to make the output off or not upon the triggering of the RMS current limiter. If you choose to set the output off, specify the continuous operation time of limiter until the output off becomes effective. Whether output off is set or not and the time setting are common regardless of the output ranges.

For the default setting range, see 11.14.

#### --- Notes


- It will take time from the limiter starts operation until the output current is restricted enough, because the RMS current limiter needs to calculate effective value. Use the peak current limiter to limit the current quickly. For peak current limiter, see 4.1.1.
- RMS current limiter may not be able to limit output current sufficiently if the load impedance is very small (e.g. output short circuit). Also, RMS current protection may work in this case and then output is turned off.
- When the number of units is increased or decreased based on the power unit energization setting, the setting values of the RMS current limiter are reset to the scaled factory default setting in proportion to the number ratio of energized power units. Refer to 11.14 for details.
- In the polyphase output, the setting of the RMS current limiter is common to all phases.
- If the output off after the continuous operation of the limiter for the specified duration is enabled, the setting of output-off phase is ignored.
- In the polyphase output, neutral line current is not limited.

#### - A CAUTION


• For loads with very low impedance (e.g. output short circuit, etc.), the RMS current limiter cannot sufficiently limit the output current and may exceed the rated current. Use within the rated current range by checking the current measured value and using the peak current limiter together etc.

## ■ Operation procedure


1. Push [Limiter] soft-key to select 2:Irms Limiter (or push I key). Opens the RMS current limiter set window.

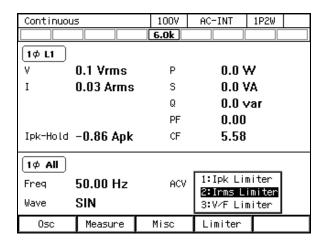

2. Set the value of RMS current limiter in [Io] item.

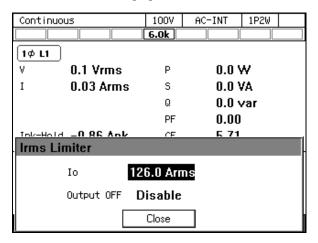

3. Set the [Output OFF] item as [Enable] or [Disable]. When setting to [Enable], also set the time from the start of limiter operation to the output off.

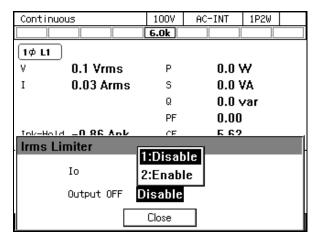

4. Close the window.

## 4.1.3 Using Voltage Setting Range Limit

For the Continuous function, when the signal source is INT, SYNC, or ADD, the range of the output voltage setting value to the internal signal source can be limited. Even if trying to set a voltage that exceeds the limit, the setting value is restricted to the limiting value. This can prevent mis-setting when you do not want to set values outside the range.

As for the voltage setting range limiting values, each value is kept independently for the following settings for 100 V and 200 V ranges respectively: SIN/CLP waveform in AC mode, ARB waveform in AC mode, ACDC mode, and DC mode.

In case of polyphase output, the setting of the voltage setting range limit is common to all phases, and kept as the effective value of the phase voltage in this product. When the line voltage setting (effective value setting) is selected in balanced mode, it is converted into the effective value setting of the phase voltage according to the following formula and kept in this product.

Balanced three-phase output:

Phase voltage = 
$$\frac{1}{\sqrt{3}} \times \text{Line voltage}$$

Balanced single-phase three-wire output:

For the default setting range, see 11.15.

Phase voltage = 
$$\frac{1}{2} \times \text{Line voltage}$$


The limiting value should be set using the effective value or the positive and negative peak value. The effective value can be used only when in the AC mode and the waveform is a sine wave or a clipped sine wave. The limiting value can be set using the line voltage in polyphase output when in AC mode and balanced mode, and the output voltage setting is a line voltage setting. In other cases, set using the positive and negative peak values of phase voltage.

#### ..... Notes

- The voltage setting range limit is useful for the prevention of an excessive output when a setting value is rapidly increased or decreased by using the shuttle.
- The limitation is applied to the additional values of the AC voltage setting (recalculated to a peak value) and the DC voltage setting.
- The voltage setting range limit cannot be applied to the external signal source of EXT and ADD.
- The Sequence and the Simulation function do not include the voltage setting range limiting function.
- The voltage setting range limit that does not include an output voltage already set cannot be set.
- In the polyphase output, the voltage setting range limit is common to all phases.
- In ACDC mode, set the voltage setting range limit setting using the positive and negative peak values of the phase voltage regardless of the settings of the waveform, balanced/unbalanced mode, phase voltage/line voltage.


#### Operation procedure

1. Push [Limiter] soft-key to select 3: V/F Limiter (or push (SHIFT) + V). Opens the setting window for the voltage/frequency setting range limit.

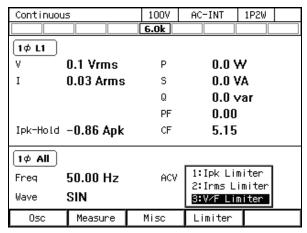


2. The screen for the effective value setting or the peak value setting opens depending on the signal source setting/output waveform settings made here. Set the voltage setting range limiting value in the [V] item (effective value setting) and [+Vop]/[-Vop] item (peak value setting).

Effective value setting

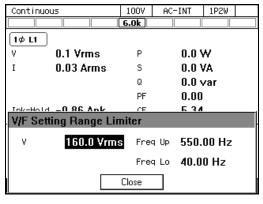

Peak value setting

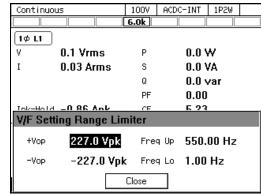

3. Close the window.

# 4.1.4 Using Frequency Setting Range Limit

You can limit the range of the frequency setting value for the internal signal source by using the frequency setting range limit. Even if trying to set a frequency that exceeds the limit, the setting value is restricted to the limiting value. This can prevent mis-setting when you do not want to set values outside the range.

The frequency setting range limiting value is common to both 100 V and 200 V ranges.


For the default setting range, see 11.15.

------ Notes ------


• The frequency setting range limit is useful for the prevention of an unintended frequency setting when a setting value is rapidly increased or decreased by using the shuttle.

#### ■ Operation procedure

1. Push [Limiter] soft-key to select 3: V/F Limiter (or push SHIFT)+ F). Opens the setting window for the voltage/frequency setting range limit.

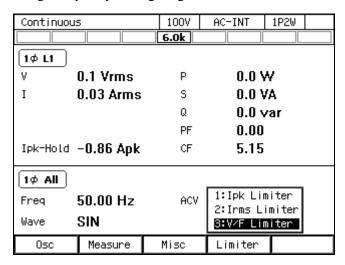

2. Set values in the [Freq Up]/[Freq Lo] item so that the upper value of the frequency setting range limit is higher than or equal to the lower limit.

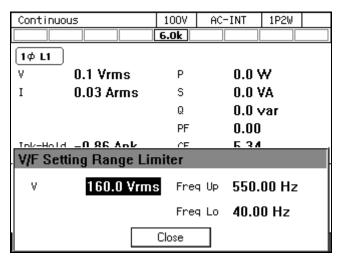

3. Close the window.

## 4.1.5 About Wattage Limiter

The wattage limiter operates when trying to output the power exceeding the rated power. When the wattage limiter operates, the output voltage is suppressed until the active power per phase is the value in Table 4-1 (reference value). While the limiter is working, icon WATE is displayed and LIMIT LED illuminates.

		Rated output (Unit: VA)	Single-phase Limiter Value (Unit: W)	Single-phase three-wire Limiter Value (Unit: W)	Three-phase Limiter Value (Unit: W)	
			DP06	50LM		
	1	2000	2100	2100	2100	
	2	4000	4200	_	_	
စ္	3	6000	6300	_	_	
has		DP120LM				
r p	1	2000	2100	2100	2100	
er . pe	2	4000	4200	4200	4200	
Number r units p	3	6000	6300	_	_	
N I	4	8000	8400	_	_	
We	5	10000	10500	_	_	
Number of power units per phase	6	12000	12600	_	<del>_</del>	
ofo		DP180LM				
	1	6000	6300	6300	6300	
	2	12000	12600	_	_	
	3	18000	18900	_	_	

Table 4-1 Wattage Limiter Value per Phase (Reference value)

#### ------ Notes -----

- If the wattage limiter operates, suppress the output wattage within the rated output power by lowering the output voltage setting value.
- Active power (unit: W) is restricted by the wattage limiter, however, reactive power (unit: var) is not restricted. Therefore, the apparent power (unit: VA) may exceed the rated power depending on the power factor of the load. Set the output voltage so that the apparent power does not exceed the rated power, regardless of the operation of the wattage limiter.
- The value of the wattage limiter cannot be changed. To limit the output power to a value that is lower than the rating, decrease the number of power units that are energized through the power unit energization setting, or use the peak current limiter or the RMS current limiter.

\_\_\_\_\_\_

# 4.2 Using Sequence Function

#### 4.2.1 Basics

By using Sequence function, an output setting can be changed step-by-step according to the program (sequence) created beforehand. This section describes the basics for using the Sequence function.

#### ■ AC/DC Mode and Signal Source

Sequence function keeps the selection of the AC/DC mode and a signal source, independently from Continuous function/Simulation function. AC/DC mode can be selected from AC/ACDC/DC. A signal source is fixed as INT.

#### ■ Keep a sequence setting

The sequence setting is kept per AC/DC mode. Every time AC/DC mode is changed, the sequence setting that is already kept is loaded. The sequence setting is cleared when the power is turned off. To save the setting, you need to save it in internal memory or USB memory (see 4.9).

#### ■ Step

One sequence consists of a series of two or more steps. To use Sequence function, first set each step.

#### ■ Step-control Parameters and intra-Step Parameters

There are the following two major types of parameters in Sequence function:

#### • Step-control parameter

Parameter to control the flow between two or more steps. This defines duration of each step and the next step to transition. Settings of step synchronous code and trigger output are included in step-control parameter for convenience.

#### • Intra-Step parameter

Parameter to define output state in each step. This defines basic parameters such as a waveform, frequency, and how they are changed in the step.

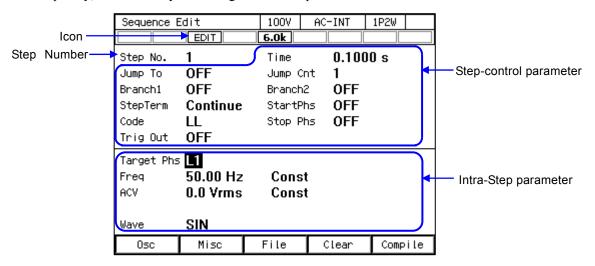


Figure 4-1 Step-control Parameters and intra-Step Parameters

#### ■ Step No. 0

Step No. 0 is assigned to the stand-by state before the sequence starts. If the terminal specification of the step other than No. 0 is End, the execution transitions to step No. 0 and enters into the stand-by state. Step Time and the Step Behavior setting of No. 0 specifies the action to transit to No. 0 at the end of a sequence.

## ■ Step Behavior (Const, Keep, Sweep)

For the intra-Step parameter other than waveforms and phases, the following three patterns can be set as the method to change values in the step.

Constant (Const)Fixed to the value set in the step.

#### Keep

Keeping the value immediately before transitioning to the step. That is, the value is changed depending on the status of the previous step. Although the parameter value can be set even if the operation type setting is Keep, the parameter setting value is ignored when sequence is executed.

#### Sweep

It changes linearly from the value immediately before transitioning to the value set in the step, taking the Step Times. In other words, it reaches the setting value after the Step Time passes in the step. The starting value is changed depending on the status of the previous step.

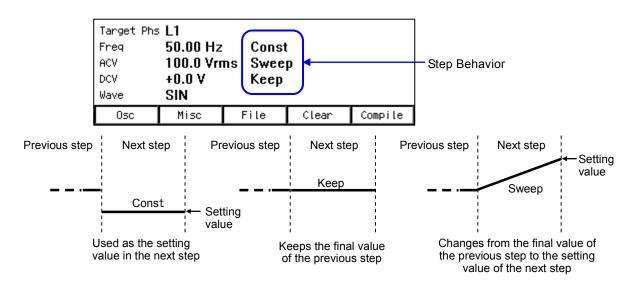


Figure 4-2 Step Behavior

------ Notes ------

- The Step Behavior for the waveform and phase is always Constant (Const).
- Keeps as many intra-Step parameter setting values as the number of phases in each step based on the output phase mode.
- Cannot be set using line voltage in the single-phase three-wire output and three-phase output.
- The rate of crest factor/clip ratio cannot be changed though a clipped sine wave can be selected as an output waveform in Sequence function. Set these parameters beforehand using Continuous function.
- Sequence function displays the measured value in Sequence function, which is equivalent to that of the Continuous function. However, harmonic current measurement (see 4.4) cannot be displayed.

.....

## 4.2.2 Parameters of Sequence Function

Table 4-2 shows the parameters of Sequence function. The common parameters are common to one sequence. In Sequence function, signal source is fixed to INT. In each step, set the step-control parameter and the intra-Step parameter. As for intra-Step parameter, the item and range that can be set differ depending on the output range (100 V/200 V range) and output mode (AC-INT/ACDC-INT/DC-INT) as in the case of Continuous function. This section describes intra-Step parameters and step-control parameters separately.

Common Step-control parameter Intra-Step parameter parameter Step Time Output range Frequency AC/DC mode Waveform Jump-to step Jump count (1 to 9999, or infinite) Phase angle Branch step AC phase voltage Step termination DC voltage Step sync code output (2bit) Start Phase Stop Phase

**Table 4-2 Parameters of Sequence Function** 

■ Frequency (Freq), waveform (Wave), phase angle (Phase), AC phase voltage (ACV), DC voltage (DCV)

The setting for the output of each step. In polyphase output, AC phase voltage and phase angle can be set for each phase. In the phase angle, set the phase difference with the L1 phase. Phase angle can also be set per step. The phase angle of L1 phase cannot be set, and is fixed as 0 deg.

# ■ Step Time (Step Time)

Set the output time of that step. Unit can be selected from [s] or [ms].

Trigger output

### ■ Jump-to step (Jump To)

When selected, the destination step of the jump at the end of the step can be specified. By specifying the Jump count ([Jump Cnt]), you can set up a loop to repeat the same step. After jumping for the times specified for one sequence, the action at the end of step follows the step termination setting. If Jump-to is set to off, the action at the end of step follows the step termination setting.

		Notes	3
--	--	-------	---

• When the step termination is set as [Hold], the hold status is enabled before the jump.

#### ■ Jump count (Jump Cnt)

Number of times of jumps to jump to the step specified in Jump-to. This can be set when Jump-to ([Jump To]) is selected. When the Jump count is set to 0, infinite times of jumps occur.

--- Notes -----

• The number of times that a particular step is repeated is Jump count +1.

\_\_\_\_\_\_

#### ■ Branch step (Branch1, Branch2)

When the step is under execution or in the hold state, the step to transition when the branching instruction through panel operation or CONTROL I/O is detected can be specified. There are two systems of branch instructions (Branch1 and Branch2), and an instruction can be set for each.

------ Notes -----

• Transition using branch is executed immediately after a branching instruction is detected. Step Time, Stop Phase, and step termination setting are ignored.

.....

#### ■ Step termination (Step Term)

Specifies the action when the step completes. When [Continue] is selected, transitions to the step of the next number. When [End] is selected, the sequence is terminated and the execution transitions to step No. 0 and enter into the stand-by state. When [Hold] is selected, the output at the end of the step is suspended, and the execution transitions to the step of the next number when Resume instruction is detected.

------ Notes -----

- When [Step Term] is set to [Hold], the execution enters into hold state before jump. Jumps when Resume instruction is detected.
- When [Step Term] is set to [Hold], after the jumps repeated for the specified Jump count, the execution transitions to the step of the next number when Resume instruction is detected in hold state.
- While in the hold state due to the step termination in a step where step termination phase is enabled, the execution transitions to Jump-to step or the step of next number when Resume instruction is detected, after the hold state is kept until Stop Phase.

-----

#### ■ Step sync code output (Code)

State output to CONTROL I/O connector. Code to output while the execution of the step, which is specified by 2-bit H/L.

#### ■ Start Phase (StartPhs)

Determines the phase of AC waveform of L1 phase when the step starts. The phase when a step starts in L2 and L3 phase of polyphase system is the addition of the setting value of intra-Step parameter Phase and the setting value of the step Start Phase.

----- Notes ------

• Step Start Phase setting can be disabled. In that case, the phase when the phase starts becomes the phase when the previous step ended.

• In DC mode, the step Start Phase cannot be set.

#### ■ Stop Phase (Stop Phs)

Determines the phase of AC waveform when the step ends. The phase when a step ends in L2 and L3 phase of polyphase output is the addition of the setting value of intra-Step parameter Phase and the setting value of the step Stop Phase. When the stop phase setting is active, the execution waits for the Step Time that was set pass, and keeps the output setting until it reaches the Stop Phase that was set, and then transitions to the next step. As the result, the actual step time is longer by one cycle at a maximum than the set Step Time. Figure 4-3 shows an example where both the Stop Phase of the previous step and the Start Phase of the next step are set to  $0^{\circ}$ .

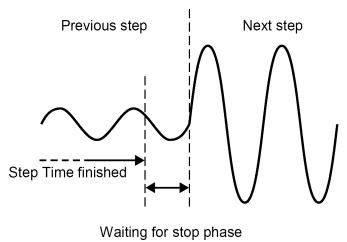


Figure 4-3 Stop Phase

----- Notes ------

- When the Step Behavior is set to [Sweep], output is constant while waiting for the step Stop Phase after the Step Time passes.
- Step Stop Phase setting can be disabled. In this case, when the set Step Time has passed, the execution transitions to the next step without waiting for step Stop Phase.
- In DC mode, the step Stop Phase cannot be set.

\_\_\_\_\_\_

#### ■ Trigger output (Trig Out)

State output to CONTROL I/O connector. This specifies whether the trigger output presents when the step starts. Polarity and pulse width of the trigger output complies with the trigger output setting (see 4.2.5).

## 4.2.3 Example of Output Using Sequence Function

As an example, consider the sequence that gradually changes DC voltage like Figure 4-4. Set the output mode to DC-INT. Edit the sequence like Table 4-3. Parameters not included in this table should be left as the factory default setting.

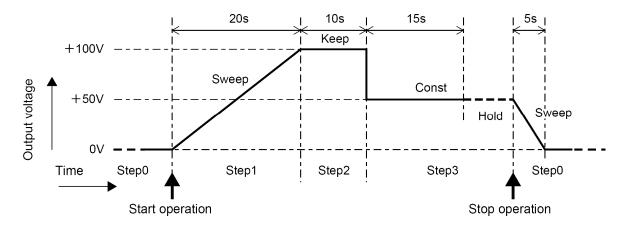


Figure 4-4 Example of Sequence

Step Number		0	1	2	3
Step-control	Step Time (Time)	5 s	20 s	10 s	15 s
parameter	Jump-to (Jump To)		OFF	OFF	OFF
	Step termination (Step Term)	_	Continue	Continue	Hold
Intra-Step	DC Voltage (DCV)	0 V	+100 V	(Optional)	+50 V
Parameter	Step Behavior	Sween	Sween	Keen	Const

Table 4-3 Example of Editing Sequence

-- Notes

- Step Time and the Step Behavior of step No. 0 specifies the action after the transition to step No. 0 at the end of a sequence.
- Jump-to of step No. 0 cannot be specified. The execution always transitions to step No. 1 when the sequence starts.
- In the case that the step termination is set to [Hold] (No. 3), and when the execution is in the Hold state, it transitions to step No. 0 and enters into the stand-by state if the Stop operation is executed. If you perform Resume operation here, the execution transitions to the step of the next number (No. 4).

#### 4.2.4 Process Flow in a Step

Figure 4-5 shows the process flow in one step. The transition such as Figure 4-6 occurs by branch operation or stop operation, regardless of the flow in the step.

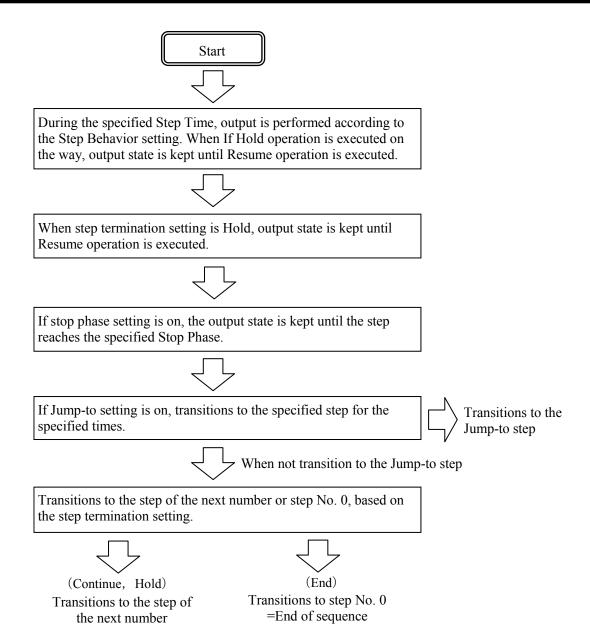


Figure 4-5 Process Flow in Sequence Step

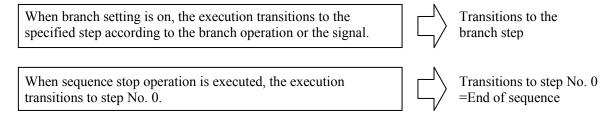


Figure 4-6 Branch Operation/Stop Operation

## 4.2.5 Edit a Sequence


----- Notes -----

- A sequence being edited is kept per AC/DC mode. If AC/DC mode is changed, the edited contents of sequence are loaded based on the change.
- When the power is turned off, edited contents of the sequence are cleared, and all sequences have the default setting values when it is started next time. To keep the edited contents of sequence, save them in the Sequence Memory (see 4.2.8).
- When the sequence is loaded from Sequence Memory, the sequence being edited at that time is discarded.
- You can also turn the output on in the Sequence Edit View. In this case, the output will be set to the state set in the Step No.0 when the sequence was last compiled (see 4.2.7).

------

#### ■ Transit to Sequence Edit View


Press the MENU key to open the root menu, then select [Sequence] (see 3.3.1). While the Sequence Control View is displayed, if you push the [Edit] soft-key, the execution transitions to the Sequence Edit View.

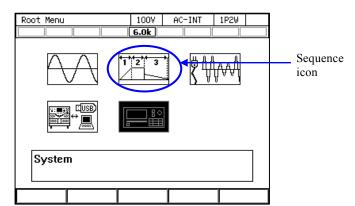


Sequence	Control	1007	AC-INT	1P2W
	STOP	6.0k		
1φ L1				
٧	0.1 Vrms	Р	0.0 \	٧.
I	0.04 Arms	S	0.0 \	/A
		Q	0.0 v	/ar
		PF	0.00	
Ipk-Hold	-0.31 Apk	CF	4.29	
Step No.	1			
Freq	50.00 Hz	ACV	0.0 \	/rms
Wave	SIN			
Start			Measure	(Edit)

#### ■ Edit a sequence


1. Push [Osc] soft-key on Sequence Edit View, then select AC/DC mode and 100 V/200 V range. To edit the saved sequence, load the sequence (see 4.2.6).

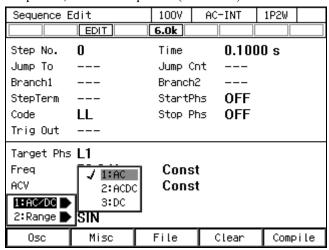


2. Set the parameter of each step. You can move between each step by changing [Step No.].

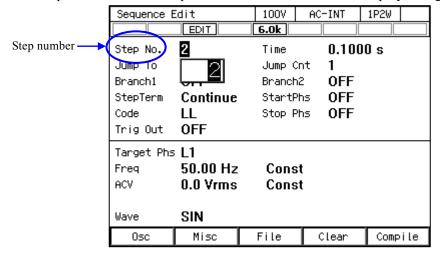

3. You can select s or ms as the unit of Step Time by selecting [Misc] soft-key  $\rightarrow$  [1: TimeUnit].

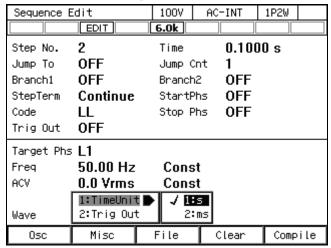

4. You can set polarity of trigger output and pulse width by selecting [Misc] soft-key → [2: Trig Out].

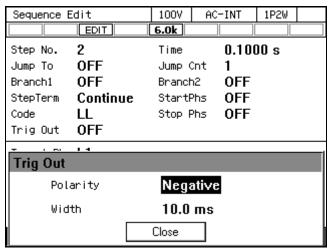


## 4.2.6 Load a Sequence

------ Notes -----


- When the sequence is loaded, the sequence being edited at that time is discarded.
- In Sequence Control View, a sequence cannot be loaded.

■ Load the sequence stored in the internal memory


1. In Sequence Edit View, select [File] soft-key  $\rightarrow$  [2: Recall]. Sequence Recall View is opened.

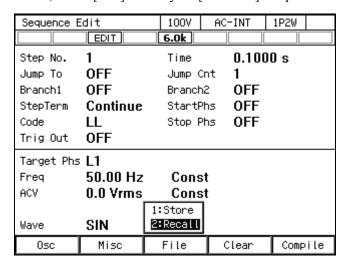


2. In the [From] item, select [1: System].

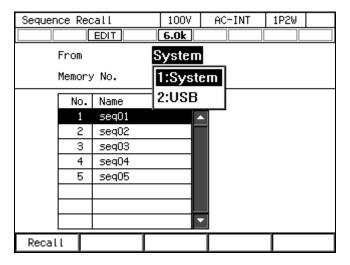

3. Specify the memory number of the sequence to be loaded in [Memory No.] item, and then push [Recall] soft-key.

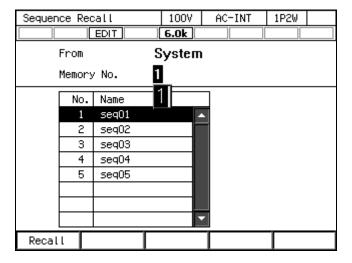


**4**. The confirmation window for loading the sequence opens. Select [OK]. The sequence with the specified memory number is loaded.

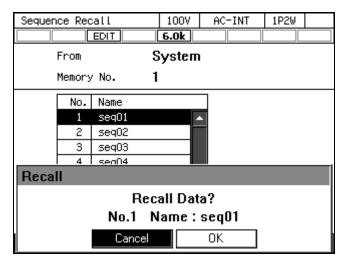


■ Load the sequence stored in the USB memory


For how to connect USB memory to this product, and how to disconnect from this product, see 4.9.

1. In Sequence Edit View, select [File] soft-key  $\rightarrow$  [2: Recall]. Sequence Recall View is opened.

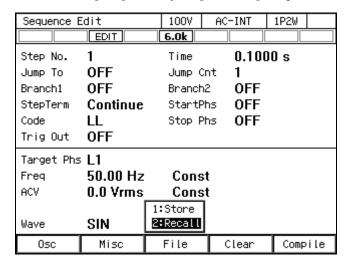

2. In the [From] item, select [2: USB].

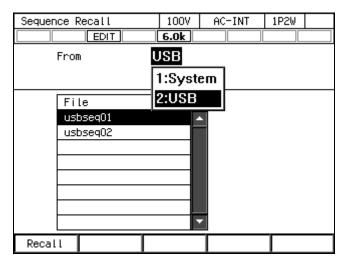


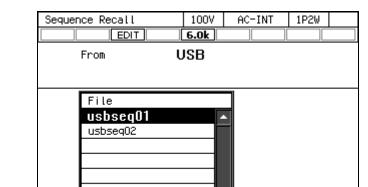

3. From data list box, select the sequence to load.

Recall

- 4. Push the [Recall] soft-key.
- 5. The confirmation window for loading the sequence opens. Select [OK]. The specified sequence data is loaded.

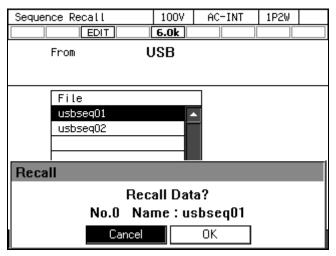

------ Notes -----


• The number of sequence data files saved in a USB memory should be 500 or less. If the number of files exceeds this limit, this product cannot recognize the sequence data files in the USB memory.

## 4.2.7 Execute a Sequence

The edited sequence can be executed after converted to executable program by compile operation.

#### ■ Transition to Sequence Control View

When pushing [Compile] soft-key in the Sequence Edit View, the edited sequence is compiled, and then the screen transitions to Sequence Control View. If output is turned on in the Sequence Edit View, the output transitions to the state set in the step No.0 at the same time as compiling.

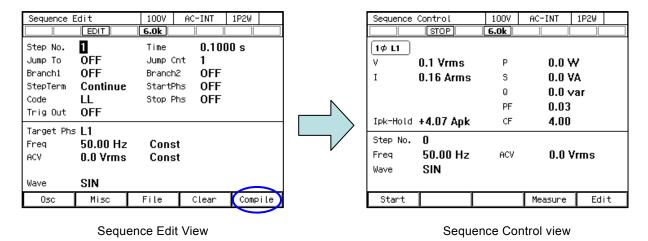

• If an error setting is detected during compilation, an error message is displayed and the screen does not transition to the Sequence Control View.

## ■ Start/Terminate a sequence

1. If output is turned off in the Sequence Edit View, the sequence can be executed when output is turned on in the Sequence Control View. At this point, the output is in the state set in the step No. 0. When a sequence is stopped, the STOP icon is displayed.

Sequence Control		1007	AC-INT	1P2W		
STOP		6.0k				
1φ L1						
٧	0.1 Vrms	Р	0.0 V	٧		
I	0.04 Arms	S	0.0 V	/Α		
		Q	0.0 var			
		PF	0.00			
Ipk-Hold − <b>0.31 Apk</b>		CF	4.29			
Step No.	1					
Freq <b>50.00 Hz</b>		ACV	0.0 \	/rms		
Wave	SIN					
Start			Measure	Edit		

2. When pushing [Start] soft-key, the sequence is started. While the sequence is executed, icon RUN is displayed.

Sequence (	Control	1007	AC-INT	1P2W
	RUN	6.0k		
1φ L1				
٧	0.1 Vrms	Р	0.0 V	٧
I	0.04 Arms	S	0.0 V	/Α
		Q	0.0 v	'ar
		PF	0.00	
Ipk-Hold −0.31 Apk		CF	4.23	
Step No.	4			
Freq	50.00 Hz	ACV	0.0 \	/rms
Wave	SIN			
	Stop	Hold	Bran1	Bran2

3. When [Stop] soft-key is pushed while sequence is executed, the execution transitions to the output state that is set in the step No. 0, and then sequence is terminated. The output remains on.

Sequence Control		1007	AC-INT	1P2W		
	STOP	6.0k				
1φ L1						
٧	0.1 Vrms	Р	0.0 \	W		
I	0.04 Arms	S	0.0 VA			
		Q	0.0 var			
		PF	0.00			
Ipk-Hold −0.31 Apk		CF	4.29			
Step No.	1					
Freq	eq <b>50.00 Hz</b> ACV <b>0.0 Vrms</b>		/rms			
Wave	SIN					
Start			Measure	Ed	it	

------ Notes -----

- In the output off state, the sequence cannot be started.
- Output on/off setting is not active in sequence.

\_\_\_\_\_

## ■ Return to Sequence Edit View

If you push the [Edit] soft-key, the execution transitions back to the Sequence Edit View.

## ■ Suspend a sequence

1. When pushing [Hold] soft-key while a sequence is executed, the sequence is suspended. The output state is kept while suspended. Icon HOLD is displayed.


Sequence (	Control	100V	AC-INT	1P2W
	RUN	6.0k		
1φ L1				
٧	0.1 Vrms	Р	0.0 V	٧
I	0.04 Arms	S	0.0 VA	
		Q	0.0 var	
		PF	0.00	
Ipk-Hold −0.31 Apk		CF	4.23	
Step No.	4			
Freq	50.00 Hz	ACV	0.0 V	rms
Wave	SIN			
	Stop	Hold	Bran1	Bran2

2. To restart the sequence, push [Resume] soft-key. If you push [Stop] soft-key, the execution transitions to step No. 0 and the sequence is terminated.

Sequence (	Sequence Control		AC-INT	1P2W
	HOLD	6.0k		
1φ L1				
٧	0.1 Vrms	Р	0.0 \	٧
I	0.04 Arms	S	0.0 VA	
		Q	0.0 var	
		PF	0.00	
Ipk-Hold − <b>0.31 Apk</b>		CF	4.23	
Step No.	7			
Freq <b>50.00 Hz</b>		ACV	0.0 \	/rms
Wave	SIN			
Resume	Stop		Bran1	Bran2

#### ■ Branch a sequence

If you push [Bran1] or [Bran2] soft-key while a sequence is executing, the execution transitions to the branch step 1 or 2 that is set in the step being executed.

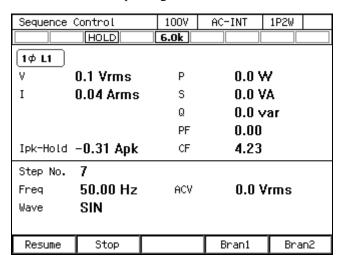

## 4.2.8 Save a Sequence


------ Notes -----

- In Sequence Control View, a sequence cannot be saved.
- All sequence data that are edited in each mode of AC/DC mode are saved as one memory number/file by one save operation.


\_\_\_\_\_\_

#### ■ Save a sequence to internal memory


1. In Sequence Edit View, select [File] soft-key  $\rightarrow$  [1: Store]. Sequence Store View is opened.

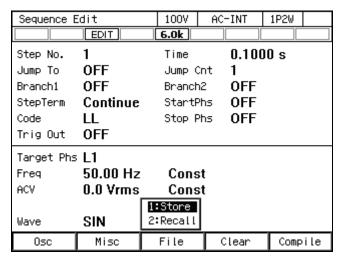


2. In the [To] item, select [1: System].

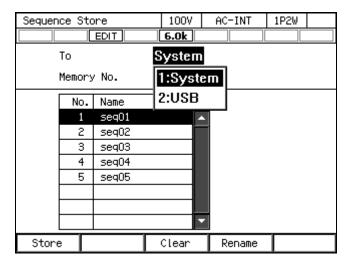

3. Specify the memory number of location to save in [Memory No.] item, and then push [Store] soft-key.

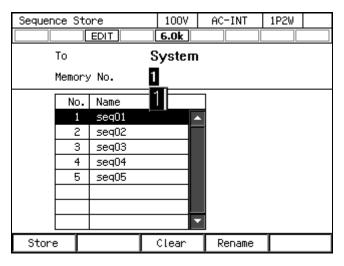


4. A window to confirm the save name opens. Enter the name, and then select [OK]. For how to enter a string, see 3.3.6.

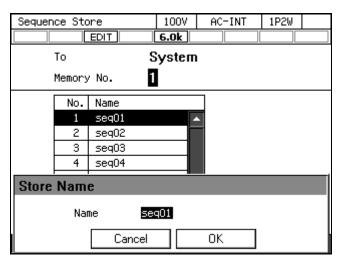


#### ■ Save a sequence to USB memory

For how to connect USB memory to this product, and how to disconnect from this product, see 4.9.


1. In Sequence Edit View, select [File] soft-key  $\rightarrow$  [1: Store]. Sequence Store View is opened.

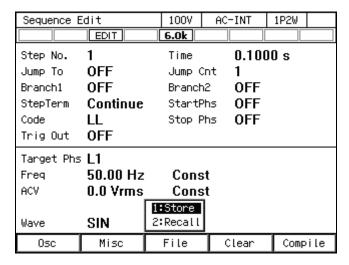


2. In the [To] item, select [2: USB].

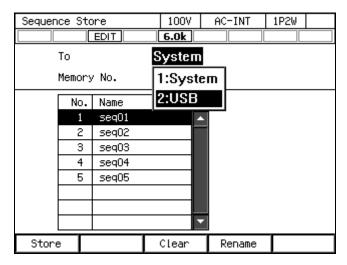

3. Specify the memory number of location to save in [Memory No.] item, and then push [Store] soft-key.

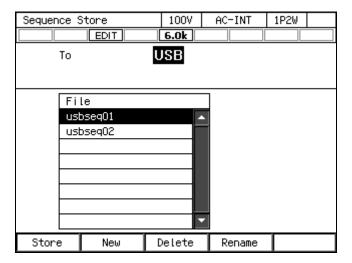

4. A window to confirm the save name opens. Enter the name, and then select [OK]. For how to enter a string, see 3.3.6.

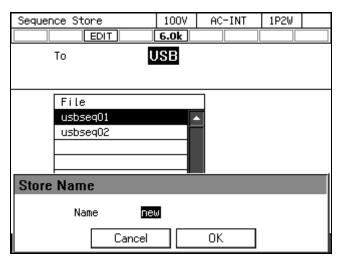


------ Notes -----

• The number of sequence data files saved in a USB memory should be 500 or less. If the number of files exceeds this limit, this product cannot recognize the sequence data files in the USB memory.


\_\_\_\_\_\_

## 4.2.9 Clear/Rename Sequence


- Clear/Rename a sequence saved in internal memory
  - 1. In Sequence Edit View, select [File] soft-key  $\rightarrow$  [1: Store]. Sequence Store View is opened.

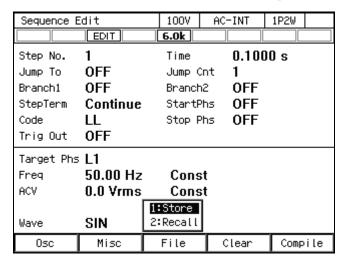


2. In the [To] item, select [1: System].

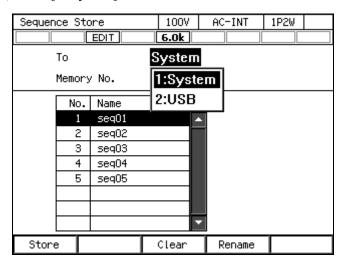


3. Specify the number of memory to be operated in [Memory No.] item.

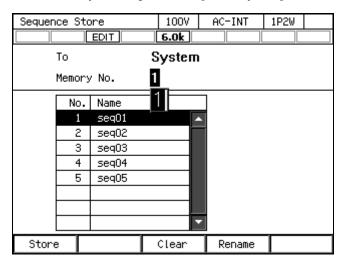

**4.** To clear, push [Clear] soft-key. Confirmation message is displayed. Select [OK]. In the cleared number of the memory, the sequence data at factory shipment is stored.

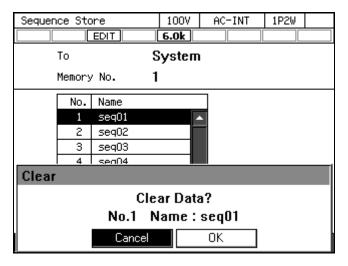


5. To rename, push [Rename] soft-key. Rename window opens. Enter a new name and then select [OK]. For how to enter a string, see 3.3.6.

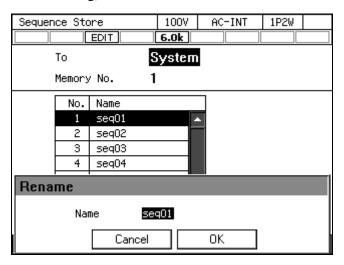


- Delete/Rename a sequence saved in USB memory


  For how to connect USB memory to this product, and how to disconnect from this product, see 4.9.
  - 1. In Sequence Edit View, select [File] soft-key  $\rightarrow$  [1: Store]. Sequence Store View is opened.

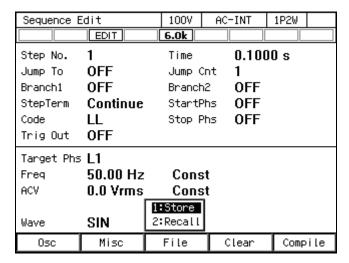


2. In the [To] item, select [2: USB].

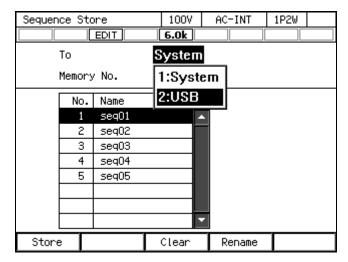


3. Select the data that is the target of the operation in the data list box.

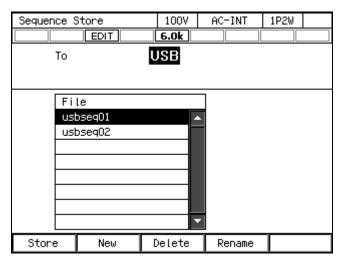

**4.** To clear, push [Delete] soft-key. Confirmation message is displayed. Select [OK]. The corresponding file in USB memory is deleted.

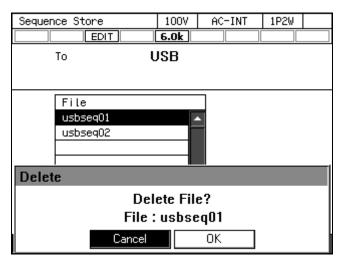

5. To rename, push [Rename] soft-key. Rename window opens. Enter a new name and then select [OK]. For how to enter a string, see 3.3.6.

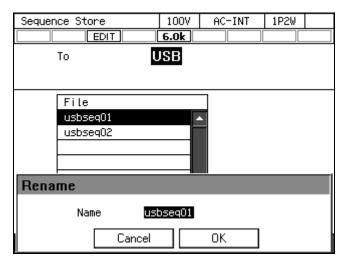



## 4.2.10 Set so as the Sequence Function is Selected at Power-on

You can set so as the Sequence function is selected at power-on.

#### ■ Operation procedure

1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

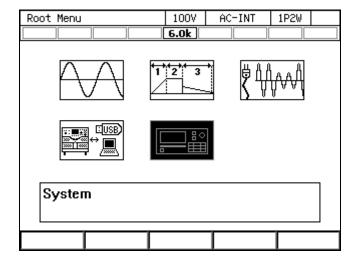

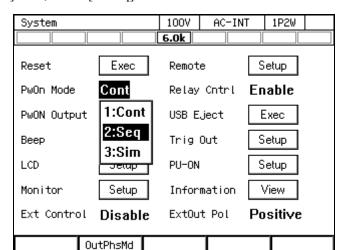

2. In [PwOn Mode] item, select [2: Seq].

------ Notes -----

• To set so as to Continuous function is selected at power-on, select [1: Cont] in [PwOn Mode] item.

.....

## 4.2.11 Sequence Control by CONTROL I/O

CONTROL I/O enables to start/stop/suspend/branch a sequence and to recall the memory. For details, see 4.18.1.

#### 4.2.12 Screen Overview

The Sequence function view is broadly separated into the Sequence Edit View and the Sequence Control View. It is Sequence Edit View that is displayed when sequence icon is selected from the root menu. After pushing [Compile] soft-key in Sequence Edit View, the screen transitions to the Sequence Control View.

------ Notes -----

You cannot transition to root menu by pushing the MENU key in the Sequence Control View.
 To transition to the root menu, first move to the Sequence Edit View and then push the MENU key.

------

■ Sequence Edit View

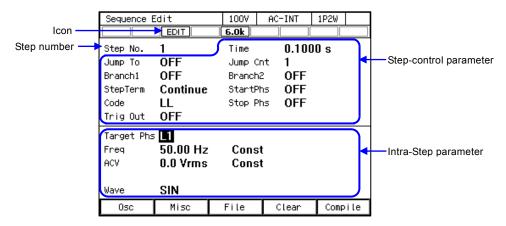


Figure 4-7 Sequence Edit View

■ Sequence Control View (output off state/sequence stopped)

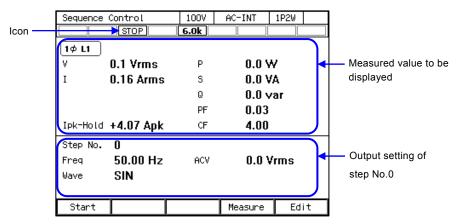


Figure 4-8 Sequence Control View (Output Off State)

■ Sequence Control View (output on state/sequence in execution)

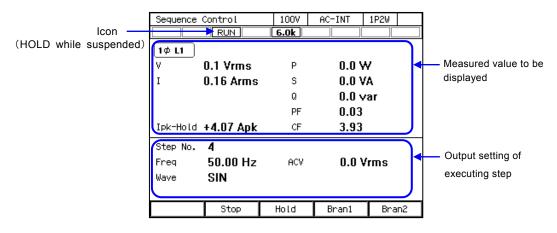


Figure 4-9 Sequence Control View (Output On State/Sequence in Execution)

Output setting of

step No.0

Sequence Control 1007 AC-INT 1P2W Icon STOP 6.0k 1Φ L1 0.1 Vrms 0.0 WMeasured value to be 0.16 Arms S 0.0 VA displayed Q 0.0 var PF 0.03 Ipk-Hold +4.07 Apk CF 4.00

■ Sequence Control View (output on state/sequence stopped)

50.00 Hz

SIN

Figure 4-10 Sequence Control View (Output On State/Sequence Stopped)

**ACV** 

0.0 Vrms

Edit

Measure

## 4.2.13 Change Output Parameter during Output ON

Step No.


Start


Freq


Wave

Frequency and voltage of step No.0 can be changed on Sequence Edit View and it can be used like Continuous output function. Remote Sensing function and Autocal function can be enabled. See 4.11 and 4.13 for detail of Remote Sensing function and Autocal function.

1. Select frequency and voltage, input them in the Sequence Edit View step No.0 and turn ON output, setting voltage will be output. Changing setting value, it will be applied soon.

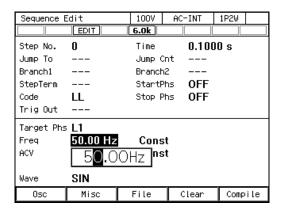


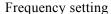

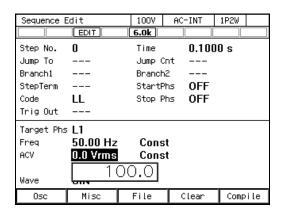

Voltage setting


2. When pushing [Compile] soft key in the Sequence Edit View, moved to Sequence Control View. You can check measurements in step No.0. When pushing [Start] soft-key, the sequence is started.

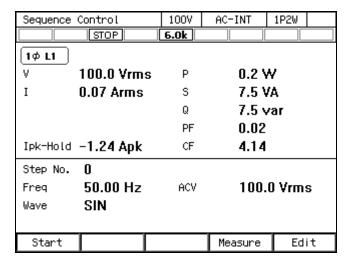



3. Remote Sensing function and Autocal function can be enabled in step No.0 in the Sequence Edit View and the Sequence Control View.

#### ■Turning on the Remote Sensing Function

- 1. Open the AGC/Autocal set window by shortcut operation: SHIFT + 5
- 2. Use the [Rmt Sense] item to set the Remote sensing function to on or off.
- 3. Close the window.

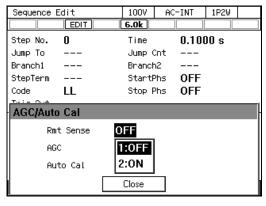

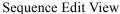


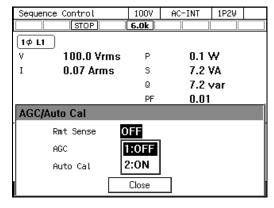


Sequence Control View

#### ■ Turning on the Autocal Function

- 1. Turn on the output.
- 2. Open the AGC/Autocal set window by shortcut operation: (SHIFT)+(5)
- 3. Use the [Rmt Sense] item to set the Remote sensing function to on or off if necessary.
- 4. Use the [Auto Cal] item to turn on the Autocal function. In case within operating range of Autocal when [ON] is selected here, the calibration factor of the Autocal function is calculated, and the calibration is started.
- 5. Close the window.

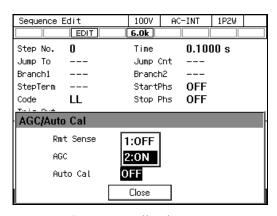

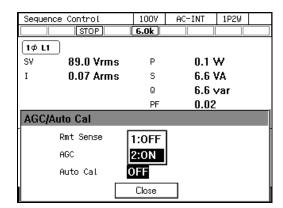

Sequence Edit View

Sequence Control View

#### ----- Notes ----

- The Remote Sensing Function or Autocal function can be set to on in the AC-INT, ACDC-INT and DC-INT modes. However, for the AC or ACDC mode, it can be set to on only when the waveform is a sine wave. If changing waveform to clipped sine wave when Remote Sensing setting is ON, Remote Sensing and Autocal setting is forcibly turned off.
- In ACDC mode Remote Sensing function and Autocal function cannot be enabled unless either AC voltage setting value or DC voltage setting value is 0 V. Also when such a setting is made by sequence memory recall, Remote Sensing and Autocal setting is forcibly turned off.
- Remote Sensing and Autocal setting is turned off if changing Output function or AC/DC mode. Turn on the setting if necessary.
- If changing setting by sequence memory recall or memory clear, the screen display will be changed, but the output will be applied after compile.

# 4.3 Using Power Fluctuation Testing (Simulation) Function

#### 4.3.1 Basics

The Power fluctuation testing (Simulation) function allows you to edit and output voltage patterns that simulate power line anomalies such as blackout, voltage rise, voltage drop, abrupt phase change, and abrupt frequency change. This section describes the basics for using the Simulation function.

#### AC/DC Mode and Signal Source

Simulation function sets the AC/DC mode and a signal source, independently from Continuous function/Sequence function. The setting is fixed to ACDC-INT.

#### Keep simulation setting file

The simulation setting is cleared when the power is turned off. To save the setting, you need to save it in internal memory or USB memory (see 4.9).

#### ■ Step

The output by the Simulation function consists of six types of steps: Initial, Normal 1, Trans 1, Abnormal, Trans 2, and Normal 2. Before the simulation starts, this product stands by at the Initial Step. During the simulation, the step changes in the order of Initial, Normal 1, Trans 1, Abnormal, Trans 2, and Normal 2. After the simulation ends, this product returns to the Initial Step and stands by.

#### Step parameter

Each parameter of Step Time, AC voltage, frequency, start phase, stop phase, trigger output, and synchronization output can be set for each step. However, some parameters cannot be set in some steps.

#### ■ Initial Step

Initial Step is assigned to the stand-by state before the simulation starts. This product also moves to the Initial Step and becomes stand-by state after the simulation ends, except when the repeat count is specified to 0 (= infinite count).

#### ■ Transition Step (Trans 1 and Trans 2)

The Step Times of Trans 1 and Trans 2 can be set to zero for simulating the abrupt voltage and phase changes. When the Step Time is set to the value other than zero, the set voltage and frequency are swept linearly at the previous and next steps. Note that the AC voltage, frequency, start phase, and Stop Phase cannot be set in the Transition Steps.

#### ■ Other issues

- The Exit operation is available during the simulation. Performing the Exit operation moves to the Initial Step. The output remains on.
- You can set the repeat on/off and repeat count for the simulation. When the repeat is set to on and the repeat count to zero (0), the testing repeats infinitely.

------ Notes -----

• The Simulation function does not support the standard tests defined by organizations such as IEC. Use this function for a preliminary testing.

#### 4.3.2 Simulation Function Parameters

Table 4-4 shows the parameters of Simulation function. The common parameters are common to one simulation. In the Simulation function, the signal source is fixed to INT sine wave and the ACDC mode to ACDC mode. When in polyphase, the balanced mode is always used. In each step, set the step-control parameter and the intra-Step parameter. As for intra-Step parameter, the range that can be set differ depending on the output range (100 V/200 V range) as in the case of Continuous function.

Common	Step-control parameter	Intra-Step parameter
parameter		
Output range	Step Time	Frequency
AC/DC mode	Start Phase	AC voltage
(Fixed to ACDC)	Stop Phase	
Waveform	Trigger output	
(Fixed to sine	Step sync code output (2bit)	
wave)	Repeat count (1 to 9999 or infinite)	

**Table 4-4 Simulation Function Parameters** 

#### ■ Relationship between each step and settable Step parameters

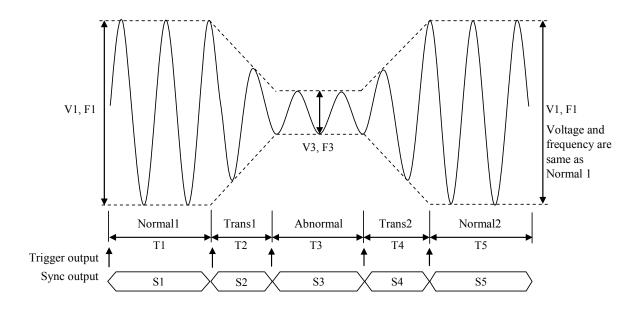


Figure 4-11 Simulation Function Steps

Initial Normal 1 Trans 1 Abnormal Trans 2 Normal 2 Step T2 T3 T4 T5 Step time T1 V0AC voltage V1 V3 -(=V1)F3 F0 F1 -(=F1)Frequency ON/OFF ON/OFF ON/OFF ON/OFF Start phase P0 P3 P5 P1 ON/OFF ON/OFF ON/OFF ON/OFF Stop Phase Q0Q1 Q3 O5 ON/OFF ON/OFF ON/OFF ON/OFF ON/OFF Trigger output Sync code S0**S**1 S2 S3 **S**4 S5

**Table 4-5 Simulation Function Steps and Settable Step Parameters** 

Note: "—" means that this parameter cannot be set.

#### ■ Start phase (Start Phs)

output

ON or OFF can be selected for the start phase. When ON is selected, the step starts at the specified start phase. When OFF is selected, the step starts at the phase in which the previous step ended. When selecting ON, a numerical entry box in which you can specify the start phase opens.

The start phase can be set at the Normal 1, Normal 2, and Abnormal steps. For other steps, the start phase is fixed to OFF and cannot be specified.

#### ■ Stop phase (Stop Phs)

ON or OFF can be selected for the stop phase. When ON is selected, the step ends at the specified stop phase. If the phase is not the specified stop phase after the Step Time elapsed, the execution continues the output of that step until reaching the specified Stop Phase, then performs the next step. When OFF is selected, the step transitions to the next step when the Step Time has elapsed regardless of the phase. When selecting ON, a numerical entry box in which you can specify the stop phase opens.

The stop phase can be set at the Normal 1, Normal 2, and Abnormal steps. For other steps, the stop phase is fixed to OFF and cannot be specified.

#### ■ Trigger output (Trig Out)

State output to CONTROL I/O connector. This specifies whether the trigger output presents when the step starts. Polarity and pulse width of the trigger output complies with the trigger output setting (see 4.3.5). At the Initial Step, the trigger output cannot be specified and thus no trigger is output.

#### ■ Step sync code output (Code)

State output to CONTROL I/O connector. Code to output while the execution of the step, which is specified by 2-bit H/L. The step synchronization code can be specified also at the Initial Step.

#### ■ Repeat (Repeat)

You can set to repeat the simulation in a series from the Normal 1 step to the Normal 2 step. Specify the ON or OFF of repeat and the repeat count. When Repeat is set to ON, the simulation repeats for the specified count. The simulation in a series is repeated for the repeat count + 1. Setting the repeat count to zero (0) means an infinite count. When Repeat is set to OFF, this product executes the simulation only once and finishes it without performing the repeat operation.

#### 4.3.3 **Output Examples Using Simulation Function**

#### ■ Voltage dip simulation

In this simulation, the 50 Hz 100 V power source repeats a 70 % voltage dip for 0.5 seconds three times at 10-second intervals as shown in Figure 4-12. For this case, set so that the total of Normal 1 and Normal 2 Step Times becomes 10 seconds and set the repeat count to 3. Set the Trans 1 and Trans 2 Step Times to zero (Table 4-6).

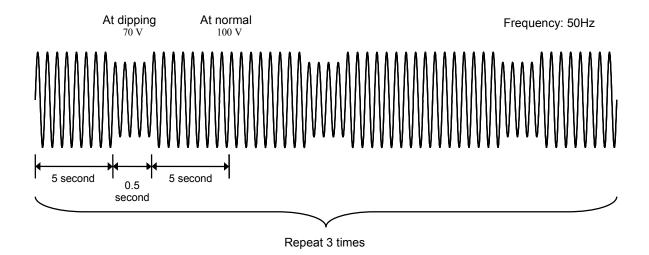


Figure 4-12 Voltage Dip Simulation Example

Step Initial Normal 1 Trans 1 Abnormal Trans 2 Normal 2 Step Time 5 s 0 s0.5 s0 s5 s 100 V 100 V AC voltage 70 V Frequency 50 Hz 50 Hz 50 Hz Start phase **OFF** OFF **OFF OFF** Stop Phase **OFF** OFF **OFF** OFF Repeat count

**Table 4-6 Voltage Dip Simulation Edit Example** 

2 times

#### ■ Voltage change simulation

In this simulation, the 50 Hz 100 V power source repeats the voltage change three times at 10-second intervals, while the voltage drops to 70 % and then linearly recovers in 0.5 seconds during one cycle as shown in Figure 4-13. For this case, set so that the total of Normal 1 and Normal 2 Step Times becomes 10 seconds and set the repeat count to 3. Set the Trans 1 Step Time to zero (Table 4-7).

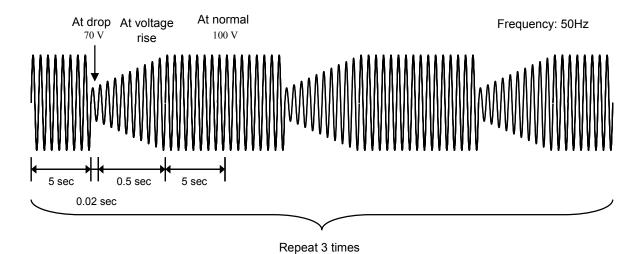


Figure 4-13 Voltage Change Simulation Example

**Table 4-7 Voltage Change Simulation Edit Example** 

Step	Initial	Normal 1	Trans 1	Abnormal	Trans 2	Normal 2
Step Time		5 s	0 s	0.02 s	0.5 s	5 s
AC voltage	100 V	100 V		70 V		
Frequency	50 Hz	50 Hz	_	50 Hz		_
Start phase	OFF	OFF		OFF		OFF
Stop Phase	OFF	OFF	_	OFF		OFF
Repeat count	2 times					

### 4.3.4 Process Flow in a Step

Figure 4-14 shows the process flow in one step. The End operation causes the transition as shown in Figure 4-15.

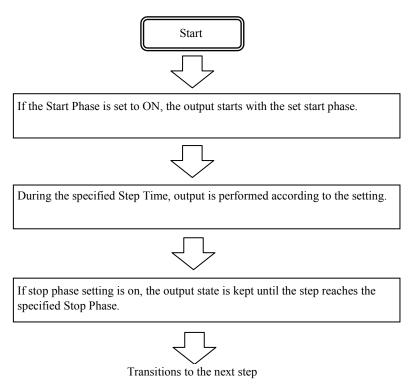


Figure 4-14 Process Flow through Simulation Steps

When simulation stop operation is executed, the execution transitions to Initial Step Step.

Transitions to the Initial Step = End of simulation

Figure 4-15 Stop Operation


## 4.3.5 Editing Simulation

----- Notes -----

- When the power is turned off, edited contents of the simulation are cleared, and all simulations have the default setting values when it is started next time. To keep the edited contents of simulation, save them in the Simulation Memory (see 4.3.8).
- When a simulation is loaded from memory, the simulation you are editing is discarded.
- You can also turn on output on the Simulation Edit View. In this case, the output will be set to the state set in the initial step when Power Fluctuation Testing was last compiled (see 4.3.7).

#### ■ Transition to Simulation Edit View


Press the MENU key to open the root menu, then select [Simulation] (see 3.3.1). While the Simulation Control View is displayed, if you push the [Edit] soft-key, the execution transitions to the Simulation Edit View.

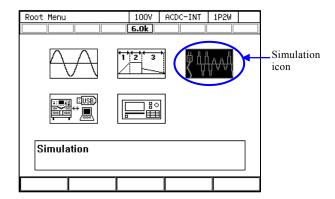


Simulatio	on Control	1007	ACDC-INT	1P2W
	STOP	6.0k		
1φ L1				
٧	0.3 Vrms	Р	0.0	W
I	0.08 Arms	S	0.0	VA
		Q	0.0	var
		PF	0.09	
Ipk-Hold	+0.31 Apk	CF	4.03	1
State	Initial			
ACV	0.0 Vrms			
Freq	50.00 Hz			
Wave	SIN	Code	LL	
Start			Measure	Edit

#### ■ Creating (editing) a simulation


1. In the Simulation Edit View, press the [Osc] soft-key, and then select 100 V or 200 V range. To create a new simulation from an existing one, load the existing one (see 4.3.6).

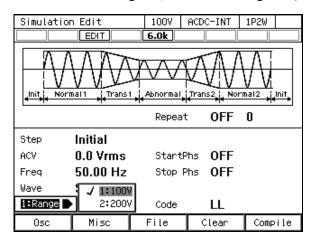


2. Set the parameter of each step. You can move between each step by changing [Step] item.

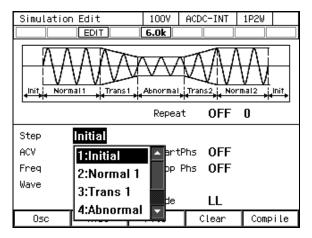


3. You can select s or ms as the unit of Step Time by selecting [Misc] soft-key  $\rightarrow$  [1: TimeUnit].

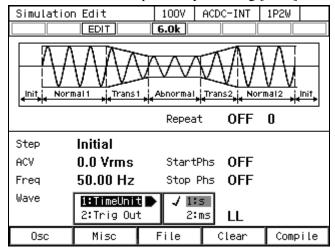

4. You can set polarity of trigger output and pulse width by selecting [Misc] soft-key → [2: Trig Out].

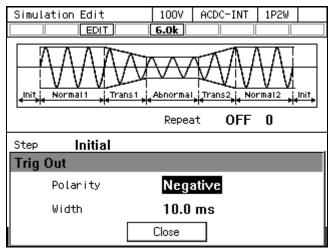

5. Press the [Clear] soft-key to clear all the steps you are editing and return to the factory default.

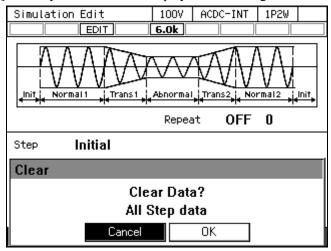


## 4.3.6 Loading a Simulation

----- Notes -----


- When a simulation is loaded, the simulation you are editing is discarded.
- Simulation cannot be loaded in the Simulation Control View.

■ Load the simulation stored in the internal memory


1. In Simulation Edit View, select [File] soft-key  $\rightarrow$  [2: Recall]. The Simulation Recall View opens.

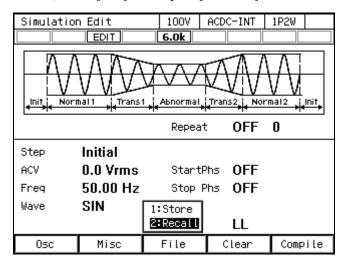


2. In the [From] item, select [1: System].

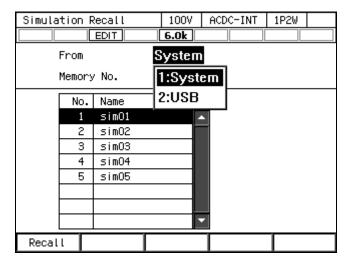

3. Specify the memory number of simulation to be loaded in [Memory No.] item, and then push [Recall] soft-key.

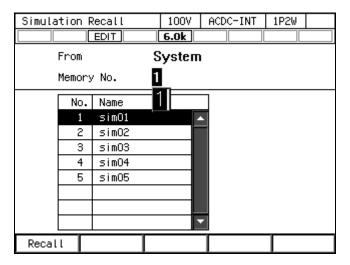


**4.** The confirmation window for loading the simulation opens. Select [OK]. The simulation with the specified memory number is loaded.

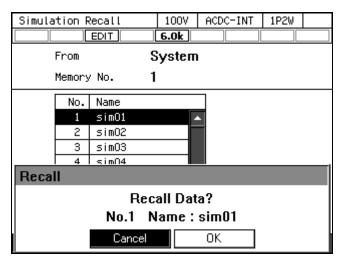


■ Load the simulation stored in the USB memory

For how to connect USB memory to this product, and how to disconnect from this product, see 4.9.


1. In Simulation Edit View, select [File] soft-key  $\rightarrow$  [2: Recall]. The Simulation Recall View opens.

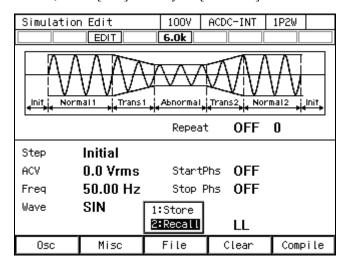

2. In the [From] item, select [2: USB].

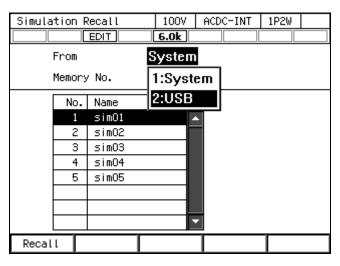


3. In the data list box, select the simulation to load.

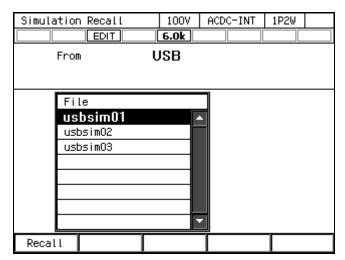

114

- 4. Push the [Recall] soft-key.
- 5. The confirmation window for loading the simulation opens. Select [OK]. The specified simulation data is loaded.

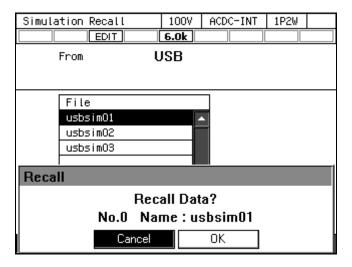

----- Notes

 The number of simulation data files saved in a USB memory should be 500 or less. If the number of files exceeds this limit, this product cannot recognize the simulation data files in the USB memory.


-----

## 4.3.7 Executing Simulation

The edited simulation can be executed after converted to executable program by compile operation.

■ Transition to Simulation Edit View

When pushing [Compile] soft-key in the Simulation Edit View, the edited power fluctuation is compiled, and then the screen transitions to Simulation Control View. If output is turned on in the Simulation Edit View, the output transitions to the state set in the initial step, at the same time as compiling.

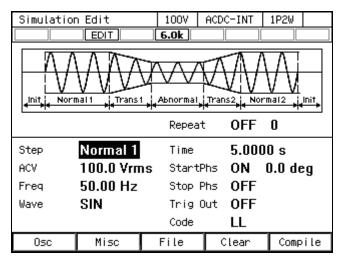

----- Notes -----

• If an error setting is detected during compilation, an error message is displayed and the screen does not transition to the Simulation Control View.

#### ■ Starting/ending a simulation

1. If output is turned off in the Simulation Edit View, the Power Fluctuation Test can be executed when output is turned on in the Simulation Control View. At this point, the output is in the state set in the Initial Step.

When a simulation is stopped, the **STOP** icon is displayed.

Simulation Control		1007	ACDC-INT	1P2W	
	STOP	6.0k			
1φ L1					
٧	0.1 Yrms	Р	0.0 \	W	
I	0.04 Arms	S	s 0.0 VA		
		Q	0.0 v	/ar	
		PF	1.00		
Ipk-Hold	-39.20 Apk	CF	4.23		
State	Normal 1	Time	5.00	00 s	
ACV	100.0 Yrms	Start	tPhs <b>0.0</b> 0	0.0 deg	
Freq	50.00 Hz				
Wave	SIN	Code	LL		
Start			Measure	Edi	it

2. Press the [Start] soft-key to start the simulation. While the simulation is executed, icon RUN is displayed.

Simulation Control		1007	ACDO	-INT	1P2W		
	RUN	[	6.0k				
1φ L1							
٧	100.0 Vrm:	S	Р		2750	W	
I	27.51 Arm:	S	S		2750	) VA	
			Q		10.0	var	
			PF		1.00		
Ipk-Hold	-39.35 Apl	k	CF		1.42		
State	Normal 1		Time		5.00	00 s	
ACV	100.0 Vrn	ıs	Star	tPhs	0.0	deg	
Freq	$50.00\ Hz$						
Wave	SIN		Code		LL		
	Stop			Г		Т	

3. When [Stop] soft-key is pushed while simulation is executed, the execution transitions to the output that is set in the Initial Step, and then simulation is terminated.

Simulation Control		1007	ACDC-INT	1P2W		
	STOP	6.0k				
1φ L1						
٧	0.1 Vrms	Р	0.0 Y	٧		
I	0.04 Arms	S	0.0 V	0.0 VA		
		Q	0.0 v	'ar		
		PF	1.00			
Ipk-Hold -39.35 Apk		CF	3.67			
State	Initial					
ACV	0.0 Yrms					
Freq	50.00 Hz					
Wave	SIN	Code	LL			
Start			Measure	Edi	it	

------ Notes -----

- In the output off state, the simulation cannot be started.
- The output on/off phase setting is invalid for the Simulation.

\_\_\_\_\_

■ Returning to Simulation Edit View

If you push the [Edit] soft-key, the execution transitions back to the Simulation Edit View.


## 4.3.8 Saving Simulation

------ Notes -----


• Simulation cannot be saved in the Simulation Control View.

\_\_\_\_\_


- Saving the simulation in the internal memory
  - 1. In the Simulation Edit View, press the select the [File] soft-key [1: Store]. The Simulation Store View opens.

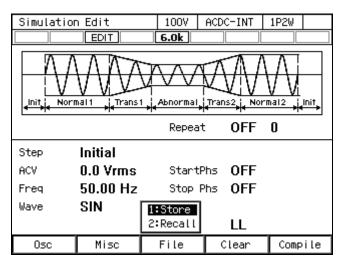


2. In the [To] item, select [1: System].

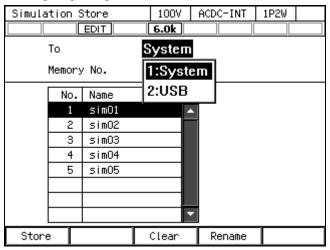

3. Specify the memory number of location to save in [Memory No.] item, and then push [Store] soft-key.

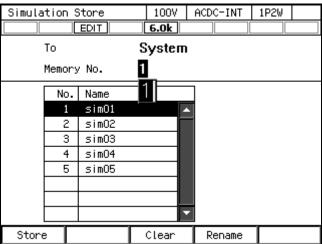


4. A window to confirm the save name opens. Enter the name, and then select [OK]. For how to enter a string, see 3.3.6.

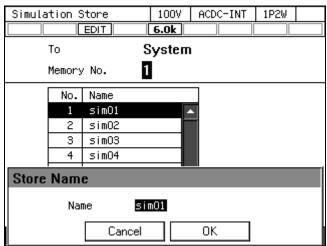


Saving the simulation in the USB memory

For how to connect USB memory to this product, and how to disconnect from this product, see 4.9.


1. In the Simulation Edit View, press the select the [File] soft-key - [1: Store]. The Simulation Store View opens.

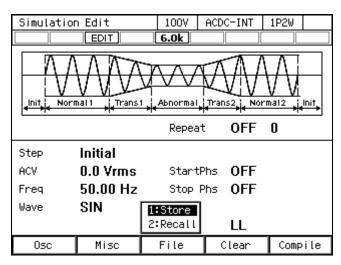


2. In the [To] item, select [2: USB].

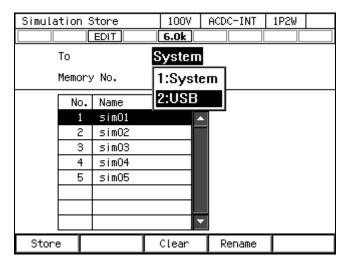

3. Push [New] soft-key to save for the first time. To overwrite the existing data, select the data to be overwritten in data list box, and push [Store] soft-key.

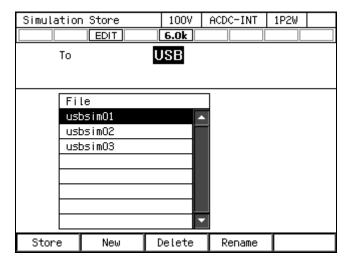

4. A window to confirm the save name opens. Enter the name, and then select [OK]. For how to enter a string, see 3.3.6.

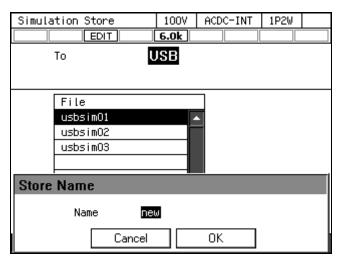


----- Notes -----

• The number of simulation data files saved in a USB memory should be 500 or less. If the number of files exceeds this limit, this product cannot recognize the simulation data files in the USB memory.


\_\_\_\_\_\_

#### 4.3.9 Clear/Rename Simulation


- Clearing/renaming a simulation saved in internal memory
  - 1. In the Simulation Edit View, press the select the [File] soft-key [1: Store]. The Simulation Store View opens.

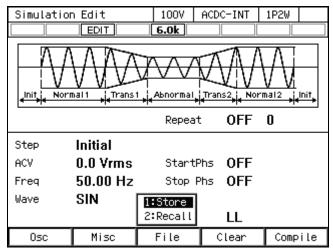


2. In the [To] item, select [1: System].

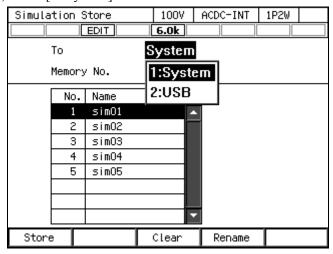


3. Set the number of memory to be operated in [Memory No.] item.

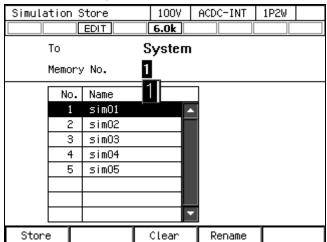

4. To clear, push [Clear] soft-key. Confirmation message is displayed. Select [OK]. In the cleared number of the memory, the simulation data at factory shipment is stored.

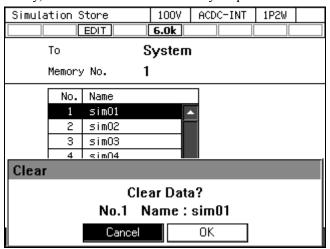


5. To rename, push [Rename] soft-key. Rename window opens. Enter a new name and then select [OK]. For how to enter a string, see 3.3.6.

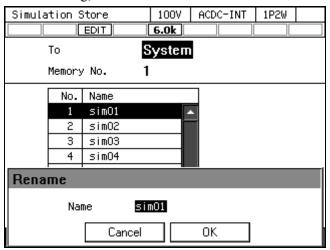


■ Erasing/renaming a simulation saved in USB memory

For how to connect USB memory to this product, and how to disconnect from this product, see 4.9.


1. In the Simulation Edit View, press the select the [File] soft-key - [1: Store]. The Simulation Store View opens.

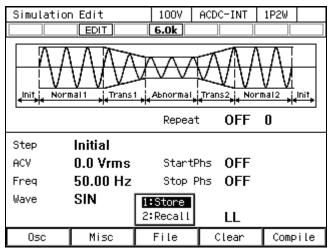


2. In the [To] item, select [2: USB].

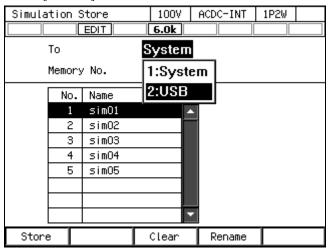


3. Select the data that is the target of the operation in the data list box.

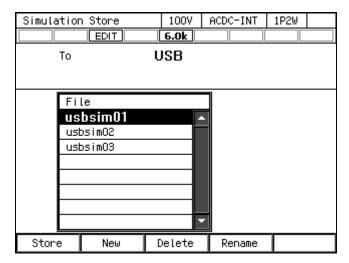

4. To clear, push [Delete] soft-key. Confirmation message is displayed. Select [OK]. The corresponding file in USB memory is deleted.

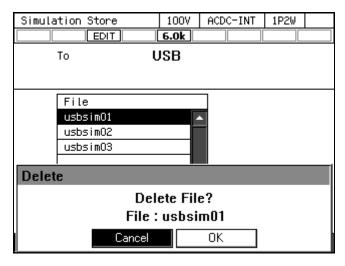

5. To rename, push [Rename] soft-key. Rename window opens. Enter a new name and then select [OK]. For how to enter a string, see 3.3.6.

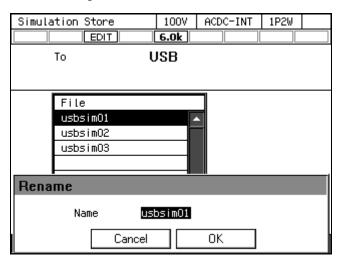


#### 4.3.10 Set so as the Simulation Function is Selected at Power-on


You can set so as the Simulation function is selected at power-on.

#### ■ Operation procedure

1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

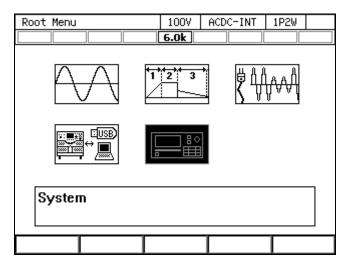

2. In [PwOn Mode] item, Select [3: Sim].

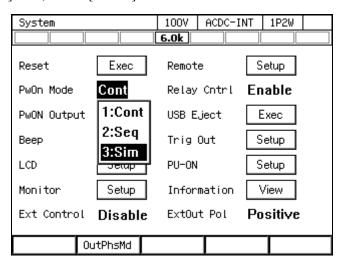

--- Notes -----

• To set so as to Continuous function is selected at power-on, select [1: Cont] in [PwOn Mode] item.

-----

#### 4.3.11 Simulation Control by CONTROL I/O

CONTROL I/O enables to start/stop a simulation and to recall the memory. For details, see 4.18.1.

#### 4.3.12 Screen Overview

The Simulation function screen is broadly divided to the Simulation Edit View and the Simulation Control View. The Simulation Edit View opens when you select the power fluctuation testing (Simulation) icon from the root menu. After pushing [Compile] soft-key in Simulation Edit View, the screen transitions to the Simulation Control View.

------ Notes ------

You cannot transition to root menu by pushing the MENU key in the Simulation Control View.
 To transition to the root menu, first move to the Simulation Edit View and then push the MENU key.

------

#### ■ Simulation Edit View

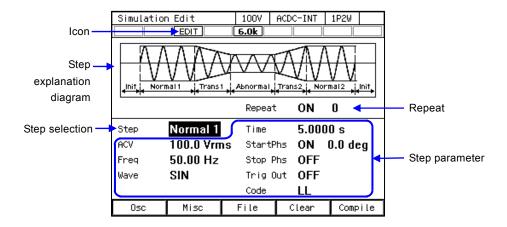


Figure 4-16 Simulation Edit View

■ Simulation Control View (output off state, simulation stopped)

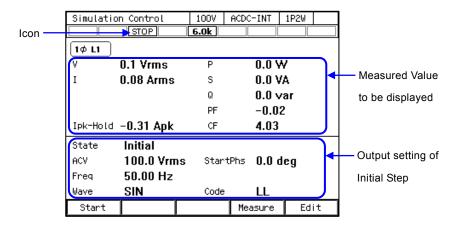


Figure 4-17 Simulation Control View (Output Off State, Simulation Stopped)

■ Simulation Control View (output on state, simulation running)

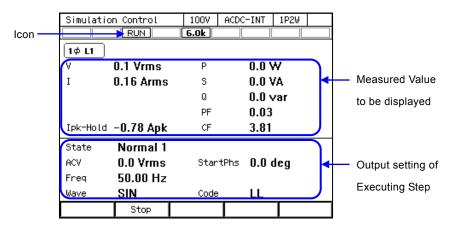


Figure 4-18 Simulation Control View (Output On State, Simulation Running)

■ Simulation Control View (output on state, simulation stopped)

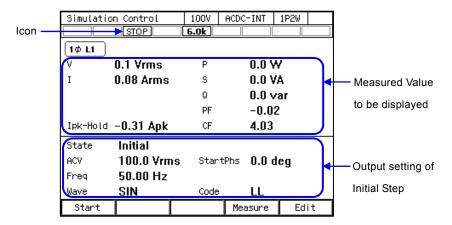


Figure 4-19 Simulation Control View (Output On State, Simulation Stopped)

## 4.4 Measuring Harmonic Current

### 4.4.1 Harmonic current

Some electric devices of AC power input have its input current waveform greatly distorted from the sine wave. When the power input section uses a capacitor input type rectifier circuit, the input current typically distorts as shown in Figure 4-20. A waveform distorted like this contains many harmonic components. If a current with many harmonic components is supplied to the power line in high volume, the line voltage is distorted, causing problems such as malfunction of devices and overheated transformer which may result in accidents.

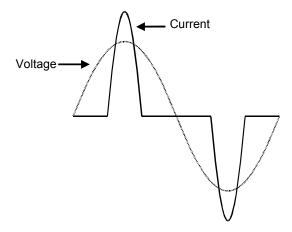


Figure 4-20 Current Waveform Containing Many Harmonic Components

#### **4.4.2** Basics

Harmonic current measurement function is available only for the Continuous function, AC-INT, and set frequency of 50 Hz or 60 Hz.

The harmonic current components up to order 40 are displayed as the RMS and a percentage to fundamental wave component.

------ Notes ------


• The Harmonic current measurement function does not support the standard tests defined by organizations such as IEC. Use this function for a preliminary testing.

------

# 4.4.3 Measured Value Display Method

### ■ Operation procedure

1. In the Continuous function, select the [Measure] soft-key  $\rightarrow$  [3: Harmonic].

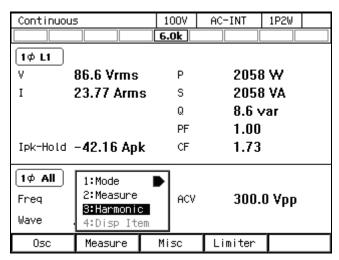

2. The view opens populated with the measured harmonic components of order 1 to 10.

Harmonic Current View	100V AC-INT		1P2W
	6.0k		
1φ L1 Harmonic	I(rms)	n th	/ 1st
1st	23.56	6 A .	100.0 %
2nd	0.01	Α	0.0%
3rd	2.62	2 A	11.1 %
4th	0.00	) A	0.0%
5th	0.94	1 A	4.0 %
6th	0.00	) A	0.0%
7th	0.48	3 A	2.1 %
8th	0.00	) A	0.0%
9th	0.29	λ	1.2 %
10th	0.00	) A	0.0%
		Prev	Next

3. Press the [Next] soft-key to display the measured values for order 11 to 20. Press the [Prev] soft-key to return to the original view. Switch the view in the same manner for the measured values over order 21.

Harmonic Current View	100V	AC-INT	1P2W	
	6.0k			
1φ L1 Harmonic	I(rms)	n th	/ 1st	
21th	0.0	5 A	0.2	%
22th	0.0	0 A	0.0	%
23th	0.0	5 A	0.2	%
24th	0.0	0 A	0.0	%
25th	0.0	4 A	0.2	%
26th	0.0	0 A	0.0	%
27th	0.0	3 A	0.1	%
28th	0.0	0 A	0.0	%
29th	0.0	3 A	0.1	%
30th	0.0	0 A	0.0	%
		Prev	Nex	ct

4. Press the CANCEL key to return to the Continuous function view.

# 4.5 Measuring Inrush Current

### 4.5.1 Inrush Current

On an electric device using a capacitor input type rectifier circuit for power input, an excessive current in comparison to the Normal state may flow for a short period of time immediately after the start of power supply. This current is called inrush current. If such a big current flows to the power line, the supply voltage may drop due to the impedance of the power line. Therefore, the inrush current is restricted below a certain level in some standards.

Figure 4-21 shows the inrush current waveform of a small electric drill. The inrush current flows at 14 A peak, which is about four times of the rated current of 3.5 A.

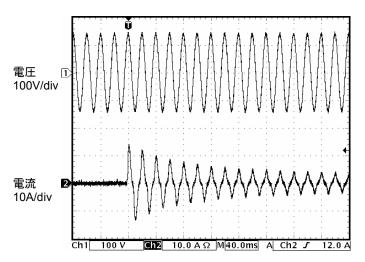


Figure 4-21 Inrush Current Example

It is necessary for an electric device with a large inrush current to use a power source with a sufficient current supplying capability. With a power source that cannot supply a sufficient inrush current, some electric devices may not start as they are not supplied with necessary power.

This product has the ability to supply peak current up to four times of the RMS rating in DP060LM / DP120LM and three times of the RMS rating in DP180LM. You can measure the maximum inrush current value using the current peak-hold function of the product.

#### 4.5.2 **Basics**

- Output current peak-hold function holds either a positive or negative peak value, whichever is larger in absolute value.
- Current peak-hold value is displayed in all of the Average, RMS, and Peak measurement views in the Normal View.
- Clearing function for the current peak-hold value is provided. The clear operation clears the current peak-hold value (all phases) to 0 Apk.

------ Notes -----


• The peak hold value starts to update again immediately after the clear operation. The clear operation may not turn the current peak-hold value to 0 Apk even when no current is being output, because of noise or other reasons.

\_\_\_\_\_\_

### 4.5.3 Measurement Method

#### Operation procedure

- 1. Before turning on the output, clear the current peak-hold value. Following two methods are available.
- (a) Shortcut operation: SHIFT + +/-
- (b) Select the [Measure] soft-key  $\rightarrow$  [2: Measure]. Hover the cursor over [Exec] of the [Ipk-H Clr] item and press the ENTER key.

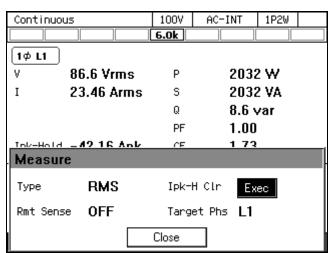

- 2. Turn on the power switch of the object to be measured.
- 3. Turn on the output.
- 4. Read current peak-hold value (Ipk-Hold). This is the maximum inrush current value.

### 4.5.4 Measurement Tips

- You can see the difference among inrush currents at each power-on phase by changing the phase setting at output on (see 3.4.8) before turning on the output.
- The object inrush current cannot be measured correctly when the maximum peak current exceeds the one that can be supplied by this product or the peak current limiter is activated.
- Correct peak value measurement may not be accomplished for a very small load impedance, such as when there is a short at the output terminal.

# 4.6 Using Clipped Sine Wave

Clipped sine wave is the waveform that has its sine wave peak clipped as shown in Figure 4-22. This product can select the clipped sine wave as the output waveform.

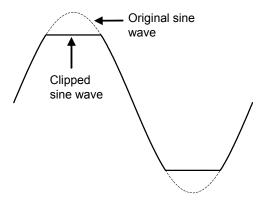


Figure 4-22 Clipped Sine Wave

The depth of clip is set using the crest factor or clip ratio. Each of them is defined by the following expression. The clip ratio is set in percentage.

Crest factor = Peak value/RMS value

Clip ratio = Clipped sine wave peak value/Original sine wave peak value

As shown in Table 4-8, the output voltage setting method differs depending on the clip depth setting method. Therefore, a clip ratio less than 100 % makes the output voltage smaller than the setting.

Table 4-8 Different Output Voltage Settings Depending on Clip Depth Setting Method


Clip Depth Setting Method	Output Voltage Setting Method
Crest factor	Sets the RMS of the clipped waveform
Clip ratio	Sets the RMS of the sine wave before clipping

----- Notes -----


 When the clipped sine wave is output in the AC mode, the clip of the output waveform may be tilted by the DC component remove function in the AC mode. To avoid this, switch to the ACDC mode.

### Operation procedure


1. In the [Wave] item, select [CLP].

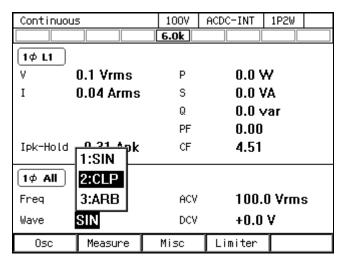


2. Move the cursor to [Select], then select it. The clipped sine wave setting window opens.

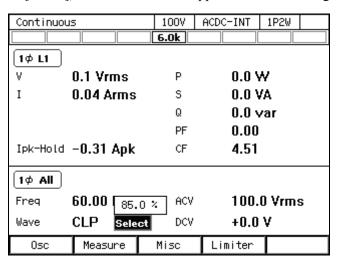


3. In the [No.] item, select the clipped sine wave to load.

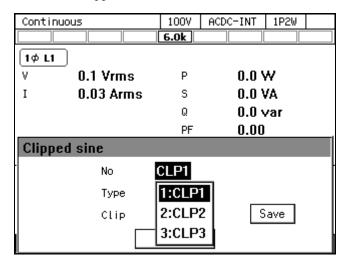


4. In the [Type] item, select [1: Clip] (clip ratio) or [2: CF] (crest factor).

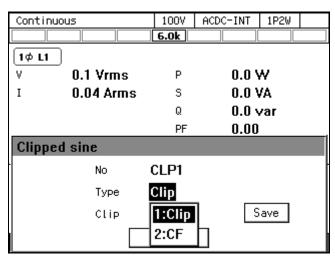

5. In the [CF] (or [Clip]) item, enter the crest factor (or clip ratio).

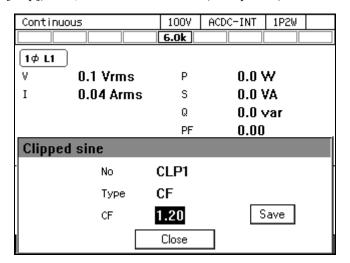

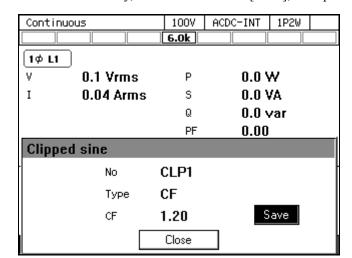

6. To save the set content into memory, move the cursor to [Save], then press the ENTER key.

7. Move the cursor to [Close], then press the ENTER key. The clipped sine wave setting window closes.

------ Notes -----

- Executing [Save] saves all the settings from CLP1 to CLP3 into the internal memory.
- Settings not saved in the internal memory are lost when the power is turned off.
- The clip ratio setting value and the crest factor setting value are held independently of each other. The setting value switch as the Type is changed. Each setting value is saved per waveform when the settings are saved into the internal memory.
- The clipped sine wave memory cannot be cleared (to the factory defaults). Manually set to the factory default settings of Clip = 100 %, CF = 1.41, Type = Clip, then save them.

# 4.7 Outputting Arbitrary Waveform

#### **4.7.1** Basics

Arbitrary waveform can be selected as the output waveform with this product. Using the control software Wave Designer in the attached CD-ROM, you can create, edit, and transfer arbitrary waveforms to this product's internal memory through the USB interface. Alternatively, you can create and save the arbitrary waveform data in a USB memory and then transfer it to the internal memory of this product through this product's panel operation. Up to 16 types of arbitrary waveforms can be saved in the internal memory. For Wave Designer, Refer to the instruction manual of the control software.

------ Notes -----

Arbitrary waveform cannot be created and edited through the panel operation of this product.

### 4.7.2 Arbitrary Waveform Creation Procedure

Refer to the instruction manual of the control software.

### - ⚠ CAUTION

• When outputting an arbitrary waveform in the polyphase model, pay attention not to allow currents over the maximum current per phase to flow through the N terminal which is an output terminal (see 11.6 and 11.7).

## 4.7.3 Arbitrary Waveform Creation Example


Refer to the instruction manual of the control software.


# 4.7.4 Transferring Arbitrary Waveform

- Transfer procedure using Wave Designer Refer to the instruction manual of the control software.
- Transfer procedure using USB memory
  - 1. Save the waveform data file (extension ARB) created with Wave Designer, the control software in the attached CD-ROM, to the NF TOOL\(\frac{1}{2}\)NF DP\(\frac{1}{2}\)ARB DATA folder of the USB memory.


------ Notes -----

- This product does not support the double-byte characters (e.g. kanji, hiragana). The file name should consist of one byte alphanumeric characters.
- When the NF\_TOOL\[2014]NF\_DP\[2014]ARB\_DATA folder does not exist in your USB memory, first connect the memory to this product. The NF\_TOOL folder is automatically created containing sub folders within it.
- 2. Connect the USB memory that has the waveform data to this product.
- 3. Press the MEMORY key, or press the MENU key to move to the root menu and then select [Memory], to move to the Memory View. Select ARB Copy.

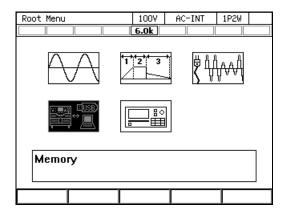


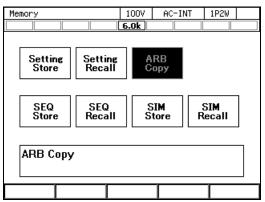


4. In the [Direction] item, select [2: USB→SYS].

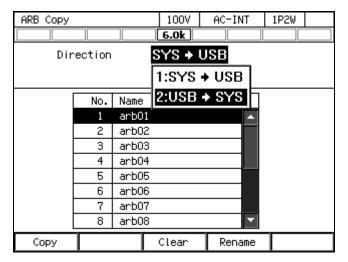


5. In the [Memory No.] item, specify the transfer destination internal memory number.

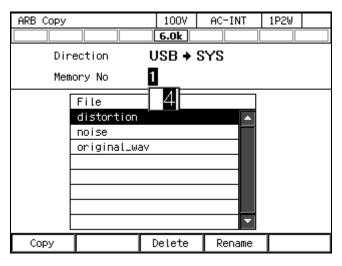


6. From the data list box, select the arbitrary waveform to transfer.

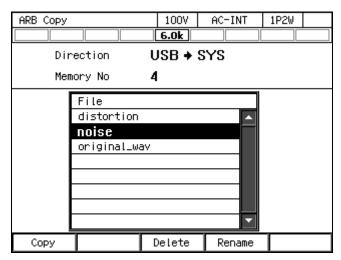


7. Push the Copy soft-key. The [Copy] window opens.

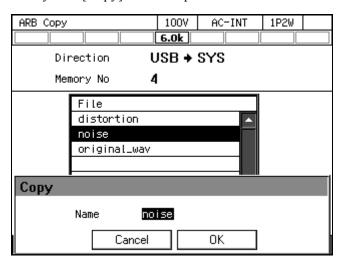

8. In the [Name] item, enter the arbitrary waveform data name. Or, leave it as populated which is same as the file name in the USB memory.

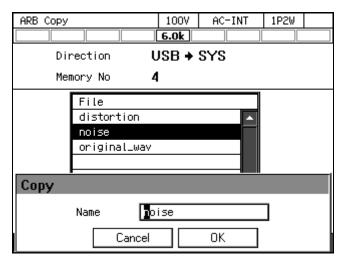


9. Move the cursor to [OK], then press the ENTER key. The window is closed.

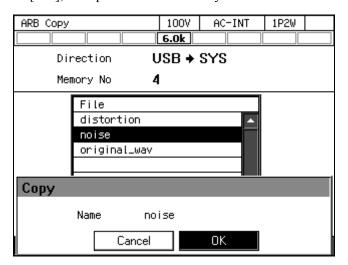


## 4.7.5 Outputting Arbitrary Waveform


- Operation Method
  - 1. In the [Wave] item, select [ARB].

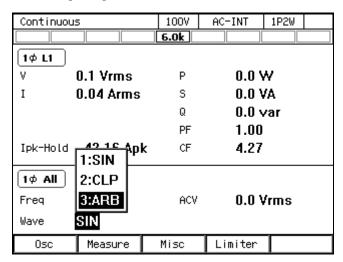

2. Move the cursor to [Select], then select it. The setting window for the arbitrary waveform opens.

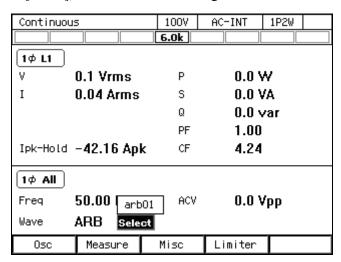

3. From the data list box, select the arbitrary waveform to output.

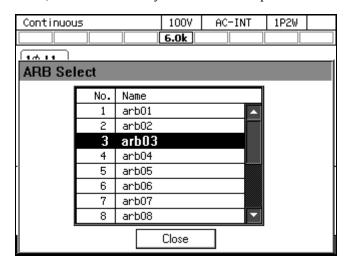

- 4. Move the cursor to [Close], then press the ENTER key. The arbitrary waveform setting window closes.
- 5. Set the frequency and output voltage. Turn on the output. Set the arbitrary waveform output voltage in the [ACV] item using Peak-to-Peak value.

------ Notes -----

• ACV is the setting relative to the full scale amplitude of the arbitrary waveform data. When the arbitrary waveform data amplitude is not at full scale, the output voltage amplitude becomes smaller than the ACV setting.


\_\_\_\_\_\_

# 4.8 Using Memory Function


Using the Memory function, you can access this product's internal memory and USB memory to save, load, clear, and rename the basic setting, arbitrary waveform, sequence, and simulation.

### Opening the Memory View

1. Press the MENU key to move to the root menu, then select [Memory] (or press the MEMORY key on the Continuous function screen).

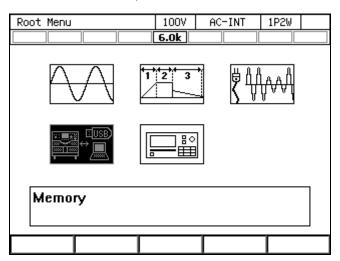

### 2. The Memory View opens.

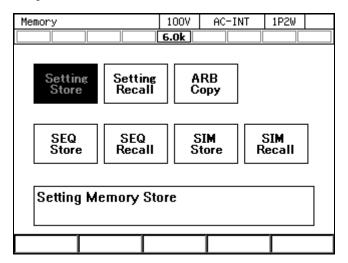

## 4.8.1 Basic Setting Memory

(e.g. AC/DC mode, signal source, output range, AC setting, DC setting, current limiter, setting range limit). User is required to perform some operations to save these settings into the Basic Setting Memory. Both the internal and USB memories can be selected as the Basic Setting Memory. There are 31 internal Basic Setting Memories for each output phase configuration from No. 0 to No. 30. The memory No. 0 stores the factory defaults. The internal memory No. 1 settings are loaded at power-on of this product. User can save the settings to the memories from No. 1 to No. 30. Clearing a Basic Setting Memory resets it to the factory defaults (same as the one of No. 0). Clearing

The Basic Setting Memory collectively stores the output-related settings in the Continuous function

For the set content saved in the Basic Setting Memory and factory defaults, see 11.25.

a Basic Setting Memory in the USB memory deletes the applicable file in the USB memory.


------ Notes -----

• The Basic Setting Memory content cannot be copied directly between the internal and USB memories. To copy them, load them first, then save to a new destination.


- No overwrite confirmation message is displayed when you attempt to save under the same name as for the data that exists on the USB memory.
- The number of basic setting data files saved in a USB memory should be 500 or less. If the number of files exceeds this limit, this product cannot recognize the basic setting data files in the USB memory.

.....

- Saving to a Basic Setting Memory (how to save the output-related settings in the Continuous function)
  - 1. Press the MEMORY key on the Continuous function screen or select [Memory] from the root menu to move to the Memory View.
  - 2. Select Setting Store.

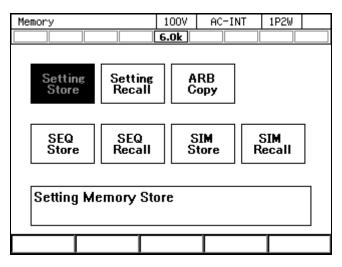



3. For the [To] item, select the destination [1: System] (internal memory) or [2: USB] (USB memory).

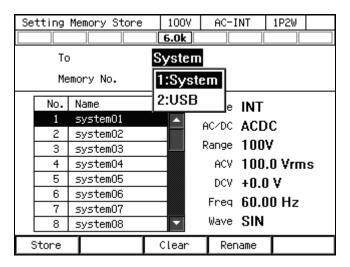

- 4. Specify the destination.
- (a) For the internal memory, specify the destination memory number in the [Memory No.] item, then press the [Store] soft-key.

(b) In the case of USB memory, push [New] soft-key to save for the first time. To overwrite the existing data, select the data to be overwritten in data list box, and push [Store] soft-key.

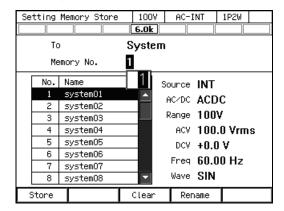


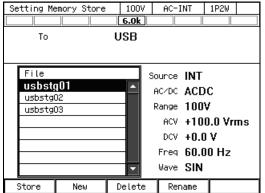


Internal memory


USB memory

5. A window to confirm the save name opens. Enter the name, and then select [OK]. For how to enter a string, see 3.3.6.

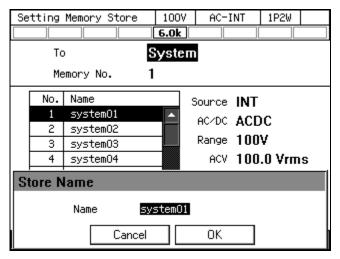


- Loading from a Basic Setting Memory
  - 1. In the Memory View, select [Setting Recall].

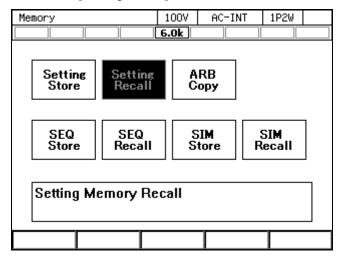


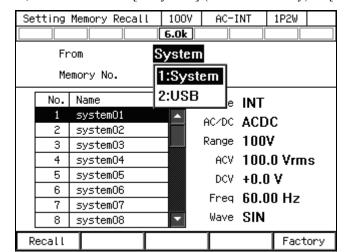

2. In the [From] item, select the source [1: System] (internal memory) or [2: USB] (USB memory).

- 3. Specify the data to load.
- (a) For the internal memory, specify the memory number in the [Memory No.] item, then press the [Recall] soft-key.
- (b) For the USB memory, in the data list box, select the data to load, then press the [Recall] soft-key.

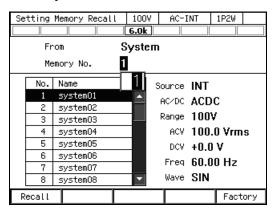


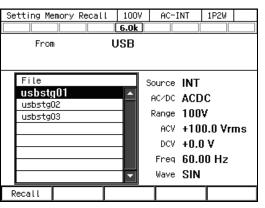


Internal memory

USB memory


4. In the confirmation window that opens, select [OK].

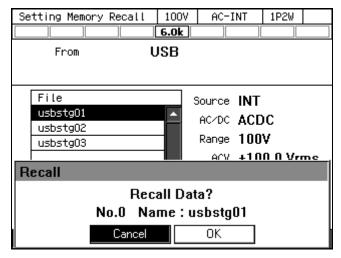


- Clearing, erasing, or renaming a Basic Setting Memory
  - 1. In the Memory View, select [Setting Store].

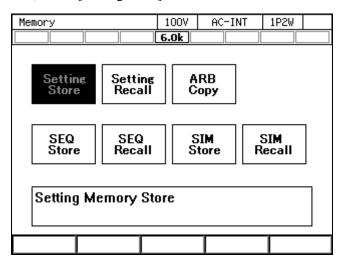


2. In the [To] item, select the object to operate [1: System] (internal memory) or [2: USB] (USB memory).

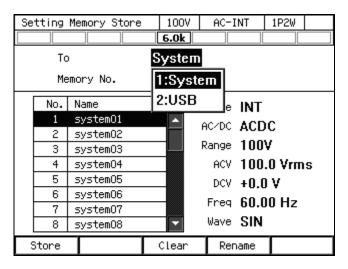

- 3. Specify the data to operate.
- (a) For the internal memory, specify the memory number in the [Memory No.] item.
- (b) For the USB memory, in the data list box, select the data.

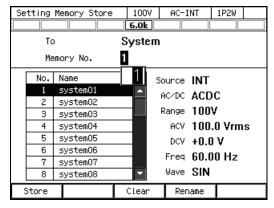

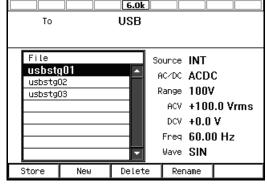

100V

AC-INT


1P2W

Setting Memory Store


Internal memory

USB memory


4. To clear/delete, push [Clear]/[Delete] soft-key. Confirmation message is displayed. Select [OK]. Clearing the internal memory resets the data to the factory default (same as the one of the internal memory No. 0). Erasing the basic setting data in the USB memory deletes the applicable file.

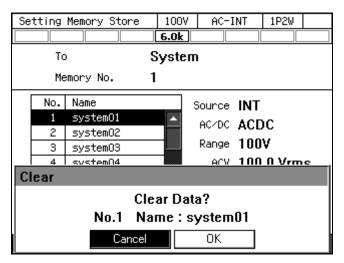


5. To rename, push [Rename] soft-key. Rename window opens. Enter a new name and then select [OK]. For how to enter a string, see 3.3.6.

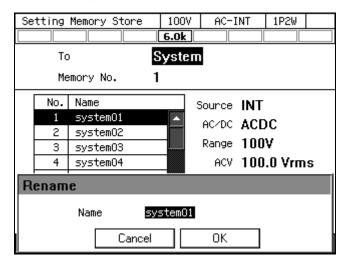


- Loading the factory defaults
  - 1. In the Memory View, select [Setting Recall].

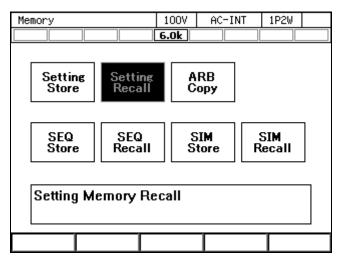

2. In the [From] item, select [System].

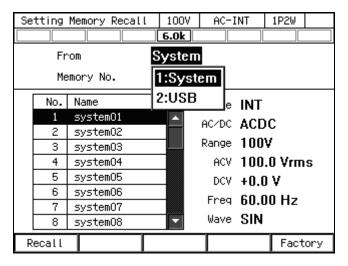

3. Push the [Factory] soft-key. In the confirmation window that opens, select [OK]. The factory default basic setting data are loaded.

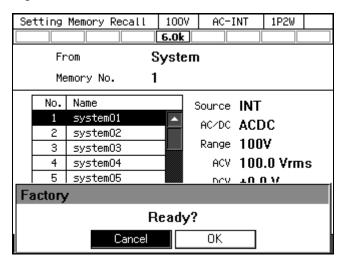

### 4.8.2 Arbitrary Waveform Memory

The user-created arbitrary waveform data can be saved into the Arbitrary Waveform Memory.

Both the internal and USB memories can be selected as the Arbitrary Waveform Memory. Creation of arbitrary waveform data and saving it to the Arbitrary Waveform Memory are performed using Wave Designer, the control software in the attached CD-ROM. The Memory View enables you to copy the arbitrary waveform data between the internal and USB memories, and clear/rename the Arbitrary Waveform Memory.

The internal memory has 16 Arbitrary Waveform Memories from No. 1 to No. 16. In the factory default, memories from No. 1 to No. 8 are for triangle wave and from No. 9 to No. 16 for square wave. Clearing an Arbitrary Waveform Memory resets its data to the factory default.

Inside the USB memory, the NF\_TOOL¥NF\_DP¥ARB\_DATA folder is the Arbitrary Waveform Memory.


------ Notes -----

- Inside the USB memory, the location that stores the arbitrary waveform data is the NF TOOL¥NF DP¥ARB DATA folder.
- The number of arbitrary waveform data files saved in a USB memory should be 500 or less. If the number of files exceeds this limit, this product cannot recognize the arbitrary waveform data files in the USB memory.


-----

- Copying the arbitrary waveform data (from internal memory to USB memory)


  The paragraphs below describe how to copy the arbitrary waveform data from the internal memory to the USB memory. For how to copy from the USB memory to the internal memory, see 4.7.4.
  - 1. In the Memory View, select [ARB Copy].

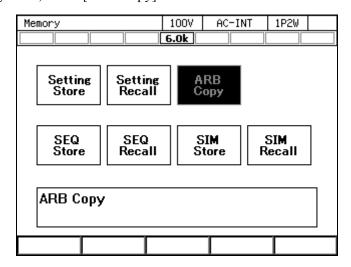


2. In the [Direction] item, select [SYS→USB].

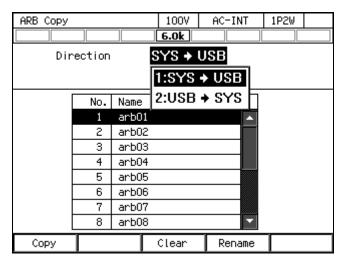

3. From the data list box, select the arbitrary waveform to copy.

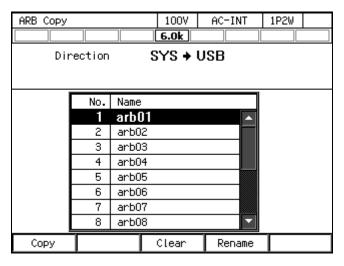

4. Push the [Copy] soft-key. A window to confirm the save name opens. Enter the name. Select [OK] to copy. For how to enter a string, see 3.3.6.

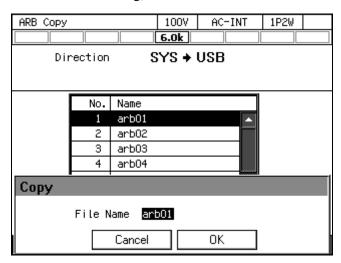


------ Notes -----

 When the data is copied to the USB memory, any existing file with the same name in the NF\_TOOL¥NF\_DP¥ARB\_DATA folder is overwritten. No overwrite confirmation message is displayed.


.....

- Clearing, erasing, or renaming an Arbitrary Waveform Memory
  - 1. In the Memory View, select [ARB Copy].

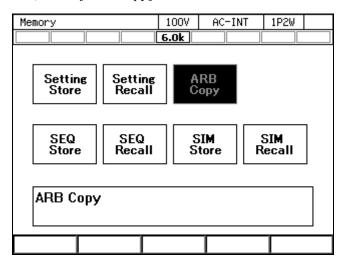



2. In the [Direction] item, select the object to operate.

USB $\rightarrow$ SYS: Selects the USB memory as the target of the operation.

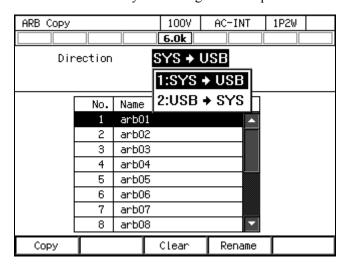

3. Select the data that is the target of the operation in the data list box.

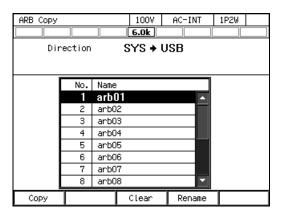


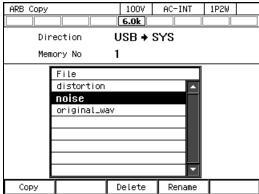


Internal memory

USB memory

4. To clear/delete, push [Clear]/[Delete] soft-key. Confirmation message is displayed. Select [OK]. Clearing the internal Arbitrary Waveform Memory resets the data to triangle wave for memories from No. 1 to No. 8 and to square wave for memories from No. 9 to No. 16. Erasing an Arbitrary Waveform Memory in the USB memory deletes the applicable arbitrary waveform data file.

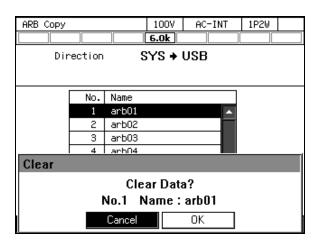

5. To rename, push [Rename] soft-key. Rename window opens. Enter a new name and then select [OK]. For how to enter a string, see 3.3.6.

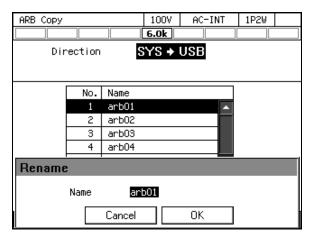

------ Notes -----

• A file cannot be renamed in the USB memory if a file with the same name exists in the NF\_TOOL¥NF\_DP¥ARB\_DATA folder. An error message is displayed.

------

## 4.8.3 Sequence Memory

The user-created sequence can be saved into the Sequence Memory.

Both the internal and USB memories can be selected as the Sequence Memory. Creation and saving of a sequence are performed using the sequence menu (see 4.2) or the control software in the attached CD-ROM. For the content saved in the Sequence Memory, see Table 4-9.


The internal memory has 5 Sequence Memories from No. 1 to No. 5.

**Table 4-9 Content Saved in Sequence Memory** 

Setting Item	Factory default setting	
Output range selection	100V	
Output mode selection	AC-INT	
Parameters of Sequence Function	Refer to 4.27	


#### ■ SEQ Store

In the Memory View, select [SEQ Store] to change to the Sequence Save View as below, allowing you to save, clear, and rename the sequence. For the operation method, see 4.2.8 and 4.2.9.

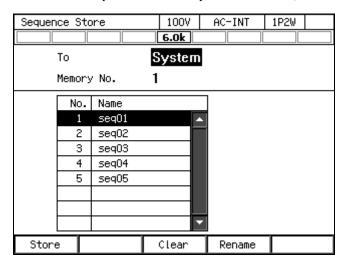

#### ■ SEQ Recall

In the Memory View, select [SEQ Recall] to change to the Sequence Recall View as below, allowing you to load the sequence. For the operation method, see 4.2.6.

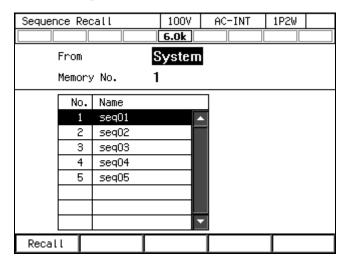

## 4.8.4 Simulation Memory

The user-created simulation can be saved in the Simulation Memory.

Both the internal and USB memories can be selected as the Simulation Memory. Creation and saving of a simulation are performed using the simulation menu (see 4.3) or the control software in the attached CD-ROM. For the content saved in the Simulation Memory, see Table 4-10.


The internal memory has 5 Simulation Memories from No. 1 to No. 5.

**Table 4-10 Content Saved in Simulation Memory** 

Setting Item	Factory default setting
Output range selection	100V
Simulation Function Parameters	See 4.27


#### ■ SIM Store

In the Memory View, select [SIM Store] to change to the Simulation Save View as below, allowing you to save, clear, and rename the simulation. For the operation method, see 4.3.8 and 4.3.9.

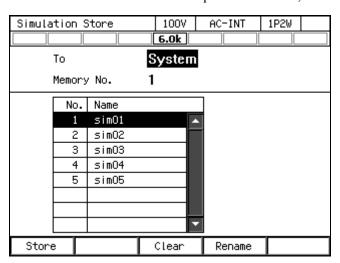

#### SIM Recall

In the Memory View, select [SIM Recall] to change to the Simulation Recall View as below, allowing you to load the simulation. For the operation method, see *4.3.6*.

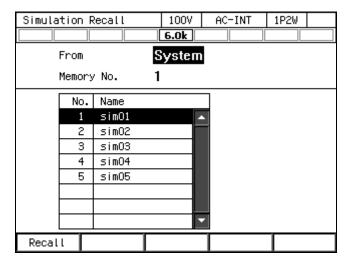

# 4.9 Using USB Memory Function

This product supports the mass storage class USB memory. The arbitrary waveform data, sequence data, simulation data, and Basic Setting Memory can be saved into and loaded from the USB memory.

When you connect a USB memory to this product, a window opens with the confirmation message "USB Memory Connected," then closes after a while.

The root folder of the USB memory should have folders as shown in Figure 4-23. Otherwise, these folders are created automatically when the USB memory is connected to this product.

To remove the USB memory connected to this product, the eject operation is necessary as explained in this section.

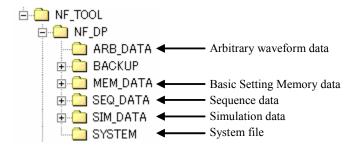


Figure 4-23 USB Memory Folder Structure

#### **⚠** CAUTION

- Do not connect anything other than a USB memory to the front USB memory connector.
- Before removing the USB memory from this product, always perform the eject operation (see the next section). Removing the USB memory while it is being accessed may damage the data.
- Do not turn off this product while it is accessing the data in the USB memory.

------ Notes ------

- We do not guarantee that all USB memories can be operational with this product.
- Use a FAT32-formatted USB memory. This product does not support the exFAT format which began to be supported from Windows Vista SP1.
- This product does not have the USB memory formatting function.
- The file name should consist of one byte alphanumeric characters. A file name that contains any double-byte character cannot be recognized correctly.
- This product does not have the time information management function. Therefore, when the save operation is performed for the USB memory, its time stamp is updated to "2008/1/1 00:00:00."
- Loading by the external control function is not available.
- Limit the number of files to save in one USB memory up to 500 for each of the basic setting, arbitrary waveform, sequence, and simulation data. If the number of files exceeds this limit, this product cannot recognize the data files in the USB memory.
- The BACKUP and SYSTEM folders in Figure 4-23 are not used by the users. Do not delete these folders and files in them, as they are used for firmware updating of this product and other purposes.

- Removing the USB memory from this product (eject operation)
  - 1. Perform the eject operation. Following two methods are available.
  - (a) Shortcut operation: (SHIFT)+ 6
  - (b) Press the MENU key to move to the root menu, then select [System]. In the System menu that opens, put the cursor on [Exec] next to the [USB Eject] item, then press the ENTER key.
  - 2. The window opens with the confirmation message "USB Memory Disconnected." The window closes after a while.
  - 3. Remove the USB memory.


------ Notes ------

- The eject operation cannot be performed in the following cases:
  - · When the Memory View is open
  - · When the data list box shows the files in the USB memory


#### 4.10 **Using Monitor Function**

The output voltage and current waveform can be monitored using an oscilloscope connected to the monitor terminal on the rear. For the monitor output specifications, see 11.30.


- Switching the monitor output
  - 1. Press the MENU key to move to the root menu, then select [System].

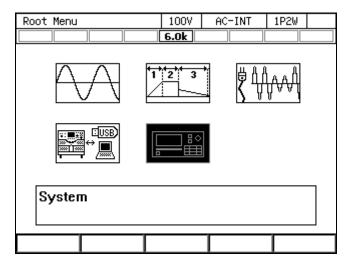


2. Put the cursor on [Setup] of the [Monitor] item, then press the ENTER key.

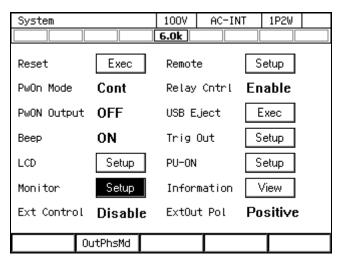

3. «Only For the polyphase output» For the [Phs] item, select the desired phase.

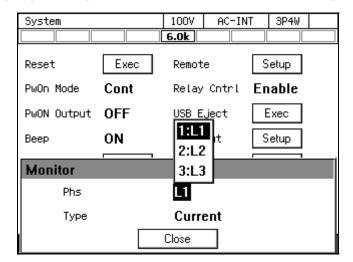

156

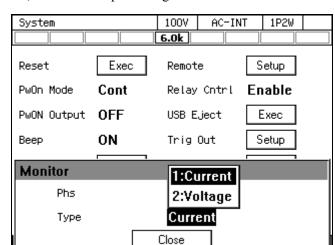

4. For the [Type] item, select the output voltage or current.

5. Put the cursor on [Close], then press the ENTER key.

------ Notes -----

- For the single-phase output, the [Phs] item is fixed to L1.
- The output voltage monitor watches the voltage at the output terminal when the remote sensing state is on or off and the voltage at the sensing input terminal when the remote sensing state is FB.

DP060LM/DP120LM/DP180LM

# 4.11 Using Remote Sensing Function

The Remote sensing function detects the output voltage at the sensing input terminal. You can select ON / OFF / FB.

When setting Remote sensing to ON or FB, the measured value of voltage is the voltage at the sensing input terminal, and the item symbol is displayed as "SV" on the panel display. The measured values of power (P, S, Q) and power factor (PF) are also the values that are calculated using the measured voltage value at the sensing input terminal. However, their item symbols on the panel display are not changed.

Remote sensing ON or FB setting can be selected in the AC-INT, AC-VCA, AC-SYNC, DC-INT, and DC-VCA modes. For in the AC mode, it can be selected only when the waveform is a sine wave. When the Remote sensing state is ON or FB, the waveform cannot be changed to other than a sine wave. Changing to ACDC mode, changing to EXT or ADD, selecting to sequence function or simulation function is possible, but Remote sensing function is forcibly set to OFF.

However, in case the stand-by state of sequence mode (step0) effective only for AC-INT, ACDC-INT and DC-INT and when the waveform is sine wave or DC. Remote sensing cannot be set to either ON or FB unless either AC voltage or DC voltage setting is 0 V for ACDC-INT. Also, if the Remote sensing is ON, the Remote sensing is turned OFF once when you change ACDC mode from AC mode of DC mode even in stand-by state. Turn ON it again when you need.

When the Remote sensing state is ON, the output voltage at the sensing input terminal is calibrated by the AGC or Autocal function. Thus, by combining the Remote sensing function with the AGC/Autocal function, you can compensate the voltage drop due to wiring to the load.

When the Remote sensing state is FB, the voltage feedback detection point is changed from inside (output terminal) to outside (sensing input terminal), and AGC or Autocal cannot be set. Remote sensing can be set to FB only when DIP or RIN is connected and the function of external control is set to DevCtrl. For external control see 4.18 and for DIP or RIN see 8.2.

External control	Remote sensing	Voltage feedback detection point	Measurement voltage, power, power factor	AGC / Autocal setting	
Enable/Disable	ON		Use the sensing input terminal voltage		
Enable/Disable	OFF	Inside (output terminal)	Use the output terminal voltage	Enable	
DevCtrl	ON		Use the sensing input terminal voltage		
	OFF		Use the output terminal voltage		
	FB	Outside (sensing input terminal)	Use the sensing input terminal voltage	Disable	

Table 4-11 Setting pattern of external control, remote sensing and AGC / Autocal

------ Notes -----

- The on/off state of the Remote sensing function is kept even if the output range is changed. However, the Remote sensing function is set to off, if the output phase configuration is changed.
- When the Remote sensing function is forcibly set to off, the settings saved in the System Setting Memory are not updated.

-----

### **△** CAUTION

- When setting Remote sensing to FB, the load cable connected to the output terminal should be as short as possible (3 m or less) with twisted or parallel wire.
- Cable connection for remote sensing

# **MARNING**

• Before connecting the cable, turn off this product including its peripherals.

### **⚠** CAUTION

- Pay attention to the withstand voltage of the cable to be connected.
- Do not connect anything to the terminals that are not used.
- Do not input a signal having a different electric potential from the output terminal (e.g. the signal at the secondary side of transformer) into the sensing input terminal.
- For the polyphase output, cables should be connected to the sensing input terminals N1, N2, and N3 for each phase. These terminals do not have the same electric potential within this product.

Connect the sensing input terminal to the output voltage detecting end (e.g. load end) using a cable. The sensing input terminal is common to each output phase mode (single-phase two-wire, single-phase three-wire, and three-phase four-wire). The terminals to be used for each output phase mode are shown in Figure 4-24. Do not connect anything to the terminals that are not used.



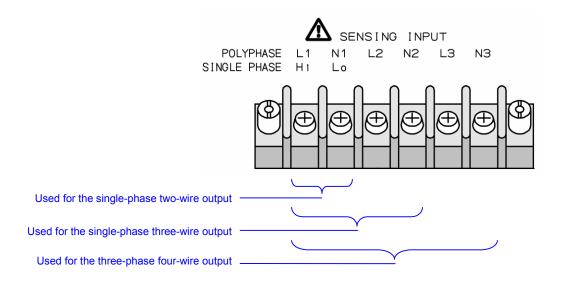


Figure 4-24 Sensing input terminals


- Turning on/off Remote sensing function
  - 1. Press the [Measure] soft-key, then select [2: Measure].

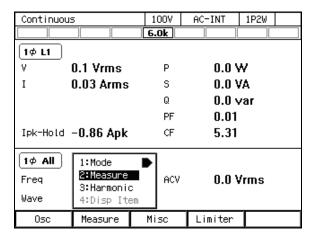

2. Use the [Rmt Sense] item to switch ON / OFF / FB, if necessary.

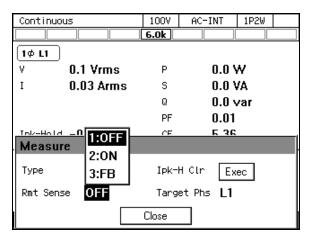

3. When setting Remote sensing to ON or FB, the item symbol of the output voltage measured value is changed to "SV".

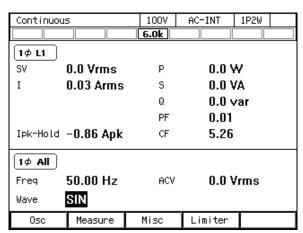

------ Notes -----

• The Remote sensing function can be set to ON / OFF / FB also in the AGC/Autocal set window.

\_\_\_\_\_\_

# 4.12 Using AGC Function

The AGC (Automatic Gain Control) function calculates the ratio (calibration factor) of the output voltage measured value (effective value) versus the output voltage setting value automatically and continuously while this function is on, and multiplies the gain of the output amplifier by the calculated value, intending to match the output voltage with the setting value. With this function, the output voltage fluctuation can be suppressed even when the load is fluctuated. When the AGC function is set to on, the icon AGC is displayed.

As the detected part of the output voltage calibrated by the AGC function, either the sensing input terminal (the Remote sensing function is on) or the output terminal (the Remote sensing function is off) can be selected. By combining the Remote sensing function with the AGC function, you can compensate the voltage drop due to wiring to the load.

The AGC function can be set to on in the AC-INT, AC-VCA, AC-SYNC, DC-INT, and DC-VCA modes. However, for the AC mode, it can be set to on only when the waveform is a sine wave. When the AGC function is on, the waveform cannot be changed to other than a sine wave. When the mode is changed to ACDC mode, when the signal source is changed to EXT or ADD, or when the Sequence or Simulation function is selected, the AGC function is forcibly set to off. When the Autocal function is on or Remote sensing function is FB, the AGC function cannot be used.


For the specification of the AGC function, see 11.17.

## ------ Notes -----


- If the output voltage setting is out of the "Operation range" shown in 11.17, the calibration is not performed while the AGC function setting remains on and the icon AGC is still displayed.
- If the difference is out of the "Calibration range" shown in 11.17, the AGC function is forcibly set to off, and the icon AGC disappears.
- If the limiter operates while the AGC function is on, the AGC calibration is not performed. When the limiter operation is completed, the AGC calibration restarts. If the protection function is activated, the output is turned off, but the AGC setting remains on.
- The on/off setting of the AGC function is kept even if the output range is changed.
- When the AGC function is forcibly set to off, the settings saved in the System Setting Memory are not updated.
- The AGC function updates the calibration factor continuously while the AGC function is on. In contrast, the Autocal function continues to use the calibration factor obtained when Autocal is turned on until Autocal is turned off. Therefore, in the AGC function, the output voltage is calibrated properly even when the load is fluctuated, but there is the response time to reflect the update of the calibration factor. Meanwhile, in the Autocal function, the output voltage may not be calibrated properly when the load is fluctuated, but once Autocal is turned on, there is no response time needed for calibration.

\_\_\_\_\_\_


- Turning on the AGC function
  - 1. Turn on the output.
  - 2. Open the AGC/Autocal set window. Following two methods are available.
  - (a) Shortcut operation: (SHIFT)+ 5
  - (b) Push the [Misc] soft-key and select [1: AGC/Auto Cal].

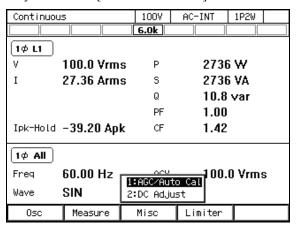

**3**. Use the [Rmt Sense] item to set the Remote sensing function to on or off, if necessary. When the Remote sensing function is FB, the AGC function cannot be set to ON.

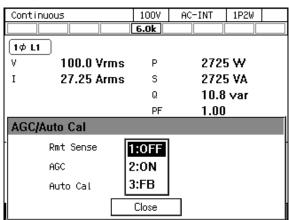


4. In the [AGC] item, select [2: ON]. If the output voltage setting is within the AGC operation range, the AGC calibration is started when [ON] is selected here.

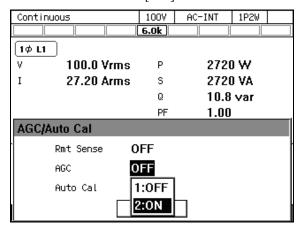


5. Close the window.


- Turning off the AGC function
  - 1. Open the AGC/Autocal set window. Following two methods are available.
  - (a) Shortcut operation: (SHIFT)+ 5
  - (b) Push the [Misc] soft-key and select [1: AGC/Auto Cal].

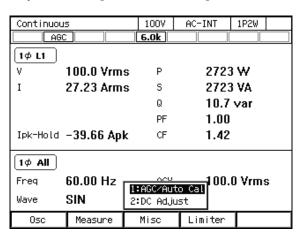

2. In the [AGC] item, select [1: OFF]. When [OFF] is selected here, the AGC calibration finishes.

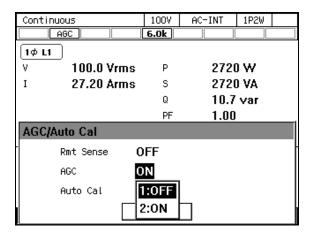

3. Use the [Rmt Sense] item to set the Remote sensing function to on or off, if necessary.

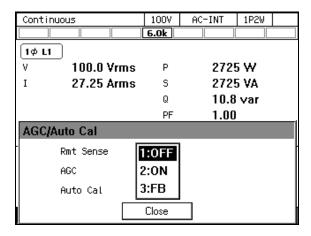

4. Close the window.

### 4.13 Using Autocal Function

The Autocal (Automatic Calibration) function calculates the ratio (calibration factor) of the output voltage measured value (effective value) versus the output voltage setting value when this function is turned on, and multiplies the gain of the output amplifier by the calculated value, intending to match the output voltage with the setting value. The calculated calibration factor is used as a fixed value until the Autocal function is turned off. Therefore, even when the Autocal function is on, the output voltage fluctuation may occur if the load is fluctuated. When the Autocal function is set to on, the icon ACAL is displayed.

As the detected part of the output voltage calibrated by the Autocal function, either the sensing input terminal (the Remote sensing function is on) or the output terminal (the Remote sensing function is off) can be selected. Combining the Remote sensing function with the Autocal function, you can compensate the voltage drop due to wiring to the load.

The Autocal function can be set to on in the AC-INT, AC-VCA, AC-SYNC, DC-INT, and DC-VCA modes. However, for the AC mode, it can be set to on only when the waveform is a sine wave. When the Autocal function is on, the waveform cannot be changed to other than a sine wave. When the mode is changed to ACDC mode, when the signal source is changed to EXT or ADD, or when the Sequence or Simulation function is selected, the Autocal function is forcibly set to off. When the AGC function is on or Remote sensing function is FB, the Autocal function cannot be used.

However, in case the stand-by state of sequence mode (step0) effective only for AC-INT, ACDC-INT or DC-INT and when the waveform is sine wave or DC. Autocal cannot be activated unless either AC voltage or DC voltage setting is not 0 V for ACDC-INT. Also, Autocal is turned off once when you change ACDC mode from AC mode of DC mode even in stand-by state. Turn ON it again when you need.


For the specification of the Autocal function, see 11.18.

------ Notes ------


- When the Autocal function is on, the calibration factor is always used to perform the calibration as a multiplier.
- If the conditions for setting the [Acal] to [ON] shown in 11.18 are not satisfied, the Autocal function cannot be turned on. However, if any one of the conditions required for setting [Acal] to [ON] becomes disabled while the Autocal function is on, the ON setting of the Autocal function is retained.
- If the difference is out of the "Calibration range" shown in 11.18, the Autocal function is forcibly set to off.
- If the limiter operates while the Autocal function is on, the Autocal calibration is still applied, but the limit is applied on the output. If the protection function is activated, the output is turned off, but the Autocal setting remains on.
- When the output range is changed, the Autocal function is forcibly set to off.
- When the Autocal function is forcibly set to off, the settings saved in the System Setting Memory are not updated.
- The Autocal function continues to use the calibration factor obtained when Autocal is turned on until Autocal is turned off. In contrast, the AGC function updates the calibration factor continuously while the AGC function is on. Therefore, in the Autocal function, the output voltage may not be calibrated properly when the load is fluctuated, but once Autocal is turned on, there is no response time needed for calibration. Meanwhile, in the AGC function, the output voltage is calibrated properly even when the load is fluctuated, but there is the response time to reflect the update of the calibration factor.

### ■ Turning on the Autocal function


- 1. Turn on the output.
- 2. Open the AGC/Autocal set window. Following two methods are available.
- (a) Shortcut operation: (SHIFT)+ 5
- (b) Push the [Misc] soft-key and select [1: AGC/Auto Cal].

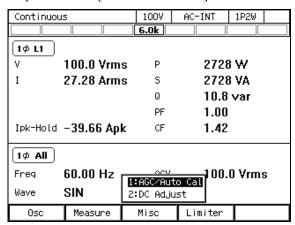

3. Use the [Rmt Sense] item to set the Remote sensing function to on or off, if necessary. When the Remote sensing function is FB, the Autocal function cannot be set to ON.

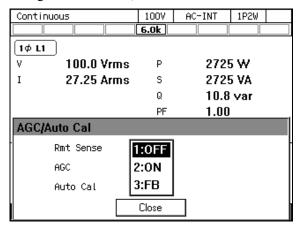


4. Use the [Auto Cal] item to turn on or off the Autocal function. When [ON] is selected here, the calibration factor of the Autocal function is calculated, and the calibration is started.

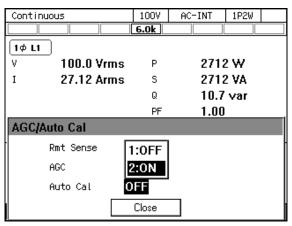


5. Close the window.

- Turning off the Autocal function
  - 1. Open the Autocal set window. Following two methods are available.
  - (a) Shortcut operation: (SHIFT)+(5)


    The window is toggled between the AGC setting window and the Autocal setting window every time you press the keys.
  - (b) Push the [Misc] soft-key and select [1: AGC/Auto Cal].

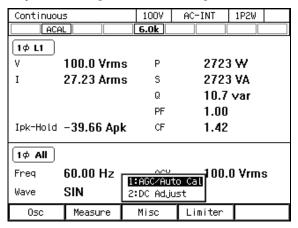

2. In the [Auto Cal] item, select [1: OFF]. When [OFF] is selected here, the Autocal calibration finishes, and the calibration factor is cleared.

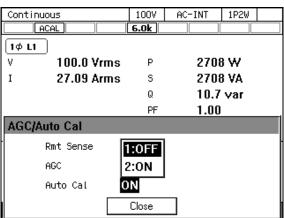

3. Use the [Rmt Sense] item to set the Remote sensing function to on or off, if necessary.

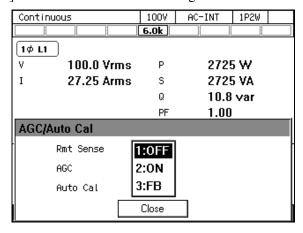

4. Close the window.

## 4.14 Adjusting DC Offset

Even when the output voltage is set to 0 V, the DC offset voltage from several mV to several tens mV may exist in the output. The DC offset adjustment function can reduce such DC voltage close to zero.

For the DC offset adjustment, four types of values are retained for each output voltage range and AC/DC mode. For the polyphase model and polyphase output, the values need to be set for each phase. The setting range of the DC offset adjustment value is shown in Table 4-12.

Table 4-12 Setting Range of DC Offset Adjustment Value

AC/DC mode	Minimum value	Maximum value	Resolution	Initial value	Unit
AC	-50.0	+50.0	0.1	0.0	mV
ACDC, DC	-250	+250	1	0	mV


Note: The setting range is common to 100 V range and 200 V range.

### ■ Operation procedure


1. Press the [Misc] soft-key and select [2:DC Adjust]. The DC offset adjustment window opens.

Continuou	ıs	1007	AC-INT	1P2W
		6.0k		
1φ L1				
v	0.1 Vrms	Р	0.0 V	٧
I	0.04 Arms	S	0.0 V	Α
		Q	0.0 v	ar
		PF	0.02	
Ipk-Hold	-39.66 Apk	CF	4.40	
1φ All				
Freq	60.00 Hz <sub>F</sub>	1:AGC/Auto	ρ.ο v	rms
Wave	SIN	2:DC Adju		
0sc	Measure	Misc	Limiter	

2. «Only for the polyphase output» In the [Target Phs] item, specify the phase to perform the DC offset adjustment.

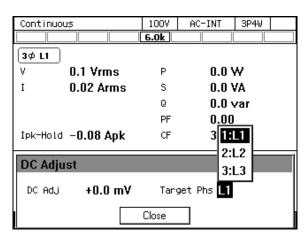

3. Adjust the value in the [DC Adj] item so that the DC offset gets close to zero while observing the output voltage with a DC voltmeter etc.

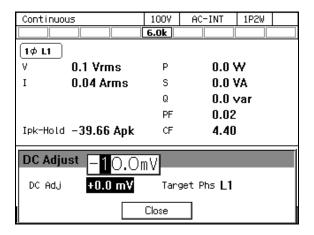


4. Close the window.

## 4.15 Using for Unbalanced Polyphase Output


For the polyphase output, you can set the phase voltage and the phase to be unbalanced. The phase can be set to be unbalanced by  $\pm 35$  degrees to the balanced state.

### ■ Operation procedure


1. Press the [Osc] soft-key and select [6: Phase Mode]. The setting window for the phase mode opens.

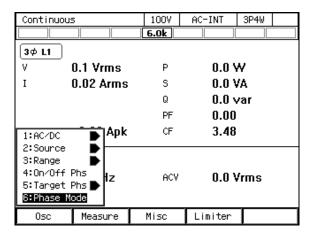




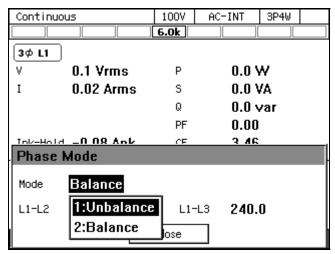

3. To unbalance the phase, set the phase in the [L1-L2] and [L1-L3] items. When the setting is completed, close the window.

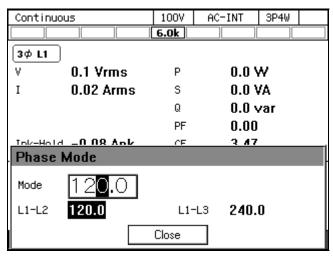

4. To unbalance the phase voltage, press the [Osc] soft-key and select [5: Target Phs], and then select the phase to set the phase voltage. Or perform the Shortcut operation (SHIFT) + 1 to switch the phase to set. Set the phase voltage in [ACV].

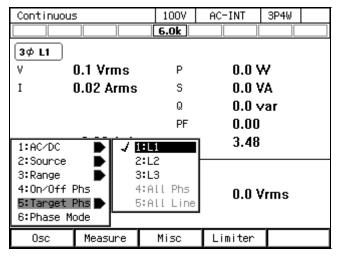

------ Notes ------

- When the unbalanced mode is switched to the balanced mode, the AC voltage of each phase becomes equal to the setting value of the L1 phase. The phase setting value is the value of the balanced mode (180 degrees for single-phase three-wire output, and 120 degrees and 240 degrees for three-phase output).
- Switching between the unbalanced mode and balanced mode is possible even in the output on state.
- Depending on combined condition of the phase angle setting and load, an error message (ID:
   53 Power Unit DCPS Overvoltage) may be displayed and the output may be turned off.

\_\_\_\_\_\_

## 4.16 Using as DC Power Supply

You can use this product as a DC power supply by switching from the AC/DC mode to the DC mode or the ACDC mode. For the voltage setting range, see 11.7.

------ Notes -----


- This product cannot be used as a DC power supply in the polyphase output. The DC mode cannot be used. The DC voltage (DCV) of the ACDC mode also cannot be set.
- The signal sources that can be combined with the ACDC mode are INT, SYNC, EXT, and ADD.
- The signal sources that can be combined with the DC mode are INT and VCA.

DP060LM/DP120LM/DP180LM


### Operation Method

- 1. Enter the ACDC mode or the DC mode. Following two methods are available.
- (a) Shortcut operation: (SHIFT) + (7)

  Every time you press the keys, the mode is switched to AC, ACDC, and DC in this order.
- (b) Press the [Osc] soft-key and select [1:AC/DC]. From the opened menu, select [2: ACDC] or [3: DC].

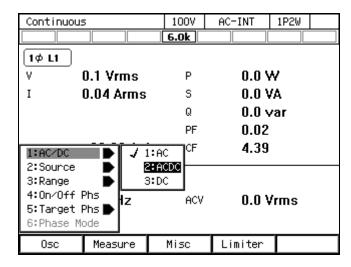

2. Set the output DC voltage in the [DCV] item.

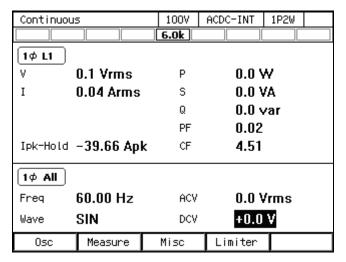

## 4.17 Setting Voltage using External DC Input Signal

In the AC-VCA mode, you can use the external DC input signal to set the AC output voltage of the internal signal source. In the DC-VCA mode, you can use the external DC input signal to set the DC output voltage of the internal signal source. The external DC signal is input to this product through the external signal input connector. When the signal source is VCA, the specifications except the output voltage setting are same as when the signal source is INT.

------ Notes -----

• For VCA, the external signal input is detected with the interval of about 100 ms.

------

### 4.17.1 Using External Signal in AC-VCA Mode

In the AC-VCA mode, the peak value of the output AC voltage (ACV) is set according to the following figure, by using the gain setting value and the voltage of the external DC signal.

 $ACV (Vpk) = Gain \times External DC signal voltage (V)$ 

For the specifications of the gain setting range and the external DC signal input voltage range, see 11.23.2.

------ Notes -----

- The gain setting value is retained for each of 100 V/200 V ranges and for each of AC/DC modes.
- Within the same range and the same mode, the same value is retained for the gain setting value, regardless of the combination of the signal sources (VCA, EXT, ADD).
- For the polyphase output, the ACV setting using VCA is common to all phases.
- When the switching from AC-VCA mode to ACDC mode, the signal source is forcibly set to INT.

------


### ■ Examples

- 1. When the waveform is SIN, the gain is 100, and the external DC signal voltage is 1 V, the output will be a sine wave of which amplitude is 100 Vpk (= 70.7 Vrms).
- 2. When the waveform is SIN, the gain is 100, and the external DC signal voltage is 1.41 V, the output will be a sine wave of which amplitude is 141 Vpk (= 100 Vrms).


### ■ Operation procedure

- 1. Turn off the output, and enter the AC mode. Following two methods are available.
- (a) Shortcut operation: (SHIFT)+(7)


  Every time you press the keys, the mode is switched to AC, ACDC, and DC in this order.
- (b) Press the [Osc] soft-key and select [1:AC/DC]. From the opened menu, select [1: AC].

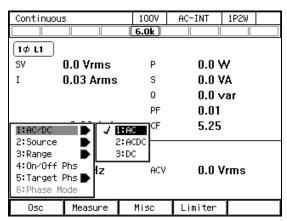

2. Press the [Osc] soft-key and select [2:Source]. From the opened menu, select [2: VCA].

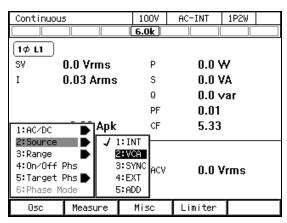

3. Set the [Freq], [Wave], and [Gain] items.

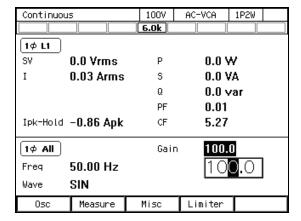

- 4. Supply a DC voltage to the external signal input connector.
- 5. Turn on the output.

### 4.17.2 Using External Signal in DC-VCA Mode

In the DC-VCA mode, the setting value of the output DC voltage (DCV) is set according to the following figure, by using the gain setting value and the voltage of the external DC signal.

 $DCV(V) = Gain \times External DC signal voltage(V)$ 

For the specifications of the gain setting range and the external DC signal input voltage range, see 11.23.2.

------ Notes -----

- The gain setting value is retained for each of 100 V/200 V ranges and for each of AC/DC modes.
- Within the same range, the same value is retained for the gain setting value, regardless of the combination of the signal sources (VCA, EXT, ADD).
- When the switching from DC-VCA mode to ACDC mode, the signal source is forcibly set to INT.

\_\_\_\_\_\_


### ■ Examples


When the gain is 100, and the external DC signal voltage is 1 V, the output will be a DC voltage of 100 V.


### ■ Operation procedure

- 1. Turn off the output, and enter the DC mode. Following two methods are available.
  - (a) Shortcut operation: (SHIFT)+(7)


    Every time you press the keys, the mode is switched to AC, ACDC, and DC in this order.
  - (b) Press the [Osc] soft-key and select [1:AC/DC]. From the opened menu, select [3: DC].

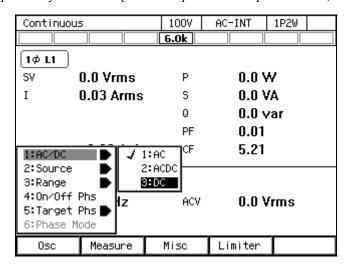

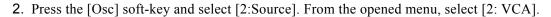

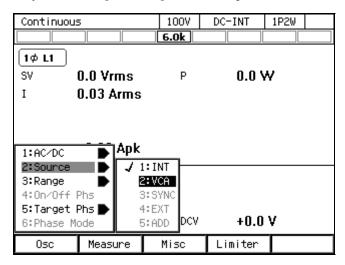

3. Set the [Gain] item.

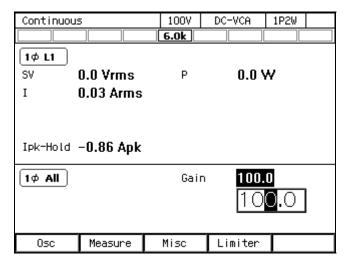

- 4. Supply a DC voltage to the external signal input connector.
- 5. Turn on the output.

## 4.18 Control Using External Control Function

The following functions can be selected.

Item	Description
Disable	Disable the control input of the CONTROL I/O. The status output signal is output (See 4.18.1).
Enable	Enable the CONTROL I/O (See 4.18.1).
DevCtrl	You can control DIP or RIN (See 4.18.2).

### 4.18.1 Using CONTROL I/O

You can control the output on/off and the starting/stopping of Sequence by inputting the logic signal or the non voltage contact signal. You can also get the product state by using the logic signal. The polarity of state output can be switched. The connector to be used is DBLC-J25SAF-10L9E (D-sub, 25-pin, M2.6 mm screw) manufactured by JAE. For the specification of I/O signals, see 11.27, and for the pin assignment of the CONTROL I/O connector, see Table 4-13.

------ Notes -----

- We recommend that when the external control function is not used, the function is set to [1: Disable] to avoid malfunctioning due to any exogenous noise.
- It is not able to use CONTROL I/O with control of DIP or RIN at the same time.
- The external control input signal is ignored when the product is remote controlled via the communication interface.
- The memory 1 and 2 inputs are the inputs for specifying the memory number. For No. 1 to No. 4 memory, specify the 2 bit memory number of the Basic Setting Memory in the Continuous function, or of the Sequence Memory in the Sequence function, or of the Simulation Memory in the Simulation function.
- When the memory recall input is changed from high to low, this loads the data of the Basic Setting Memory in the Continuous function, or of the Sequence Memory in the Sequence function, or of the Simulation Memory in the Simulation function which has the number specified by the memory 1 and 2 inputs. For the Sequence and Simulation function, the compile is also performed.
- When connecting between CONTROL I/O connector and CONTROL IN connector of this product with attached cable (25 pin) and setting to enable or disable, the step sync code 1 which is equivalent to pin No.9 of Table 4-13 is output from STATUS OUTPUT connector and the step sync code 2 which is equivalent to pin No.10 of Table 4-13 is output from QUICK CHANGE SYNC OUTPUT connector.

.....

Table 4-13 CONTROL I/O Pin Assignment

pin	I/O	Function	Remarks
1	Output	Power On/Off	Low: Off, High: On
2	Output	Output On/Off*	Low: On, High: Off (Negative) Low: Off, High: On (Positive)
3	Output	Protection operation*	Low: Active, High: None (Negative) Low: None, High: Active (Positive)
4	Output	Limiter operation*	Low: Active, High: None (Negative) Low: None, High: Active (Positive)
5	Output	AGC/Autocal setting state*	Low: On, High: Off (Negative) Low: Off, High: On (Positive)
6	Output	Software busy*	Low: Busy, High: Ready (Negative) Low: Ready, High: Busy (Positive)
7	Output	Output range	Low: 200 V, High: 100V
8	Output	_	Unused
9	Output	Step sync code 1 (bit 0)	High level or Low level
10	Output	Step sync code 2 (bit 1)	(see Table 4-14)
11	Output	Trigger	Positive  or Negative
12	Output	_	Unused
13	Input	Output Off	Falling Off
14	Input	Output On	Falling On
15	Input	Sequence start/resume	Falling Start
16	Input	Stop of sequence	Falling Stop
17	Input	Sequence is in the Hold status	Falling Hold
18	Input	Sequence branch 1	Falling Branch start
19	Input	Sequence branch 2	Falling Branch start
20	Input	Memory recall (+ compile)	Falling Recall
21	Input	Memory specification 1	Specify 0 to 3
22	Input	Memory specification 2	(See Table 4-15, equivalent to memory 1 to 4, respectively)
23	Input	Clear the current peak-hold value	Falling Clear
24	_	GND	<u> </u>
25	Reserved	Do not connect anything	Do not connect anything

Note 1: The polarity of state output marked with asterisk (\*) can be switched.

Note 2: At 25th pin, +5 V is output for test in manufacturing, and the pin is not assumed to be used by user. Do not connect this pin to anything, or this product might become unstable.


**Table 4-14 Step Sync Code** 

	Step sync code			
bit	LL	LH	HL	НН
0	Low	High	Low	High
1	Low	Low	High	High


**Table 4-15 Memory Specification** 

	Memory No.			
	1	2	3	4
Specify	0	1	2	3
Memory specification 1	Low	High	Low	High
Memory specification 2	Low	Low	High	High


- Enabling/disabling external control function
  - 1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

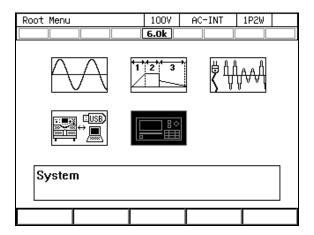


2. In the [Ext Control] item, select [1: Disable] or [2: Enable]. See 4.18.2 about [3: DevCtrl].

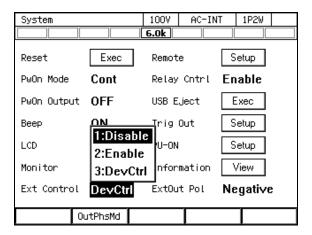

- Setting the polarity of the status output
  - 1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

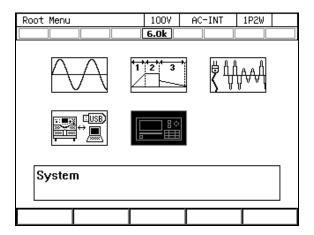


2. In the [ExtOut Pol] item, select [1: Negative] or [2: Positive].

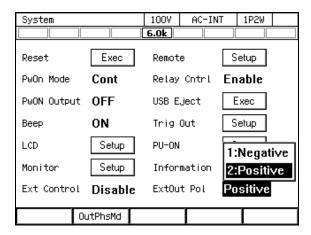


### ■ Setting the trigger output


1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

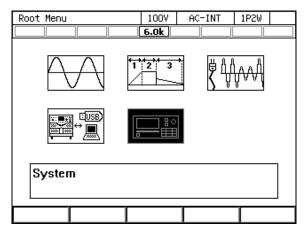

2. Move the cursor to [Setup] next to the [Trig Out] item, and select it. The trigger output setting window opens.

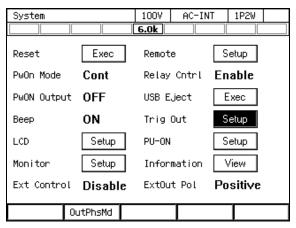

3. Set the polarity (Positive/Negative) in the [Polarity] item, and set the pulse width in the [Width] item.

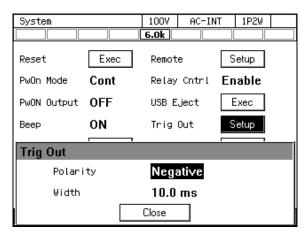

4. Move the cursor to [OK], then press the ENTER key. The trigger output setting window is closed.

### 4.18.2 Control of DIP or RIN

Set external control function to DevCtrl and connect between CONTROL I/O connector and CONTROL IN connector of this product with attached cable (25 pin). You can control DIP or RIN.

When you control DIP, connect the CONTROL SIGNAL connector of this product and DIP and connect between QUICK CHANGE SYNC OUTPUT connector of this product and QUICK CHANGE SYNC INPUT connector of DIP with the control cable (37 pin) included in DIP. The quick change sync signal is output from this product.

At quick change operation and fluctuation test, the sync signal is output from STATUS OUTPUT connector. It is used as trigger signal to record waveform.

When you control RIN, connect the CONTROL SIGNAL connector of this product and RIN with the control cable (37 pin) included in RIN.

After the connection turn ON this product and set the external control function to DevCtrl, and then turn ON DIP or RIN.


------ Notes -----

- It is not able to use CONTROL I/O with control of DIP or RIN at the same time.
- You cannot control DIP or RIN if you turn ON before this product. First of all turn ON this product.
- You cannot control DIP or RIN if you turn ON not setting external control function of this product to DevCtrl. After setting to DevCtrl, restart DIP or RIN.

\_\_\_\_\_\_

### Setting external control function DevCtrl

1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

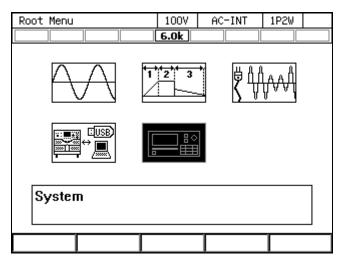

#### 100V AC-INT 1P2W 6.0k Exec Remote Setup Reset Pw0n Mode Cont Relay Cotrl Enable PwOn Output OFF USB Eject Exec Веер Irig Out Setup 1:Disable LCD U-ON Setup 2:Enable Monitor View nformation 3:DevCtrl Ext Control Disable ExtOut Pol Negative OutPhsMd

### 2. In the [Ext Control] item, select [3: DevCtrl] (Device Control).

#### Connection of DIP or RIN

Connect between the input terminal of DIP or RIN and the output terminal of this product. For detail of connection refer to the instruction manual of DIP or RIN.

If the voltage drop due to wiring to DIP or RIN is large, it is possible to compensate the voltage drop by setting Remote sensing to on with using AGC / auto-cal function or setting Remote sensing to FB. (See 4.11)

In their case, connect between the FEEDBACK connector of DIP or RIN and the sensing input terminal of this product with the feedback cable included in DIP or RIN. (See 8.2)

# 4.19 Synchronizing the Output Frequency with the Power Line or the External Signal

When you select SYNC for the signal source, you can synchronize the frequency of the internal signal source with the power line or the external signal. The icon LOCK is displayed when the internal signal source is synchronized with the external signal. The icon LHLOCK is displayed when the synchronization is not performed. The measured synchronization frequency value is displayed in the measured value area on the screen. See 11.12 for the measurement specification of the synchronization frequency and 11.23.1 for the interface specification of the external synchronization signal.


------ Notes -----

- The output on phase/off phase setting (3.4.8) is valid in SYNC also.
- You cannot make the output on if synchronization is not performed.
- When the switching from AC-SYNC or ACDC-SYNC mode to DC mode, the signal source is forcibly set to INT.


\_\_\_\_\_\_

### ■ Operation procedure

- 1. If you want to synchronize the internal signal source with the external signal, input the synchronization signal by using the external signal input connector. If you want to synchronize it with the power line, this step is not necessary.
- 2. Press the [Osc] soft-key and select [3:SYNC] from [2:Source].

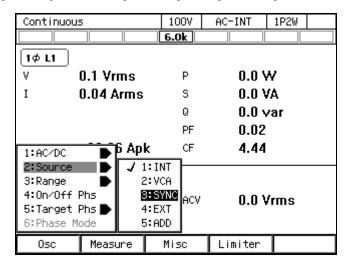

3. In the [Source] item, select [Line] (power input) or [Ext] (external input signal) as the synchronization signal source.

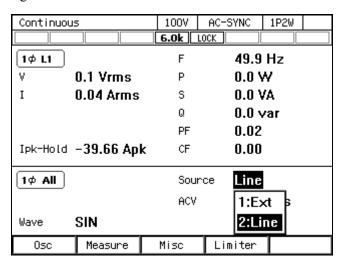

4. When the internal signal source is synchronized with the external signal or the power line, the icon Lock is displayed.

### 4.20 Amplifying the External Signal Input


When you select EXT for the signal source, you can output the amplified external signal. Also, when you select ADD for the signal source, you can output the amplified external signal after the internal signal is added. For the specifications of the gain setting range and the input voltage range, see 11.23.3.

------ Notes -----

- The gain setting value is retained for each of 100 V/200 V ranges.
- Within the same range, the same value is retained for the gain setting value, regardless of the combination of the AC/DC mode and the signal sources (VCA, EXT, ADD).
- If the voltage after the external signal is amplified, or if the total voltage of the amplified external signal and the internal signal exceeds ±227 V (100 V range)/±454 V (200 V range), the output voltage is clipped at that value.
- If the signal source is set to EXT, the calculation is carried out in certain intervals by the measurement function of this product. Therefore, the measurement operation cycle may become inappropriate depending on the external signal frequency, resulting in the instable measured value display. In that case, set [ADD] for the signal source and configure the settings as below. When the signal source is set to [ADD], the measurement calculation is performed in optimum interval for the frequency which is set for the internal signal source. This may solve the instability of the measured value display.
  - · Set the frequency for the internal signal source so that it is equal to the one for the external signal.
  - · Set zero for ACV and DCV.
- You cannot amplify the external signal in the polyphase model or polyphase system. Also, you cannot select EXT or ADD for the signal source.

### ■ Operation procedure

- 1. Input the signal to be amplified from the external signal input connector.
- 2. Press the [Osc] soft-key and select [2: Source], then : select [4:EXT] or [5:ADD].

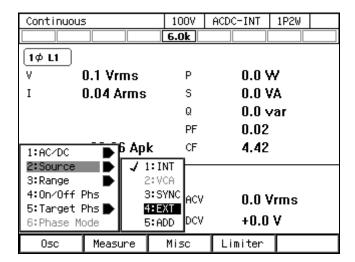

Continuous 1007 ACDC-EXT 1P2W 1φ L1 0.1 Vrms Р 0.0 W0.04 Arms 0.0 VA S Q 0.0 var 0.02 PF Ipk-Hold -39.66 Apk CF 4.40 100.0 1φ All Gain 0sc Measure Misc Limiter

### 3. Set the gain in the [Gain] item.

## 4.21 Turning the Output On or Off Rapidly

In the factory default settings, the internal output relay of this product is activated linking to the output on/off. In the output off state, the internal circuit, output terminal, and the outlet of this product are physically separated. On the other hand, if the output relay chattering causes any problem, or if you want to turn the output on or off rapidly, you can disable the activation of the output relay. In that case, the output relay is fixed to the on state and the operation to turn the output on/off is performed by the semiconductor device. The output off state means the state of high impedance. Table 4-16 shows the list of the output terminal impedance (reference values in the rear output terminal) in the output off state when the output relay control is disabled.

Table 4-16 The Output Terminal Impedance in the Output Off State when the Activation of the Output Relay is Disabled

	100 V range	200 V range
DP060LM / DP120LM	200 kΩ	200 kΩ
DP000LM / DP120LM	4N + 1	2N+1
DD1001 M	$200\mathrm{k}\Omega$	200 kΩ
DP180LM	$\overline{12N+1}$	6N+1

Note 1: The reference value of output terminal at rear panel.

Note 2: N indicates the number of the power units energized.

Note 3: For the polyphase output, the value is impedance between L1 and N / L2 and N / L3 and N.

------ Notes -----


• Even when the activation of the output relay is disabled, the relay is turned off if the protection function is activated. While the error message appearing when the protection function is activated displays "Press Enter Key," pressing the ENTER key clears the message and turns on the output relay again although the output remains off.

• The output relay is in the off state during the wait time at power-on or after changing the power unit energization setting even if the activation of the output relay is disabled.


\_\_\_\_\_

### Operation procedure

1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

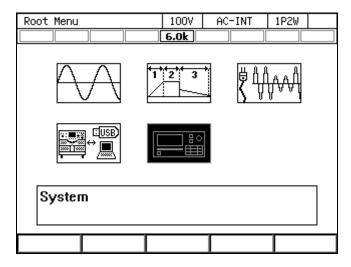

2. In the [Relay Cntrl] item, select [2:Enable] or [1:Disable]. If you select [Enable], the activation of the output relay is enabled. If you select [Disable], the output relay is fixed to the on state and the operation to turn the output on/off is performed by the semiconductor device rapidly.

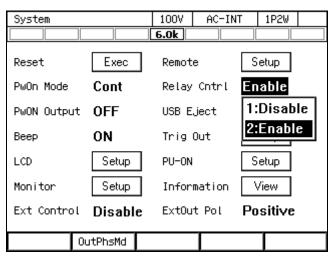

### 4.22 Enabling Automatic Output-On at Power-On

You can set the automatic output-on after power-on. If you set the output-on at power-on setting to [ON], the message window as shown in Figure 4-25 is displayed for about 10 seconds after you turn on the power and the self check at start-up, until the output becomes on automatically. If you press the ENTER key in the control panel, CANCEL key, or the soft-key under the [Cancel] button in the message window during this process, the output-on at power-on setting is set to off and the output is not enabled automatically. If you do not perform this key operation, the output on is enabled automatically after the message window is closed.

------ Notes -----


- The output-on at power-on setting is valid only in the Continuous function. If you set so that the Sequence or the Simulation function is selected at power-on (see 4.2.10 and 4.3.10), the output is not turned on automatically when turning on the power even if the output-on at power-on setting is set to on.
- If the unit is in the Remote state immediately after the start-up, the output-on at power-on setting is set to off and the output is not turned on automatically. The message window shown in Figure 4-25 is not displayed.
- If the unit enters the Remote state while the message window shown in Figure 4-25 is displayed, this message window closes and the output-on at power-on setting is set to off, therefore the output is not turned on automatically.

Power On Output
Output will Turn ON.
Cancel


Figure 4-25 The Message Window to be Shown Before the Automatic Output-On After the Power-On

### Operation procedure

1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

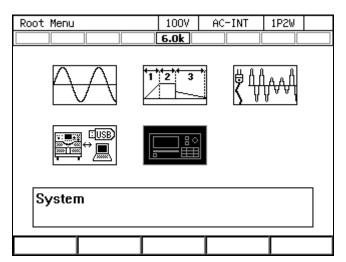

2. In the [PwON Output] item, select [2:ON] or [1:OFF]. When you select [ON], the automatic output-on at power-on is enabled.

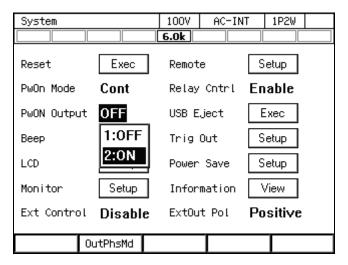

## 4.23 Power Unit Energization Setting (Using Under the Restricted Rated Power)


You can enable or disable the energization for each power unit (2 kVA per unit in DP060LM / DP120LM, 6 kVA per unit in DP180LM) within this product. If the smaller power is needed for handling the load, you can disable the energization for some power units to reduce the power consumption of this product.

If there is a power unit on which the energization is disabled, the rated power icon is displayed inverted. For details on the rated power icon, see 3.2.6 and 5.1.1


You can disable the energization for the power unit that may have a failure while continuing operation of this product by using the remaining power units. For details, see 9.1.3.

### ■ Operation procedure


1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

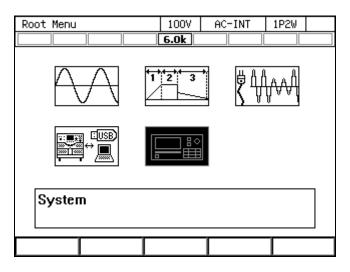

2. Put the cursor on the [Setup] next to the [PU-ON] item, then press the ENTER key. The power unit energization setting window opens.

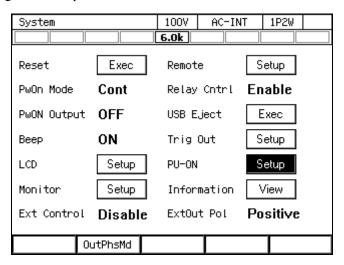

3. Enable/Disable the energization. The power unit on which the energization is enabled/disabled is represented by ☑/□ respectively. Move the cursor to ☑/□ and press the ENTER key to switch between ☑ and □.

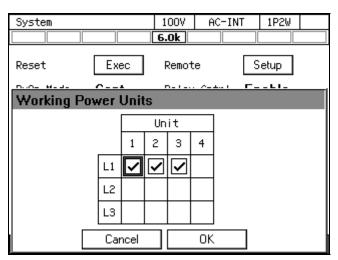

4. Select [OK]. The energization is enabled or disabled and the window is closed.

- Notes -----

- The maximum current, current monitor gain, current measurement full scale, and the power measurement full scale are set to the values corresponding to the rated output power which is determined by the number of power units to be energized. However, the applied current measurement accuracy and the power measurement accuracy are the values under the condition where all power units are enabled for energization.
- If the number of the energized power units is changed, the setting values of the peak current limiter and the RMS current limiter are restored to the factory default settings corresponding to the rated power which is determined by the number of the power units to be energized.
- If you select [OK] without changing the energization settings in the power unit energization setting window, the energization settings of all power units are disabled once and enabled again. The setting values of the peak current limiter and the RMS current limiter are restored to the factory default settings corresponding to the rated power which is determined by the number of the power units to be energized.
- For the polyphase output, the number of power units on which the energization is enabled must be same on all phases.
- If a failure occurs in a power unit for some reason, you can disable the energization for that unit to restart using this product with the remaining power units. For details, see 9.1.3.
- Power Unit Energization Setting cannot be changed for the polyphase output of DP060LM / DP180LM because each phase is the minimum unit.

4.24 Key Lock

If the key lock is enabled, the operations using keys, jog, or the shuttle are not accepted. The acceptable operations are for enabling the output off and the key lock only. This function helps to avoid the incorrect user operations during running. The icon is displayed when the key lock is enabled.

■ Operation procedure


The Shortcut operation (SHIFT) + 4 toggles between on/off of the key lock.

## 4.25 Beep


You can set whether or not the beep sounds when performing key operations. If the protection function is activated, the unit beeps regardless of the settings.

### ■ Operation procedure

1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

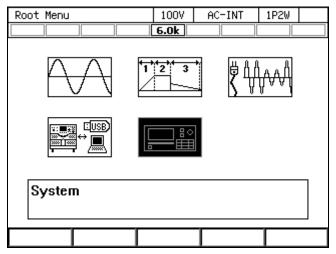

2. Use the [Beep] item to turn the beep sound on or off.

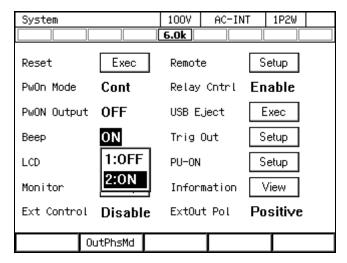


# 4.26 Changing the Background Color and the Contrast of the Screen


You can change the background color and the contrast of the liquid crystal display (LCD) screen on the panel. As the background color, you can select the blue tone or the white tone. You can also adjust the contrast in 100 steps. For the setting specifications, see 11.24.

### ■ Operation procedure

- 1. Open the window for adjusting the LCD. Following two methods are available.
- (a) Shortcut operation: SHIFT + 9
- (b) Press the MENU key to move to the root menu, then select [System]. The system setting window opens. Put the cursor on [Setup] next to the [LCD] item, then press the ENTER key.

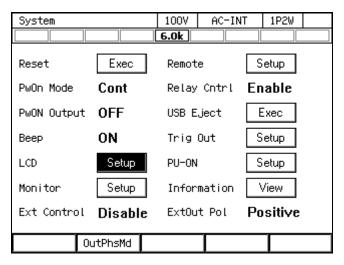

2. In the [Color] item, select [1: Blue] (blue tone) or [2: White] (white tone).

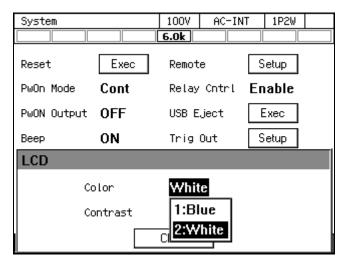

1007 AC-INT 1P2W 6.0k Exec Setup Remote Reset Relay Cotrl Enable PwOn Mode Cont PwON Output OFF USB Eject Exec Setup Веер ON Trig Out LCD Color Contrast Close

3. In the [Contrast] item, set the contrast value.

4. Close the window.

## 4.27 Restoring to the Factory Default Setting (Reset)

If you reset this product, the setting items marked with O in Table 4-17 are restored to the factory default settings. Ensure that you reset this product in the output off state.

Setting Item	Reset	Factory default setting
Output on/off	×	Off
Output range	0	100 V range
AC/DC mode	0	AC mode
Signal source	0	INT
External synchronization signal (LINE	0	LINE
or EXT)		
AC voltage setting	0	0 V
Frequency	0	50 Hz
Output waveform	0	Sine wave
Output on phase	0	0.0 deg
Output off phase	0	Enabled, 0.0 deg
Phase voltage/Line voltage setting	0	Phase voltage
selection		
Line voltage setting	0	0 V
Phase angle setting	0	Single-phase three-wire: 180 deg
		Three-phase: 120, 240 deg
Balanced/Unbalanced	0	Balanced
DC voltage setting	0	0 V
Current limiter	0	See 11.14
Setting range limit	0	See 11.15
External input gain	0	0
Phase to be measured	0	L1
Output function	0	Continuous


Table 4-17 Setting Items to be Reset

Table 4-17 Setting Items to be Reset (Continued)


Setting Item	Reset	Factory default setting
DC offset	×	0 mV
Measurement display mode	0	Normal
Measurement unit selection	0	rms
Power unit energization setting	×	All enabled (energization)
Output phase configuration	×	Single-phase two-wire
Remote sensing	Ô	Off
AGC	0	Off
Autocal	0	OFF
Measurement display mode	0	Normal
LCD display	×	Blue tone
Beep	Ô	On
Key lock	0	Off
,	0	
Output relay control	0	Enable
Output setting at power-on	0	Off
Trigger output setting	0	Negative, 10 ms
Time unit	0	S Communication (I.1. already)
Monitor output target		Current (L1 phase)
External interface	×	USB
External control	×	Disable
Clipped sine wave	U	Clip ratio specified
		Clip ratio: 100 %
1 1 '. W. C. M.		Crest factor: 1.41
Arbitrary Waveform Memory	×	ARB1 to 8: Triangle wave
G. A.		ARB9 to 16: Square wave
Sequence parameters	×	Output range: 100 V
		AC/DC mode: AC-INT
		Step Time: 0.1000 second
		Intra-Step behavior: Constant
		Waveform: SIN
		Frequency: 50 Hz
		DC voltage: 0 V
		AC phase voltage: 0 V
		Start phase: Disabled, 0 deg
		Stop phase: Disabled, 0 deg
		Phase angle:
		Single-phase three-wire 180 deg
		Three-phase 120, 240 deg
		Step termination: Continue
		Jump to stop specification: OFF
		Jump-to step specification: OFF
		Step sync output: LL
		Branch step specification: OFF
Simulation parameters	.,	Trigger output: Off
Simulation parameters	×	Output range: 100 V
		Step Time: 0.1 second
		Frequency: 50 Hz
		AC voltage: 0 V
		Start phase: Disabled, 0 deg
		Stop phase: Disabled, 0 deg
		Step sync output: LL
		Trigger output: Off
		Repeat count: Disabled 1

### ■ Operation procedure

1. Press the MENU key to move to the root menu, then select [System]. The system setting window opens.

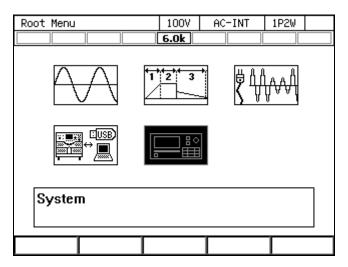

2. Put the cursor on [Exec] next to the [Reset] item, then press the ENTER key. The reset operation is performed.

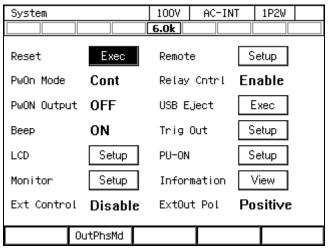

### ------ Notes -----

• If you reset the product, the content in the Basic Setting Memory will not be cleared. Once restarted, the setting of the Basic Setting Memory No.1 is recalled. To reset the setting after restart to the factory default setting, see 4.8.1 to clear the content of the Basic Setting Memory No.1.

------

## 5. Description of Screen and Menu

5.1	Screen Configuration ·····	198
5.2	Menu Composition ·····	202

## 5.1 Screen Configuration

Figure 5-1 shows the basic screen configuration. It consists of display areas marked as "a" to "i". The description of each area is shown in Table 5-1.

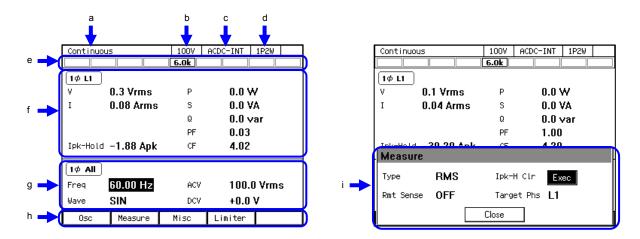


Figure 5-1 Component Name (Display Areas on the Screen)

Table 5-1 Component Name (Display Areas on the Screen)

Symbol	Area name	Description	Refer
			to
a	Screen title	Title of the currently displayed screen.	_
b	Output range	Current output range.	3.4.3
С	Output mode	Current output mode. It is displayed in the format of "AC/DC mode - Signal source."	3.4.2
d	Output phase configuration	Current output phase configuration. 1P2W: Single-phase two-wire/1P3W: Single-phase three-wire/3P4W: Three-phase four-wire	1.2
e	Status icon	The area where an icon is displayed when the product enters the specific state, for example, when the limiter is activated.	5.1.1
f	Measured value area	The measured values are displayed. In the Simple View, three items are enlarged.	3.4.11, 3.4.12
g	Output display area	The output setting is displayed. Make the output settings in this area.	3.4
h	Soft-key function	Shows the functions assigned to the soft-keys below.	3.3.3
i	Window	The window where the confirmation message is displayed or you change the settings. It is displayed as needed.	3.3.4

### 5.1.1 Status Icon

Table 5-2 shows icons displayed in specific states and their meanings.

**Table 5-2 Status Icons** 

Icon	Name	Meaning	Refer to
6.0k	Rated power	Indicates the maximum output power. If the rated power is restricted by the power unit energization setting, the icon is displayed inverted (Example: 4.0k).	3.2.6, 4.23
AGC	AGC	The AGC setting is on.	4.12
ACAL	Autocal	The Autocal is on.	4.13
BUSY	Busy	The product does not accept key operations for changing the setting as it is performing the internal processing. Please wait for a moment.	
Irms 王	RMS current limiter	The RMS current limiter is activated.	4.1.2
IPK亚	Peak current limiter	The peak current limiter is activated.	4.1.1
WATE	Active wattage limiter	The active wattage limiter is activated.	4.1.5
LOCK	Synchronization	With SYNC, the internal signal source is synchronized with the external signal or the power line.	4.19
UNLOCK	Asynchronous	With SYNC, the internal signal source is not synchronized with the external signal or the power line.	4.19
	Key lock	The key lock is enabled.	4.24
RMT	Remote	In the Remote control state.	6.
EDIT	Editing	The edit view for the sequence or simulation is displayed.	4.2.12, 4.3.12
RUN	Running	The sequence or simulation is running.	4.2.12, 4.3.12
STOP	Stand by	The sequence or simulation stands by.	4.2.12, 4.3.12
HOLD	Sequence suspended	The sequence is suspended.	4.2.12, 4.3.12
UNCAL	Unadjusted	Unadjusted. This icon means the abnormal state of the product. Contact us or our agent.	_

### 5.1.2 Measured Value Display Items

The items displayed in the measured value area are shown in Table 5-3.

**Table 5-3 Measured Value Display Items** 

Item	Description
Icon	Represents the phase and type of the measured voltage display.
1φ L1	Output voltage of the single-phase two-wire
2φ L1	Phase voltage of the single-phase three-wire L1 phase
<b>2</b> φ <b>L2</b>	Phase voltage of the single-phase three-wire L2 phase
2φL1-L2	Line voltage between the single-phase three-wire L1 and L2 phases *1
3φ L1	Phase voltage of the three-phase L1 phase
3φ L2	Phase voltage of the three-phase L2 phase
3φ L3	Phase voltage of the three-phase L3 phase
3φL1-L2	Line voltage between the three-phase L1 and L2 phases *1
3φL2-L3	Line voltage between the three-phase L2 and L3 phases *1
3φL3-L1	Line voltage between the three-phase L3 and L1 phases *1
V	Effective value of the output voltage on the output terminal
Vavg	The average DC value of the output voltage on the output terminal
Vmax	Maximum peak value of the output voltage on the output terminal
Vmin	Minimum peak value of the output voltage on the output terminal
SV	Effective value of the voltage on the sensing terminal
SVavg	Average DC value of the voltage on the sensing terminal
SVmax	Maximum peak value of the voltage on the sensing terminal
SVmin	Minimum peak value of the voltage on the sensing terminal
I *2	Output current effective value
Iavg *4	Average DC value of the output current
Imax *2	Maximum peak value of the output current
Imin *2	Minimum peak value of the output current
Ipk-Hold *2	Output current peak-hold value
F	Synchronization signal source frequency
P *3	Output active power
S *3	Output apparent power
Q *3	Output reactive power
PF *4	Power factor of the output power
CF *4	Output current crest factor

- \*1: Displays the measured phase voltage value in the Peak display format of the measured value. Displays the L1 phase voltage in the L1-L2 line voltage display, the L2 phase voltage in the L2-L3 line voltage display, and the L3 phase voltage in the L3-L1 line voltage display.
- \*2: Displays the phase current in the phase voltage display for the measured output voltage, the L1 phase current in the L1-L2 line voltage display, the L2 phase current in the L2-L3 line voltage display, and the L3 phase current in the L3-L1 line voltage display.
- \*3: Displays the phase output power in the phase voltage display for the output voltage measurement, and the all-phase total output power in the line voltage display.
- \*4: Displays the phase measured value in the phase voltage display for the measured output voltage. Displays nothing in the line voltage display.

## 5.1.3 Output Setting Display Items

The items displayed in the output setting display area are shown in Table 5-4.

**Table 5-4 Output Setting Display Items** 

Item	Description
Icon	Represents the phase to be configured.
[1φ All	Output of the single-phase two-wire
[2¢ All	All phases in the balanced mode single-phase three-wire, phase voltage setting
2⊄ Line	All phases in the balanced mode single-phase three-wire, line voltage setting
[2Φ L1	L1 phase in the unbalanced mode single-phase three-wire
[2φ L2	L2 phase in the unbalanced mode single-phase three-wire
[3φ All	All phases in the balanced mode three-phase, phase voltage setting
3¢ Line	All phases in the balanced mode three-phase, line voltage setting
3φ L1	L1 phase in the unbalanced mode three-phase
3φ L2	L2 phase in the unbalanced mode three-phase
3 ф L3	L3 phase in the unbalanced mode three-phase
Freq	Frequency of the output AC voltage
Wave	Waveform of the output AC voltage
ACV	Output AC voltage
DCV	Output DC voltage
Gain	Gain of the external signal
Source	Synchronization signal source

## 5.1.4 Warning and Error Display

If a warning or error occurs, an error message is displayed in the measured value area and the output display area. For details on error messages, see 9.1.

## 5.2 Menu Composition

The menu composition of this product is shown in Figure 5-2. Press the MENU key to move to the root menu.

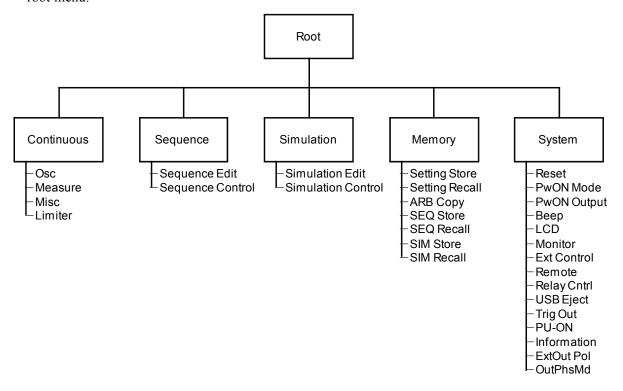


Figure 5-2 Menu Composition

### 5.2.1 Menus of the Continuous Function

The menus of the Continuous function are shown in Table 5-5. You can open each menu by using a soft-key.

	Menu	Description	Refer to
Osc	1: AC/DC	Switches the AC/DC mode.	3.4.2
	2: Source	Switches the signal source.	3.4.2
	3: Range	Switches the output voltage range.	3.4.3
	4: On/Off Phs	Makes the on/off phase settings.	3.4.8
	5: Target Phs	Switches the phase to be configured.	3.4.6
	6: Phs Mode	Sets the phase mode in the case of	4.15
		polyphase output.	
Measure	1: Mode	Switches the measured value display mode.	3.4.12
	2: Measure	Makes the measured value display settings.	3.4.11,3.4.13,
			3.4.14
	3: Harmonic	Displays the harmonic current measured	4.4
		values.	
	4: Disp Item	Selects display items in the Simple	3.4.12
		measured value display mode.	
Misc	1: AGC/Acal	Makes the AGC/Autocal function settings.	4.12,4.13
	2: DC Adjust	Sets the DC offset adjustment.	4.14

**Table 5-5 Menus of the Continuous Function** 

**Table 5-5 Menus of the Continuous Function (Continued)** 

Menu		Description	Refer to
Limiter	1: Ipk Limiter	Makes the peak current limiter settings.	4.1.1
	2: Irms Limiter	Makes the RMS current limiter settings.	4.1.2
	3: V/F Limiter	Sets the voltage/frequency setting range	4.1.3,4.1.4
		limit.	

## 5.2.2 Menus of the Sequence Function

The menus of the Sequence function are shown in Table 5-6. You can open each menu by using a soft-key. For how to use the Sequence function, see 4.2.

**Table 5-6 Menus of the Sequence Function** 

Menu			Description
Sequence Edit	Osc	Range	Switches the output voltage range.
		AC/DC	Switches the AC/DC mode.
	Misc	Time Unit	Switches the time unit between ms and s.
		Trig Out	Sets the trigger output.
	File	Store	Saves to, clears, and renames the Sequence
			Memory.
		Recall	Recalls the Sequence Memory.
	Clear		Resets the edited sequence to the factory default
			settings.
	Comp	ile	Compiles the edited sequence and moves to the
			Sequence Control View.
Sequence Control	Start		Starts the sequence. It is displayed in the output on
			and sequence stopped states.
	Stop		Ends the sequence. It is displayed in the sequence
			running state.
	Hold		Suspends the sequence. It is displayed in the
			sequence running state.
	Resume		Resumes the suspended sequence. It is displayed in
			the sequence suspended state.
	Bran1		Branches to a step of the branch 1. It is displayed in
			the sequence running state.
	Bran2		Branches to a step of the branch 2. It is displayed in
			the sequence running state.
	Measure		Makes the measured value display settings. It is
	D.11.		displayed in the sequence stopped state.
	Edit		Displays the Sequence Edit View. It is displayed in
			the output off state.

### 5.2.3 Menus of the Simulation Function

The menus of the Simulation function are shown in Table 5-7. You can open each menu by using a soft-key. For how to use the Simulation function, see 4.3.

**Table 5-7 Menus of the Simulation Function** 

Menu			Description
Simulation Edit Osc Range Misc Time Unit		Range	Switches the output voltage range.
		Time Unit	Switches the time unit between ms and s.
		Trig Out	Sets the trigger output.
	File	Store	Saves to, clears, and renames the Simulation Memory.
		Recall	Recalls the Simulation Memory.
	Clear		Resets the edited simulation to the factory default settings.
Compile		ile	Compiles the edited simulation and moves to the Simulation Control View.
Simulation Control	Start		Starts the simulation. It is displayed in the output on and simulation stopped states.
	Stop		Ends the simulation. It is displayed in the Simulation running state.
	Measure		Makes the measured value display settings. It is displayed in the simulation stopped state.
	Edit		Moves to the Simulation Edit View. It is displayed in the output off state.

## **5.2.4 Menus of the Memory Function**

The menus of the Memory function are shown in Table 5-8. For how to use the Memory function, see 4.8.

**Table 5-8 Menus of the Memory Function** 

Menu	Description
Setting Store	Saves to, clears, and renames the Basic Setting Memory.
Setting Recall	Recalls the Basic Setting Memory.
ARB Copy	Copies the arbitrary waveform data between the internal memory and the USB
	memory, and clears and renames it.
SEQ Store	Saves to, clears, and renames the Sequence Memory.
SEQ Recall	Recalls the Sequence Memory.
SIM Store	Saves to, clears, and renames the Simulation Memory.
SIM Recall	Recalls the Simulation Memory.

## 5.2.5 System Menus

The System menus are shown in Table 5-9.

**Table 5-9 System Menus** 

Menu	Description	Refer to
Reset	Resets the system.	4.27
PwOn Mode	Selects the output function	4.2.10,
	(Continuous/Sequence/Simulation) at power-on.	4.3.10
PwON Output	Enables/disables the function to turn on the output at	4.22
	power-on.	
Веер	Turns the beep sound on or off.	4.25
LCD	Sets the screen color and the contrast.	4.26
Monitor	Makes the Monitor function settings.	4.10
Ext Control	Switches the control by the external control function to Enable/Disable/DevCtrl.	4.18
Remote	Makes the communication interface settings.	6.1
Relay Cntrl	Enables/disables the output relay to coordinate with the output on/off.	4.21
USB Eject	Disconnects the USB memory before removing it.	4.9
Trig Out	Makes the trigger output settings in the Sequence and the Simulation.	4.2,4.3
PU-ON	Makes the power unit energization settings.	4.23
Information	Displays the system information.	10.4
ExtOut Pol	Specifies the external control state output polarity.	4.18.1
OutPhsMd	Sets the output phase configuration.	3.4.1

## **6. Remote Control**

6.1	Communication Interface · · · · · · · · · · · · · · · · · · ·	208
6.2	Remote/Local State Switching ·····	216

### 6.1 Communication Interface

This product is provided with the USB and RS232 communication interfaces as standard and is remote-controllable by a computer. Also, either GPIB or LAN communication interface can be chosen when ordering. The remote control allows almost all the operations available on the control panel to be performed. In addition, it can read the internal state such as setting values and errors. The command language is compliant with the SCPI Specification 1999.0.

Regardless of which communication interface is used, you can create and use a program that uses the Virtual Instrument Software Architecture (VISA) library. If you do not have a license to use VISA library, you need to obtain one (generally, it requires some cost).

For details of the remote control commands and programming, refer to "Instruction Manual (Remote Control)" in the attached CD-ROM.

### 6.1.1 USB


This product is compliant with the USB Test and Measurement Class (USBTMC). Normally, the USBTMC class driver supports the sub class USB488 and can perform almost the same controls as GPIB on USB.

#### ■ Preparation


The computer used for control needs a USBTMC class driver installed on it. The USBTMC class driver is included in the hardware and software product of each company that provides the VISA library.

### ■ Operation procedure


1. Press the MENU key to move to the root menu, and then select [System]. The system setting window opens.

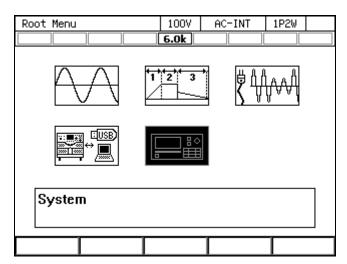


2. Put the cursor on [Setup] next to the [Remote] item, then press the ENTER key. The remote setting window opens.

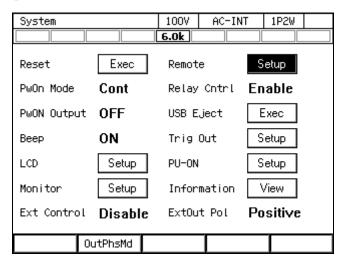

3. In the [Interface] item, select [USB].

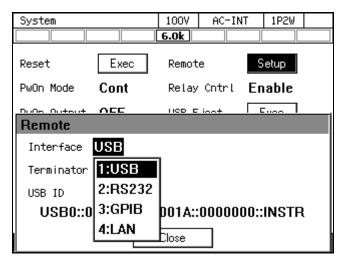

4. The window shows [Terminator] and [USB ID]. For the USB ID, see the explanation in the next section. Select [OK] to close the window.

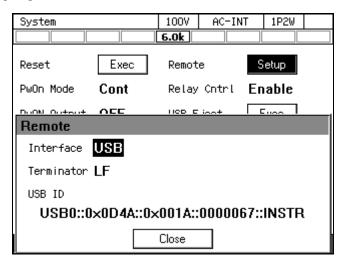

5. Use a commercially available USB cable (Type A to B) to connect this product to the computer. USB connector is available on the rear of this product.

------ Notes ------

- Avoid use in a place under electrically noisy environment.
- It is recommended to use a fully-shielded, short cable.
- The use of USB hub may cause the product not to communicate properly.

.....

### ■ About USB ID

Used for a system connected with multiple DP series programmable AC power sources through USB, to enable the application identify each source. The USB ID is represented in the following format.

USB0::[Vendor number]::[Product number]::[Serial number]::INSTR

Vendor number: Fixed to 3402 (0x0D4A)

Product number: Fixed to 26 (0x001A)


Serial number: A unique number (serial number) has been set for each product.

### 6.1.2 RS232


For the interface specifications, see 11.28.

### Operation procedure


1. Press the MENU key to move to the root menu, and then select [System]. The system setting window opens.

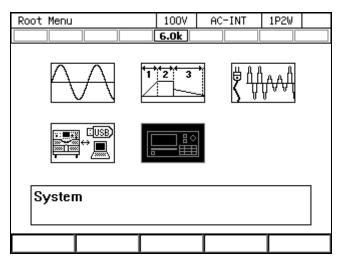


2. Put the cursor on [Setup] next to the [Remote] item, then press the ENTER key. The remote setting window opens.

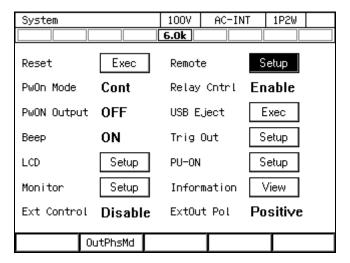

3. In the [Interface] item, select [RS232].

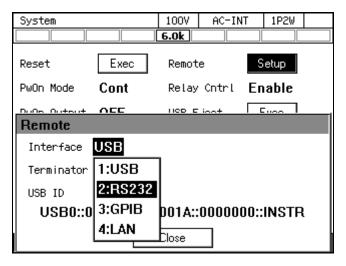

4. Set each item.

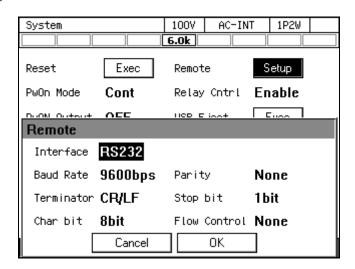

5. Use a D-sub 9-pin cross cable to connect this product to the computer. The connector is on the rear of this product.

------ Notes ------

- Avoid use in a place under electrically noisy environment.
- Turn off this product and the computer before connecting or disconnecting the cable.
- Binary transmission is not supported.


------

#### 6.1.3 **GPIB**


This product is compliant with the GPIB IEEE Standard 488.1-1987. The GPIB-based remote control is available. For the interface specifications, see 11.28.

### ■ Operation procedure


1. Press the MENU key to move to the root menu, and then select [System]. The system setting window opens.

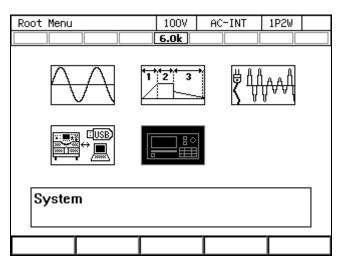


2. Put the cursor on [Setup] next to the [Remote] item, then press the ENTER key. The remote setting window opens.

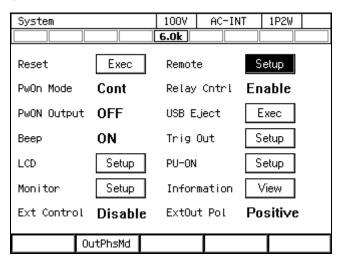

3. In the [Interface] item, select [GPIB].

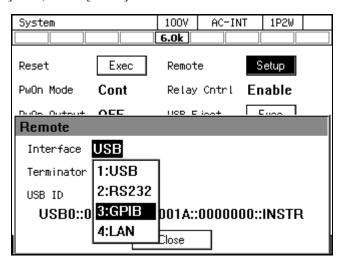

4. In the [Address] item, set the address. [Terminator] is fixed to "LF".

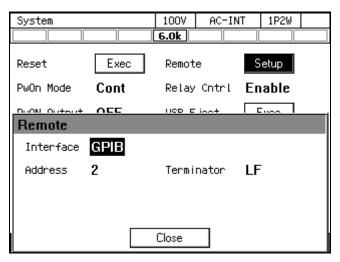

5. Use a GPIB cable to connect this product to the computer. The connector is on the rear of this product. Turn off this product and the computer before connecting or disconnecting the cable.

------ Notes -----

- Avoid use in a place under electrically noisy environment.
- Before connecting or disconnecting the cable, turn off the power to all devices on the bus.
- When using the GPIB, turn on the power to all devices on the bus.
- Ensure that the total cable length is within 20 meters.
- Ensure that the length of one cable is within 4 meters.
- Do not set the same address as the one used for any other device connected to the same bus. Otherwise, the product cannot communicate properly.
- Binary transmission is not supported.
- Query for the main unit status byte using a serial poll is not supported.


### 6.1.4 LAN

For the interface specifications, see 11.28.


For how to set LAN interface, refer to the Instruction Manual (Remote Control).

### ■ Operation procedure


- 1. Connect this product and computer with LAN cable. LAN connector is available on the rear of this product. Turn off this product and the computer before connecting or disconnecting the cable.
- 2. Press the MENU key to move to the root menu, and then select [System]. The system setting window opens.

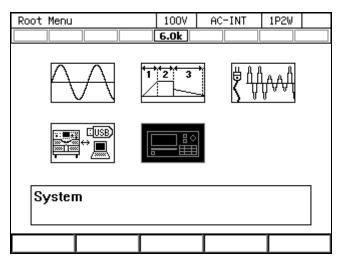


3. Put the cursor on [Setup] next to the [Remote] item, then press the ENTER key. The remote setting window opens.

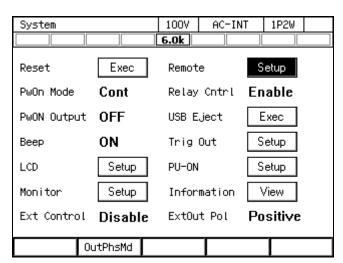

4. In the [Interface] item, select [LAN].

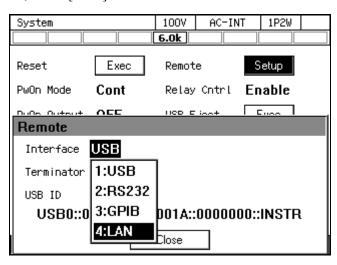

5. The current [MAC Address], [IP Address], [Subnet mask] and [Gateway] are displayed. When not using fixed IP, \*\*\* is displayed because it is uncertain except for MAC Address immediately after interface switching. After assignment, the display such as IP Address will be updated. Refer to the matters for IP address setting etc. For details, refer to "Instruction Manual (Remote Control)" contained in the CD-ROM.

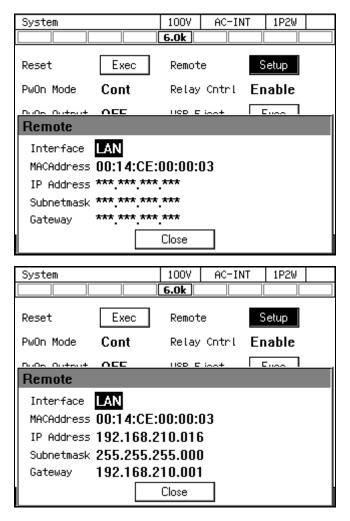

MAC Address: Device-specific address (physical address). It cannot be changed. It is 8 bit

delimited, hexadecimal notation.

IP Address: In IP (Internet Protocol), you can check the address (logical address) for

> identifying the device. The range from 192.168.0.0 to 192.168.255.255 is a private IP address that you can freely use in a small local network (Class C).

Subnet mask: You can check the mask that separates the upper network address and the lower

host address from the IP address.

When accessing an external network, you can check the IP address of the Gateway:

gateway (repeater) to use implicitly.

------ Notes -----

• Avoid use in a place under electrically noisy environment.

• Turn off this product and the computer before connecting or disconnecting the cable.

• Binary transmission is not supported.

#### 6.2 Remote/Local State Switching

#### 6.2.1 **Remote State**

In the Remote state, the control panel key operations are not accepted. However, the output off (OUTPUT key) and the switching to the Local state (SHIFT) + (O) are accepted.

### Switching to the Remote state

When communication is established after the command is sent from the computer to this product, this product switches to the Remote state.

#### 6.2.2 **Local State**

Control panel key operations are accepted.

### Switching to the Local state

The Shortcut operation (SHIFT) + o switches to the state to Local.

# 7. Options

7.1	Remote Controller · · · · · · · · · · · · · · · · · · ·	218
7.2	Fixing Bracket ·····	218
7.3	Replacement Air Filter······	219
7 4	Power Cable · · · · · · · · · · · · · · · · · · ·	220

### 7.1 Remote Controller

A remote controller with the numeric keypad, jog, and shuttle. It supports almost all the operations available on the main unit control panel. This option can be requested at the time of order or added after the purchase. For the remote controller operations, refer to the instruction manual that comes with the remote controller.

Model name: DP008

Product name: Remote Controller

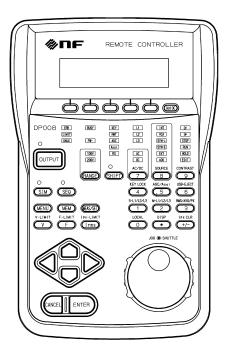


Figure 7-1 Remote Controller External View

## 7.2 Fixing Bracket

The fixing bracket which fix this product to the floor. They can be requested at the time of order or added after the purchase.

**Table 7-1 Fixing Bracket Model Names** 

Model name	Product name	Description
PA-001-2973	Fixing bracket Type2L	For DP060LM
PA-001-2971	Fixing bracket Type4L	For DP120LM
PA-001-2887	Fixing bracket Type5L,6L	For DP180LM

Note: When fixing DP060LM / DP180LM, attach the fixing bracket to the front, rear, left and right side of this product.

When fixing DP120LM, attach the stabilizer included in this product to the left and right side of this product and attach the fixing bracket to the front and rear side of that.

## 7.3 Replacement Air Filter

A replacement air filters on the front grill. This option can be requested at the time of order or added after the purchase. There are five types of air filters. Correspondence between the front grills and the air filters are shown in Figure 7-2. When exchanging the air filter of all front grilles of one product, the number shown in Table 7-2 is required. For how to replace the air filters, see 10.2.

Model name	Draduat nama	Description	Number of used sheets		
Model name	Product name	Description	DP060LM	DP120LM	DP180LM
PA-001-2792	Replacement Air Filter 1L	For the Front grill 1L 1 sheet	1	1	1
PA-001-2793	Replacement Air Filter AL	For the Front grill AL 1 sheet	0	0	1
PA-001-2794	Replacement Air Filter 2L,BL	For the Front grill 2L, BL 1 sheet	0	1	4
PA-001-2969	Replacement Air Filter 3L	For the Front grill 3L 1 sheet	1	0	0
PA-001-2970	Replacement Air Filter 4L	For the Front grill 4L	0	1	0

**Table 7-2 Replacement Air Filter Model Names** 

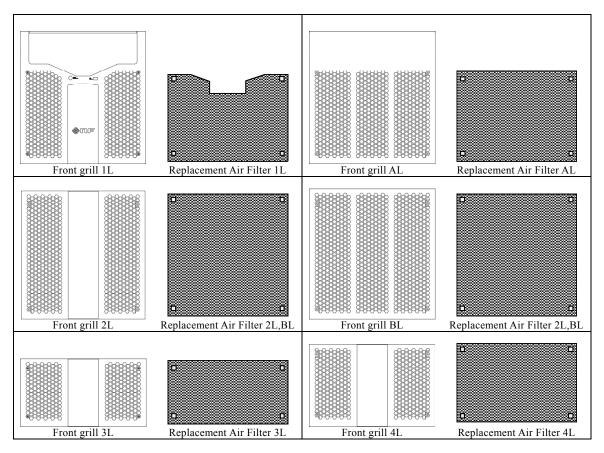


Figure 7-2 Correspondence between Front Grills and Air Filters

## 7.4 Power Cable

Cables for the power input. They vary in cross sectional area depending on the power input and the rated output as shown in Table 7-3. A crimp-type terminal is attached to each cable on the end which is to be connected to the input terminal of this product. The length of the cable is 3 m.

- On the power cable, the end which is to be connected to the distribution board has no terminal attached. Use a crimp-type terminal appropriate for the terminal screw diameter of the distribution board to connect the cable firmly.
- The power cable is dedicated only to this product. Do not use it with any other product.

**Table 7-3 Power Cable Model Names** 

Model name	Power input	Rated output	Maximum power consumption	Terminal size	Nominal cross sectional area
PA-001-3252	Single-phase	6.0 kVA	9.00 kVA	M6	14 mm <sup>2</sup> approx
PA-001-3254	input (1P2W)	12.0 kVA	18.00 kVA	M8	38 mm <sup>2</sup> approx
PA-001-3256	Three-phase	6.0 kVA	9.00 kVA	M6	14 mm <sup>2</sup> approx
PA-001-3258	three-wire	12.0 kVA	18.00 kVA	M8	22 mm <sup>2</sup> approx
PA-001-3259	input (3P3W)	18.0 kVA	27.00 kVA	M10	38 mm <sup>2</sup> approx
PA-001-3263	Three-phase	6.0 kVA	9.00 kVA	M6	5.5 mm <sup>2</sup> approx
PA-001-3264	four-wire	12.0 kVA	18.00 kVA		14 mm <sup>2</sup> approx
PA-001-3265	input (3P4W)	18.0 kVA	27.00 kVA	M10	22 mm <sup>2</sup> approx

# 8. Peripherals

8.1	Peripherals Line-up ·····	222
8.2	Using in Combination with DIP or RIN	223

## 8.1 Peripherals Line-up

Immunity Test Software, Voltage Dips Simulator, Reference Impedance Network are provided as peripherals of this product.

ES0406D, As-517A, As-537, ES4152, ES4153 which are peripherals of ES series cannot be used as those of this product.

### 8.1.1 Immunity Test Software (DP0408)

Model name: DP0408

Product name: Immunity Test Software

It is application software that performs various low frequency immunity tests including IEC 61000-4-11.

## 8.1.2 Voltage Dips Simulator (DP4170 Series)

Model name: DP4172 / DP4173 / DP4178 / DP4179

Product name: Voltage Dips Simulator

By combining with this product, single-phase and three-phase voltage dips tests complying with IEC 61000-4-11 can be performed. In addition, "Large capacity model" is also available for IEC 61000-4-34 test.

In this document, it is written as DIP. When using this product in combination with DIP, consult NF Corporation.

Note: When performing the tests specified by the IEC standard, use both DIP and Immunity Test Software.

### 8.1.3 Reference Impedance Network (DP4160 Series)

Model name: DP4162 / DP4163 / DP4164 / DP4165 / DP4166 / DP4167 / DP4168 / DP4169

Product name: Reference Impedance Network

It is a network of resistance and inductance to simulate the impedance of the commercial power system. By combining with this product, impedance specified by IEC 61000-3-3 can be realized. In addition, "Large capacity model" is also available for IEC 61000-3-11 test.

In this document, it is written as RIN. When using this product in combination with RIN, consult NF Corporation.

## 8.2 Using in Combination with DIP or RIN

When using this product in combination with DIP or RIN, connect between CONTROL I/O connector and CONTROL IN connector of this product with the attached control cable (25 pin) and connect CONTROL SIGNAL connector of this product and DIP or RIN with the control cable included in DIP or RIN. Also set external control function to DevCtrl.

For detail on how to use DIP or RIN, refer to the respective instruction manual.

### 8.2.1 The Case the Voltage Drop Due to Wiring is Small

- (a) The case measuring with the output terminal of this product

  The feedback cable included in DIP or RIN and the FEEDBACK connector of DIP or RIN are not used. Turn off the remote sensing function of this product.
- (b) The case measuring with the sensing input terminal of this product This product measures the voltage at the FEEDBACK connector of DIP or RIN. Connect between the FEEDBACK connector of DIP or RIN and the sensing input terminal of this product with the feedback cable included in DIP or RIN. Turn on the remote sensing function of this product.

### **⚠ WARNING**

• Turn off this product including its peripherals before connecting or disconnecting the cable. Be sure to turn off this product and switch off the breaker at the distribution board. Otherwise, an electric shock might occur and it may damage the load and this product.

### 

• For the polyphase output, cables should be connected to the sensing input terminals N1, N2, and N3 for each phase. These terminals do not have the same electric potential within this product.

## 8.2.2 Compensating the Voltage Drop by the FEEDBACK Connector of DIP or RIN

(a) Compensate when setting remote sensing function to FB

By changing the voltage feedback detection point from the inside of this product to the external (sensing input terminal), the output voltage at the FEEDBACK connector of DIP or RIN can be compensated.

Connect between the FEEDBACK connector of DIP or RIN and the sensing input terminal of this product with the feedback cable included in DIP or RIN. Figure 8-1 shows the control cable connection diagram of DP060LM and RIN (DP4162) in single-phase output and Figure 8-2 shows that of DP060LM and DIP (DP4172) in three-phase output for reference.

Set the remote sensing function of this product to FB. (See 4.11.)

For connection diagram of the other model, refer to its manual.

(b) Compensate with AGC or Auto-cal function

If the voltage waveform is not distorted, the voltage drop can be compensated. When output is unstable in case a), the stabillity may be improved.

Connect between the FEEDBACK connector of DIP or RIN and the sensing input terminal of this product with the feedback cable included in DIP or RIN.

Set the remote sensing function of this product to ON, and set AGC or Autocal (See 4.12, 4.13).

### **⚠ WARNING**

• Turn off this product including its peripherals before connecting or disconnection the cable. Be sure to turn off this product and switch off the breaker at the distribution board. Otherwise, an electric shock might occur and it may damage the load and this product.

### 

- For the polyphase output, cables should be connected to the sensing input terminals N1, N2, and N3 for each phase. These terminals do not have the same electric potential within this product.
- Place DIP or RIN near this product.
- The cable connecting between the output terminal of this product and the input terminal of DIP or RIN should be as short as possible (3 m or less) and use twisted or parallel.
- Be sure to wire the feedback cables correctly between the FEEDBACK connector of DIP or RIN and the sensing input terminal of this product. If you turn on the output of this product while the feedback cable is not connected to the sensing input terminal of this product correctly, this product cannot control the output, and excessive voltage may be applied to the load.
- Before connecting the load to the output terminal of DIP or RIN, wire this product with DIP or RIN and turn on the output of this product, and then check matching the output voltage at the terminal of DIP or RIN and the setting voltage of this product.

 votes	 	 	 

• When setting remote sensing function to FB to compensate for the voltage drop, the output voltage may become unstable depending on the load and the wiring to the load.

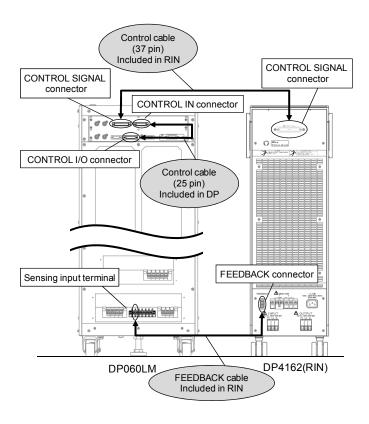


Figure 8-1 The Control Cable Connection Diagram of DP060LM and DP4162 (RIN) in Single-phase Output

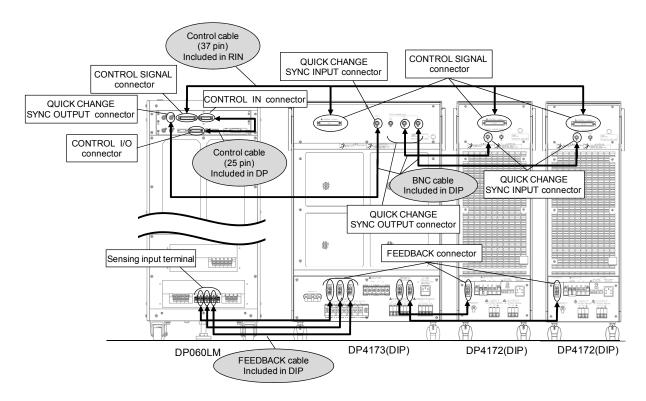


Figure 8-2 The Control Cable Connection Diagram of DP060LM and DP4173/DP4172 (DIP) in Three-phase Output

# 9. Troubleshooting

9.1	Error Messages and Error Handling	228
9.2	When a Failure is Suspected ······	235

## 9.1 Error Messages and Error Handling

### 9.1.1 Error Message Screen

An error message screen opens as shown in Figure 9-1, for example, in case that the protection function is activated. The description of each item is shown in Table 9-1.

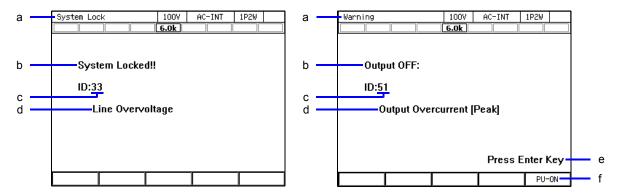


Figure 9-1 Error Message Screen Example

**Table 9-1 Description of the Error Message Screen** 

Symbol	Name	Description	Refer to
a	Screen title	System Lock: An error whose protection type is System	9.1.4
		Lock Warning: An error whose protection type is Output Off	
b	Protection type	System Locked: System Lock Output OFF: Output Off	9.1.4
c	Error ID	The number to identify an error.	9.1.5
d	Message	Describes the error details.	9.1.5
e	Press Enter Key	Displayed for an error whose protection type is Output Off	9.1.2
f	Soft-key [PU-ON]	Displayed for an error that occurred on the power unit.  This key opens the power unit energization setting window, enabling you to disable the energization of the power unit that repeatedly generates the error.	9.1.3

## 9.1.2 If an Error Message is Displayed

If an error message is displayed, handle it by the following procedure. When the error occurs repeatedly, handle it according to 9.1.3.

### ■ Handling procedure

- 1. Check on the error content and remove the reason of the error. For each message and its handling method, see 9.1.5.
- 2. When the protection type says System Locked, cycle the power of the product.
- 3. When the protection type says Output OFF, press the ENTER key. The error message disappears.
- 4. Now the product is available.

### 9.1.3 If an Error Occurs Repeatedly

If an error message repeatedly appears even though you removed the cause of the error, the error may be resolved by restarting the power unit.

If the error still exists, this product or the power unit in the product may be faulty. Repair is needed in this case. Contact the seller (NF Corporation or our agent) from whom you purchased the product. Even though one of the power units is faulty, the product can be used by disconnecting the faulty power unit and using the rest of them.

The following shows how to restart and disconnect the power unit in the case of an error.

------ Notes -----

• The following procedure is available only when the [PU-ON] soft-key is displayed on the error message window. Stop using this product in the case of a repeating error without the [PU-ON] soft-key.

### ■ Operation procedure

- 1. In the error message window, press the [PU-ON] soft-key. The power unit energization setting window opens.
- 2. The power unit with an error is marked with "E" like . Check on the power unit that has an error. First, leaving the energization setting as is, select OK. All the power units are restarted.
- 3. When the error message window is displayed again, press the ENTER key.
- 4. If the error still exists, press the [PU-ON] soft-key again to open the power unit energization setting window.
- 5. Check on the power unit that has an error. If the same power unit still has an error, it may be faulty. Move the cursor to this power unit, then press the ENTER key. The check mark on this power unit is removed, showing. If a different power unit has an error, leave the check mark as is. Select [OK].
- 6. The power unit energization setting is updated, and only the power units with the check mark are restarted. When the error message window is displayed again, press the ENTER key.
- 7. Repeat the step 4 and later ones until errors are resolved. After the error is resolved, the product can be continuously used using the power units with the check mark.

-- Notes -----

- The E mark does not mean it is faulty but indicates the protection operation was activated. In some cases such as the protection operation was activated in a chain-reaction manner, the E mark may appear on a normal power unit. A power unit is judged as faulty by checking whether the error repeats or not after the power unit is restarted as described in the step 2.
- When the error message is "ID:54 Power Unit DCPS Undervoltage" or "ID:52 Power Unit DCPS Error," the error is quite likely to be resolved after the power unit is restarted as described in the step 2.

### 9.1.4 Protection Operation Types

When the protection function is activated or an error is detected, the product applies one of the following five types of protection operation and error message, according to the error level.

### ■ System Lock

The output turns off. No operations are accepted on the control panel and the remote controller. The panel says "System Locked." To operate the product again, it is necessary to cycle the power of it.

### ■ Output Off

The output turns off. The panel says "Output OFF" and "Press Enter Key." When you press the ENTER key, you will return to the previous window for further operations if the cause of the error has been removed. Otherwise, the error message window will be displayed again.

When the [PU-ON] soft-key is displayed on the error message window, pressing the soft-key opens the power unit energization setting window. If an error repeatedly occurs, you can disable the energization of the power unit that has the error to continue to use the product with the rest of the power units. For details, see 9.1.3.

### ■ Message display only

The output state remains unchanged. The panel shows the error message window. Press the ENTER key to return to the previous screen for further operations.

### Limiting action

The output is limited. The panel shows the icon indicating the limiting action, without an error message. In addition, the LIMIT LED illuminates on the front panel. The output turns off after a given period according to the limiter setting. In this case, an error message appears after the output off.

### ■ Icon display

The output state remains unchanged. The panel shows an icon instead of an error message. The panel operation is available as usual.

## 9.1.5 Error Message List

Error messages are listed in Table 9-2.

**Table 9-2 Error Message List** 

ID	Message	Protection	Cause or Necessary action
		type	
2	Invalid in This Output	Message	This output mode does not allow the setting
	Mode	display only	(execution). Change the output mode.
3	Invalid with Output ON	Message	The output on state does not allow the
		display only	setting (execution). Turn the output off, then
			set (execute).
4	Invalid with Output OFF	Message	The output off state does not allow the
		display only	setting (execution). Turn the output on, then
			set (execute).
5	Busy	Message	The busy state does not allow the setting
		display only	(execution). Execute after the busy icon
			disappears.
6	Invalid with Remote	Message	The remote control state does not allow the
	Control	display only	setting (execution). Bring the state to local
			control, then set (execute).
10	Sync Frequency Error	Message	The external synchronization signal
		display only	frequency is out of the range, which does
			not allow the setting (execution). Enter the
			signal frequency within the range.
13	Auto Cal Disabled	Message	The Autocal setting becomes off because of
		display only	out of the calibration range.
15	AGC Disabled	Message	The AGC setting becomes off because of
		display only	out of the calibration range.
20	Invalid	Message	The condition cannot be set (executed).
		display only	
24	USB Memory	Message	No USB memory is connected. Connect a
	Unconnected	display only	USB memory.
25	USB Memory Removed	Message	The USB memory was removed before the
	illegally	display only	eject operation. Perform the eject operation
			before removing a USB memory.
26	USB Memory Access	Message	The USB memory has an access error.
	Error	display only	
27	Too Many Files	Message	There are too many files in the USB
	_	display only	memory. Each folder can contain 500 files
			or less.
29	Sync Frequency Unlocked	Message	The output cannot be turned on because of
		display only	not locking to the synchronization
			frequency.
30	Remote Controller Error	Message	Communication with the remote controller
		display only	cannot be made. Make sure the remote
			controller cable is connected properly.
31	Internal Memory Error	Message	The internal memory has an error.
		display only	,
L	1	moping only	<u> </u>

Table 9-2 Error Message List (Continued)

ID			ge List (Continued)
ID	Message	Protection type	Cause or Necessary action
32	Calibration Data Error ME	Message display only	The adjustment data is abnormal. Cycle the power. If it still occurs, contact the seller (NF Corporation or our agent) from whom you purchased the product.
33	Line Overvoltage	System Lock	The power input voltage is excessive. Check if the power input is appropriate.
34	Line Undervoltage	System Lock	The power input voltage is insufficient. Check if the power input is appropriate.
36	Communication Failure PU	System Lock	There is a communication error between the firmware and the power unit. Cycle the power. If it still occurs, contact the seller (NF Corporation or our agent) from whom you purchased the product.
37	Communication Failure ME	System Lock	There is a communication error between the firmware and the output measurement section. Cycle the power. If it still occurs, contact the seller (NF Corporation or our agent) from whom you purchased the product.
43	Mismatched Pw Unit Versions	System Lock	All power unit versions do not match.
44	Unsupported Pw Unit Version	System Lock	A power unit of unsupported version is connected.
46	Inhibited Cabinet Connect	System Lock	A multi-phase model is connected with system cable. Use the multi-phase model as a single unit.
47	No Available Power Unit	System Lock	There is no power unit that can be started.
48	Output Overvoltage	Output Off	The output voltage is excessive. This may occur at an abrupt change in the output current due to the inductive load.  Also when the remote sensing function set to FB, check the feedback cable connects correctly. (See 8.2.2)
50	Output Overcurrent [RMS]	Output Off	The output current RMS value is excessive on a module in the power unit. This may occur when the output terminal is short-circuited.  Also when the remote sensing function set to FB, check the feedback cable connects correctly. (See 8.2.2)
51	Output Overcurrent [Peak]	Output Off	The output current peak value is excessive.
52	Power Unit DCPS Error	Output Off	The DC power supply in the power unit is abnormal, or see the notes in "9.1.3, Operation procedure."

**Table 9-2 Error Message List (Continued)** 

ID	Message	Protection	Cause or Necessary action
110	Wiessage	type	Cause of inccessary action
53	Power Unit DCPS	Output Off	The voltage of the DC power supply in the
	Overvoltage		power unit is excessive. This may occur
			when the power flows back from the load.
54	Power Unit DCPS	Output Off	The voltage of the DC power supply in the
	Undervoltage		power unit is insufficient, or see the notes in
			"9.1.3, Operation procedure." This may
			occur when the overload output activated
			the protection function on the DC power
			supply.
55	Overheat	Output Off	The temperature in the power unit is
			abnormally high. Check if the ambient
			temperature is appropriate. Check the filters
			for clogging. For filter cleaning, see 10.2.
56	Sensing Voltage Error	Output Off	The sensing voltage is abnormal. Make sure
			the cable is properly connected to the
	G F	0 4 4 0 00	sensing input terminal.
57	Sync Frequency Error	Output Off	The frequency went out of the
			synchronizable range, and thus the output turned off.
58	Current Limiter [RMS]	Output Off	The RMS current limiter was activated, and
36	Current Limiter [Kivis]	Output Off	
			thus the output was turned off according to the setting.
59	Current Limiter [Peak]	Output Off	The peak current limiter was activated, and
39	Current Emilier [reak]	Output Off	thus the output was turned off according to
			the setting.
60	Power Unit Internal Error	Output Off	This is a power unit internal error. If it
	Tower ome meemar Error	Output OII	occurs repeatedly, contact the seller (NF
			Corporation or our agent) from whom you
			purchased the product.
61	WATE	Limiting	The active wattage limiter is activated.
		action	
62	Irms 조	Limiting	The RMS current limiter is activated.
		action	
63	IPK至	Limiting	The peak current limiter is activated.
		action	The internal operation differs from that for
			ID 64.
64	IPK玉	Limiting	The peak current limiter is activated.
		action	The internal operation differs from that for
			ID 63.
68	PU-ON Setting Updated	Message	The power unit energization setting was
		display only	updated.
69	Polyphase Connection	Message	A phase configuration is detected that is
70	Updated	display only	different from the previous one.
70,	UNCAL	Icon	The power unit or the system has not been
71	Colibration Data Europe CH	display	adjusted.
75	Calibration Data Error SH	Message	The adjustment data is abnormal.
77	LISB Memory Connected	display only Message	A USB memory was inserted.
//	USB Memory Connected	display only	A USD memory was inserted.
78	USB Memory	Message	The USB memory eject operation was
/ 0	Disconnected	display only	performed, and thus the USB memory can
		alspiay only	be removed now.
	<u> </u>		ov removed now.

## Table 9-2 Error Message List (Continued)

ID	Message	Protection type	Cause or Necessary action
82	Sequence Compile Error	Message display only	Sequence compilation failed.
83	Simulation Compile Error	Message display only	Simulation compilation failed.
84	System Updated Please Reboot	System Lock	The setting of output phase configuration changed. Or the firmware was updated.
85	System Updated Please Reboot	System Lock	The firmware was updated.
-200	EXECUTION ERROR	Message display only	The panel operation (or remote command) could not be executed.

## 9.2 When a Failure is Suspected

When a symptom that suspects a failure occurs, take an action according to Table 9-3. If it does not solve the problem, contact the seller (NF Corporation or our agent) from whom you purchased the product.

Table 9-3 Actions When a Failure is Suspected

Category	Symptom	Possible Cause	Necessary Actions
Problem at	The product does	The power is not	Connect the product to the power
power	not start	connected.	supply. $\rightarrow$ 2.4
on/off	operating when	The power supply is out	Use the power supply within the
	the power switch	of the rated range.	rated range. $\rightarrow$ 2.4
	is turned on.	The internal fuse is	Ask us or our agent for repair.
		blown.	
	The product does	It is not abnormal. The	Please wait for a moment. It will
	not stop	product automatically	stop in about five seconds.
	immediately	stops after the internal	
	when the power	voltage decreases to a	
	switch is turned	sufficiently safe level.	
	off.		
	LCD shows	The LCD contrast is	Increase the LCD contrast. If the
	nothing (fan is	low. The ambient	LCD display is completely
	rotating).	temperature may be	invisible, perform the Shortcut
		changed from the time	operation (SHIFT) + (9) to
		when the contrast was	adjust the contrast. Then, the digit
		adjusted.	cursor is placed on the tenths
			place. →4.26
Problem at key	Panel operations cannot be	The key lock is set to	Set the key lock to off. $\rightarrow 4.24$
operation	performed.	on. Keys or dials are	Ask us or our agent for repair.
operation		deteriorated.	
	Numerical	It is in the shift state	Press the SHIFT key to exit from
	values cannot be	(the SHIFT key LED	the shift state. $\rightarrow$ 3.3.7
	entered through	illuminates).	
	the numeric		
Problem at	keypad. At start-up, the	They are not saved in	At start-up, the settings in the
output	previous settings	the setting memory No.	setting memory No. 1 are recalled.
setting	are not kept.	1.	$\rightarrow$ 4.8.1
Setting	The output phase	The output is on.	Turn the output off before
	configuration	The output is on.	switching the output phase
	cannot be		configuration. $\rightarrow$ 3.4.1
	switched.	The output function is	Change the output function to the
		set to the Sequence or	Continuous before switching the
		Simulation.	output phase configuration. →
		Silliniwilli.	3.3.1, 3.4.1
	The output	The output is on.	Turn the output off before
	voltage range	The output is on.	switching the output voltage
	cannot be		range. $\rightarrow 3.4.3$
	switched.		141150. 70.1.0
	The output	The signal source is set	Change the signal source. $\rightarrow$ 3.4.2
	voltage cannot	to EXT or VCA.	Change the dighar source. 70.4.2
	be set.	You are trying to set a	Check for the voltage setting
		value that is out of the	
		setting range.	
			range limit. $\rightarrow 4.1.3$

Table 9-3 Actions When a Failure is Suspected (Continued)

Category	Symptom	Possible Cause	Necessary Actions
Problem at output setting	The output frequency cannot be set.	The signal source is set to EXT or SYNC.	This value cannot be set when the signal source is EXT and SYNC. Change the signal source. →3.4.2
		You are trying to set a value that is out of the setting range.	Check for the frequency setting range limit. $\rightarrow 4.1.4$
	The line synchronization cannot be set.	The signal source is not set to SYNC.	Set the signal source to SYNC and the external synchronization signal source to LINE. $\rightarrow 4.19$
	The output on state cannot be achieved.	An error message is on-screen.	The output cannot be turned on while there is an error message. If the protection function is activated, remove the cause.  →9.1.2  Press the ENTER key to clear the error message. When the message says "System Locked", cycle the power.
Output-related problem	The output voltage does not come up.	The state is the output off (the OUTPUT key LED illuminates)	Press the OUTPUT key to turn the output on.
		The output voltage is set to zero.	Check for the output voltage setting. →3.4.5, 3.4.6
		The external signal source is not connected.  The external input gain is zero.	When the signal source is EXT, ADD, or VCA, connect the signal source to the external signal input terminal, and set the external input gain appropriately.
	When the external signal is amplified on EXT or ADD, the waveform is distorted and the intended output is not provided.	The output coupling mode is the AC mode.	→4.17, 4.20  In the AC mode, the waveform may be distorted as the DC component removal function works. Use in the ACDC mode.
	The measured voltage is different from the setting value.	Unnecessary items are set (for example, the AC voltage setting remains for the DC output).	Check for the setting again. In the ADD mode, check on the external input signal and gain setting as well. $\rightarrow$ 4.20
		The limiter is activated (the limiter icon is displayed).	For a load with lower impedance, the limiter is activated to make the output lower than the setting value. Check on the limiter setting. $\rightarrow 4.1$

Table 9-3 Actions When a Failure is Suspected (Continued)

Category	Symptom	Possible Cause	Necessary Actions
Output-related	The measured	The waveform is	In the specified clip ratio mode, the
problem	voltage is different from	set to CLP	output voltage setting means a value for
	the setting	(clipped sine wave) and the	the waveform before being clipped. To set a value for the clipped waveform, set
	value.	Type is set to	the Type to the specified crest factor
		Clip (specified	mode (Type: CF). $\rightarrow$ 4.6
		clip ratio mode).	,
	An error	The protection	Connect a load within the maximum
	message is	function was activated due to	output range or decrease the output
	displayed.	overload.	voltage setting.
		Excessive signal	When the signal source is EXT or ADD,
		level of the	lower the level of the connected signal
		signal generator.	generator or decrease the external input gain.
		The ambient	Decrease the ambient temperature when
		temperature is	using the product. The maximum current
		high. Air filters are	may decrease over 40 °C.  Clean the air filters by referring to 10.2.
		clogged.	, c
		Around the front	Install the product so as to satisfy the
		panel air inlet or	installation conditions described in 2.2.
		rear panel air outlet, there is	
		something	
		blocking the air	
7.6	TTI 1	flow.	
Measurement function-related	The measured voltage or	The display selection is not	Select RMS for AC. Otherwise, the correct value is not displayed.
problem	current is not	right.	correct value is not displayed.
proorem	displayed	118	
	correctly.		
	The measured	It is out of the	Set the synchronization signal source
	value is	synchronization	frequency to a value within the
	displayed as	frequency measurement	synchronization frequency measurement display range. $\rightarrow 11.12$
	·	display range.	alopay lange. /////2
	The measured	The signal source	In EXT, the measurement cycle is fixed,
	value	is set to EXT.	and thus the difference from the external
	fluctuates.		signal cycle may fluctuate the measured
			value. On the other hand, in the ADD mode, the appropriate measurement cycle
			is decided according to the internal signal
			source frequency setting. Therefore, if
			you know the frequency of the external
			signal to use, change the signal source to
			ADD, set the internal signal source frequency to the external signal
			frequency, and set the internal signal
			source output voltage to zero. $\rightarrow 4.20$
		A low frequency	For a frequency lower than 10 Hz, the
		(less than 10 Hz)	measurement cycle is a fixed value and
		is set.	thus the measured value may not be
			stable.

Table 9-3 Actions When a Failure is Suspected (Continued)

Category	Symptom	Possible Cause	Necessary Actions
Limiter/setti ng range limitation- related problem	The output current peak-hold value (measured) is larger than the peak current limiter setting	The output current overshoot occurred for the limit value.	While the peak current limiter is activated, the overshoot may occur depending on the load.  →4.1.1
Remote sensing problem	value. The Remote sensing function cannot be set to on.	The output mode is incorrect.  The waveform setting is incorrect.  The mode is not the Continuous mode.  The mode is not the stand-by state of Sequence mode.  In the stand-by state of Sequence mode (step0) and ACDC mode either AC voltage or DC voltage setting is not 0 V.	The Remote sensing function can be set to on in the AC-INT, AC-VCA, AC-SYNC, DC-INT, and DC-VCA modes. However, for the AC mode, it can be set to on only when the waveform is a sine wave. It is turned off when the Sequence or Simulation function is selected. However it can be set to ON in the AC-INT, ACDC-INT and DC-INT modes and the waveform is a sine wave or DC in case the stand-by state of Sequence mode (step0). In the ACDC mode it cannot be set to ON unless either AC voltage or DC voltage setting is 0 V. →4.11
	The Remote sensing function cannot be set to FB.	DIP or RIN is not connected.  External control function is set to Disable or Enable.	Connect this product and DIP or RIN. $\rightarrow 8.2$ Set external control function to DevCtrl. $\rightarrow 4.18.2$
Problem of AGC function	The AGC function cannot be turned on.	The output mode is incorrect.  The waveform setting is incorrect.  The mode is not the Continuous mode.  The Autocal function is on.	The AGC function can be set to on in the AC-INT, AC-VCA, AC-SYNC, DC-INT, and DC-VCA modes. However, for the AC mode, it can be set to on only when the waveform is a sine wave. It is turned off when the Sequence or Simulation function is selected. $\rightarrow$ 4.12 When the Autocal function is on, the AGC function cannot be used. Turn off the Autocal function.
		The remote sensing function is set to FB.	$\rightarrow$ 4.13 Set the remote sensing function to ON or OFF. $\rightarrow$ 4.11

Table 9-3 Actions When a Failure is Suspected (Continued)

Category	Symptom	Possible Cause	Necessary Actions
Problem of	The Autocal	The output mode is	The Autocal function can be set to
Autocal	function cannot	incorrect.	on in the AC-INT, AC-VCA,
function	be turned on.	The waveform setting is	AC-SYNC, DC-INT, and
		incorrect.	DC-VCA modes. However, for
		The mode is not the	the AC mode, it can be set to on
		Continuous mode.	only when the waveform is a sine
		The mode is not the	wave. It is turned off when the
		stand-by state of	Sequence or Simulation function
		Sequence mode.	is selected. However it can be set
		In the stand-by state of	to ON in the AC-INT, ACDC-INT
		Sequence mode (step0)	and DC-INT modes and when the
		and ACDC mode either	waveform is a sine wave or DC in
		AC voltage or DC	case the stand-by state of
		voltage setting is not	Sequence mode (step0). In the
		0 V.	ACDC mode it cannot be set to
			ON unless either AC voltage or
			DC voltage setting is 0 V.
			<i>→</i> 4.13
		The AGC function is on.	When the AGC function is on, the
			Autocal function cannot be used.
			Turn the AGC function off.
			<i>→</i> 4.12
		The remote sensing	Set the remote sensing function to
		function is set to FB.	ON or OFF. $\rightarrow$ 4.11
Problem of	Refer to "Instruction	on Manual (Remote Contro	l)" in the attached CD-ROM.
remote			
control	mi i		
Problem of	The product	The external control is	Enable the external control.
CONTROL	cannot be	disabled.	→4.18
I/O	controlled by the CONTROL I/O.	The Remote state is set	The external control is disabled in
	CONTROL I/O.	by the communication interface.	the Remote state.
Problem of	Files in the USB	USB eject operation was	Perform the USB eject operation
USB	memory do not	performed.	
memory	appear on the	performed.	$(\rightarrow 4.9)$ again just in case, and
incinory	screen.		remove the USB memory. Reconnect the USB memory and
	Sciccii.		make sure the file names are
			displayed.
		One folder contains over	Reduce the number of files in a
		500 files.	folder to 500 or less.
		The format is illegal.	Use a FAT32-formatted USB
		The format is megal.	memory.
Problem at	The current	The output offset	In the AC mode, the control
driving an	waveform is	voltage (DC component)	function works to eliminate the
inductive	abnormal (e.g.,	caused the load	offset voltage (DC component).
load (e.g.,	asymmetrical or	transformer core to	When the product is used in the
transformer)	excessive) when	reach the magnetic	ACDC mode, switch it to the AC
	the transformer	saturation.	mode. $\rightarrow$ 3.4.2
	is connected as		If it does not bring much
	the load and the		improvement, adjust the DC
	AC voltage is		offset. $\rightarrow 4.14$
	output.		011001. / 1.11
	Jaipai.	1	

Table 9-3 Actions When a Failure is Suspected (Continued)

Category	Symptom	Possible Cause	Necessary Actions
Problem at driving an inductive load (e.g., transformer)	The output overvoltage error occurs for an inductive load (e.g., transformer).	An abrupt change in the output current generated a back electromotive force.	When the output is off or the peak current limiter is activated, the load current may change abruptly, which generates a back electromotive force to cause the output overvoltage error. To avoid the abrupt current change, reduce the setting value of the peak current limiter sufficiently for a smaller output current, or conversely set it to a sufficiently large value to disable the limiter to be activated, or sufficiently reduce the amplitude before turning off the output. →4.1.1
Memory function- related problem	The memory cannot be recalled.	The output is on.	The output on state does not allow the recall. Turn the output off.
Sequence/ Simulation- related	The Sequence cannot be started.	The output is off.	Turn on the output, then start the sequence.
problem	The specified Step Time is exceeded.	The Stop Phase is enabled.	When the stop phase setting is active, the execution waits for the Step Time that was set pass, and keeps the output setting until it reaches the Stop Phase that was set, and then transitions to the next step. As the result, the actual step time is longer than the set Step Time. To move to the next step immediately after the Step Time, disable the Stop Phase. $\rightarrow 4.2$

# 10. Maintenance

10.1	Preface ·····	242
10.2	Daily Maintenance·····	242
10.3	Storage, Repackaging, Transportation ······	244
10.4	Checking Firmware Version·····	244

#### 10.1 Preface

This chapter describes:

- daily maintenance
- cautions and storing for nonuse over a long period
- cautions and repackaging for transportation.
- checking firmware version

For the simple operation check, see 2.7.

### 10.2 Daily Maintenance

This product shall be installed in a location that satisfies the installation conditions (see 2.2).

■ When the panel or case is dirty

Wipe it with a soft cloth. If the dirt is heavy, wipe it with a cloth wrung out with diluted neutral detergent solution.

#### $- oldsymbol{\perp}$ caution -

• Do not use solvents (thinners, benzine, etc.) or wipes. Otherwise, the surface may be altered or the coatings may be peeled off.

#### ■ When the front grill air filters are dirty

A front grill is provided with air filters for removing dust or dirt from the intake air. Clogged air filters deteriorate the ventilation, resulting in excessive high temperature inside the product. This may activate the overheat protection, affecting the operation, or damage the internal parts, resulting in failure. Regularly check the air filters for dirt, about once a month. If air filters are found dirty, rinse with water to remove the dirt, dry completely, then remount them. You can optionally request additional air filters for replacement (see 7.3).

#### $^- \triangle$ CAUTION $-\!-\!-$


- Do not install the product in a place with a large amount of extremely fine dust (e.g., powders). The air filters may not fully work.
- Do not install the product in a damp place prone to dew. The air filters are more likely to be clogged.

## **⚠ WARNING**


• Be sure to turn off the power switch of this product and switch off the breaker at the distribution board before removing the air filters and the front grill. Otherwise, an electric shock might occur.

The air filters can be removed by the steps described below. In order to remount them later, check on the top and bottom of the front grill and the mounting position of the air filters as you remove them.

1. Loosen the screws (M4) at the four corners of the front grill with a Phillips screwdriver (No. 2). The screws are attached with retaining washers behind. Turn and loosen the screw carefully until the corner comes free from the body.

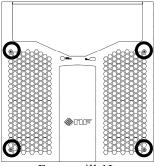



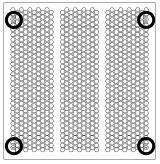


Front grill BL



In case that a retaining washer behind comes free from the screw, push it with a nut driver and attach it to the screw as shown above.

2. Remove an air filter from each front grill. Be careful with the small claws on the front grill that hold the air filters.

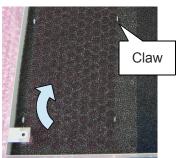

Remove a filter with careful attention to the claws.

## **⚠ WARNING**

• While removing the air filters and the front grill, do not supply the power from the distribution board. Otherwise, an electric shock might occur.

## 10.3 Storage, Repackaging, Transportation

This product shall be stored in a location that satisfies the installation conditions (see 2.2).

#### ■ Storage when unused for a long time

- Remove the power cable from the distribution board and the product.
- Store the product in a place with no falling object or dust. If it may be covered with dust, put the cover, such as cloth and polyethylene sheet, on it.
- Avoid a place exposed to rapid temperature change or direct sunlight. Store it under a normal temperature environment wherever possible. For the storage condition, see 11.32.

#### ■ Repackaging and transportation


Follow the instructions below when repackaging the product due to transfer or repair.

- In order for the main unit to be sufficiently protected from impact during transportation, pack it with a shock absorber such as AirCap.
- When requesting transportation, instruct the carrier that this product is a precision equipment.
- Be sure to include the instruction manual at transportation.


### 10.4 Checking Firmware Version

#### ■ Operation procedure


1. Press the MENU key to move to the root menu, then select [System]. The System menu opens.

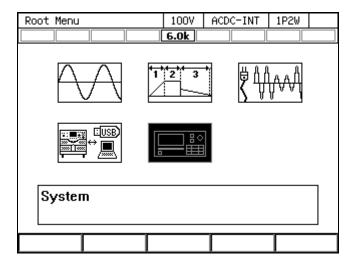

2. Put the cursor on [View] next to the [Information] item, then press the ENTER key.

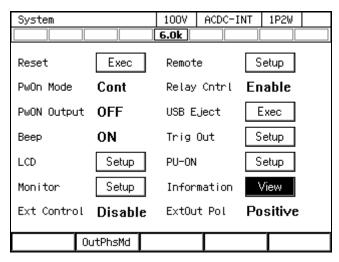

3. The Information window opens. The firmware version is shown at the [Firmware Version] item.

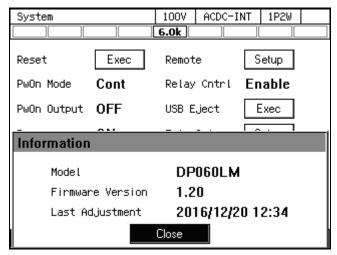

Note: This is a screenshot with firmware version 1.20.

# 11. Specifications

11.1	Output phase Configuration ······	248
11.2	Output Function ·····	248
11.3	Output Range·····	248
11.4	AC/DC Mode·····	
11.5	Signal Source·····	
11.6	AC Output ·····	251
11.7	DC Output ·····	
11.8	Output Voltage Stability · · · · · · · · · · · · · · · · · · ·	254
11.9	Distortion of Output Voltage Waveform ······	255
11.10	Power Input ·····	255
11.11	Withstand Voltage and Insulation Resistance ······	255
	Measurement Function ·····	
11.13	Power Unit Energization Setting ·····	259
11.14	Current Limiter ·····	260
11.15	Setting Range Limit Function	262
11.16	Remote sensing·····	263
11.17	AGC	264
	Autocal ·····	
11.19	Sequence ·····	266
	Simulation ·····	
	Clipped Sine Wave ·····	
	Arbitrary Wave·····	
	External Signal Input·····	
	General Function ·····	
	Memory Function ·····	
	Self-diagnosis/Protection Function	
	External Control Function ·····	
	External Interface ······	
	USB Memory Interface ······	
11.30	Waveform Monitor Output ·····	276
	EMC	
11.32	Operation Environment ······	277
	Externals, Weight, and Terminal Block ······	
	Option ····	
11.35	Outline Dimensional Drawing ······	280

Specifications are valid under the following settings and conditions and after a warm-up period of 30 minutes at least, unless otherwise noted.

Load Resistance load of power factor 1

Signal source INT (internal signal source)

Output voltage waveform Sine wave

Remote sensing Off AGC/Autocal Off

Current Limiter Factory default setting

[set] indicates a setting value, and [rdg] indicates a read value.

The description noted with "/" indicates that the specification changes by the output range, such as "100 V range specification/200 V range specification."

The input voltage is noted as line voltage in three-phase four-wire input, unless otherwise noted.

A value with the accuracy is the guaranteed value of the specification. However, an accuracy noted as reference value shows the supplemental data for reference when the product is used, and is not under the guarantee. A value without the accuracy is the nominal value or representative value (shown as typ.).

The product corresponds to Clause 2 (8) Frequency converter, Appendix 1 of Export Trade Control Ordinance. The permission for exportation of the Japanese Administration is necessary for export outside Japan.

## 11.1 Output phase Configuration

	Single-phase output	Polyphase output
Output phase Configuration	Single-phase two-wire	Single-phase two-wire, Three-phase four-wire (Y-connection)

## 11.2 Output Function

	Single-phase output	Polyphase output
Output Function	Continuous, Sequence, Simulation	

## 11.3 Output Range

	Single-phase output	Polyphase output
Output Range	100 V range, 200 V range	

## 11.4 AC/DC Mode

	Single-phase output	Polyphase output
AC/DC mode	AC, ACDC, DC	AC, ACDC

	Description	
AC	The signal source and amplification section of this product are AC-coupled, and the DC component is canceled.	
	Only the AC output setting of 40 Hz or higher is available.	
	The signal sources that can be combined are INT, VCA, SYNC, EXT, and ADD.	
	When the waveform superimposed with DC is amplified using EXT and ADD	
	(using external signal sources), it may not be an intended output because the DC	
	component is canceled. In this case, select the ACDC mode.	
ACDC	The signal source and amplification section of this product are DC-coupled, and	
	the DC component is also amplified.	
	The AC and DC output settings of 1 Hz or higher are available.	
	The signal sources that can be combined are INT, SYNC, EXT, and ADD.	
	For the polyphase output, only the AC setting is available.	
	Fixed to this mode in the Simulation.	
	Select this mode when you want to amplify a signal including DC, to superimpose DC (DC offset), or output a frequency of 40 Hz or lower. Also select this mode when the DC component temporally occurs, for example, by sudden change of voltage or phase.	
DC	voltage or phase.  The signal source and amplification section of this product are DC-coupled.	
DC	Only the DC setting is available.	
	The signal sources that can be combined are INT and VCA.	
1	It is unavailable for the polyphase output.	

## 11.5 Signal Source

	Single-phase output	Polyphase output
Signal source	INT, VCA, SYNC, EXT, ADD	INT, VCA, SYNC

	Description	
INT	Uses the internal signal source.	
	Sets the output voltage, output waveform, frequency, output on phase, and output	
	off phase by using the panel or the external interface such as USB.	
	Fixed to INT in the Sequence and Simulation.	
VCA	Uses the internal signal source.	
	Controls the output voltage setting of the internal signal source with the DC signal	
	which is input to the external input terminal. The output voltage setting cannot be	
	set from external interfaces such as the panel or USB. All conditions except for	
	output voltage setting are same as INT.	
	For the polyphase output the setting is common to all the phases.	
	Cannot be selected in the ACDC mode.	
SYNC	Uses the internal signal source.	
	Synchronizes the frequency of the internal signal source with the signal (EXT)	
	from the external synchronization signal input terminal (also used as the external	
	input terminal) or the power supply input frequency (LINE) of the product. The	
	frequency setting cannot be set from external interfaces such as the panel or USB.	
	All conditions except for output frequency setting are same as INT.	
EXC	Cannot be selected in the DC mode.	
EXT	Uses the external signal source.	
	Amplifies the signal from the external input terminal by the specified gain	
	(variable), and outputs it.	
	Cannot be selected for the polyphase output.	
ADD	Cannot be selected in the DC mode.	
ADD	Uses both the internal and external signal sources.	
	Amplifies the signal from the external input terminal by the specified gain like	
	EXT, and adds the internal signal source component to it.	
	Cannot be selected for the polyphase output.	
1	Cannot be selected in the DC mode.	

## 11.6 AC Output

[V]=Vrms, [A]=Arms, unless otherwise noted.

		Single-phase output	
	DP060LM	DP120LM	DP180LM
Mode	Single-phase two-wire		
	Floating output, the Lo ter	minal can be grounded.	
Rated output voltage	100 V / 200 V		
Voltage setting range	0.0 V to 160.0 V / 0.0 V to		
		0.0 Vp-p to 908.0 Vp-p (arl	oitrary wave)
Setting resolution	0.1 V		
Voltage accuracy *1	$\pm (0.5 \% \text{ of set} + 0.6 \text{ V} / 1$	/	
Maximum current *2	60 A / 30 A	120 A / 60 A	180 A / 90 A
Maximum peak	Peak value (Apk) which is	four times of the	Peak value (Apk) which
current *3	maximum current	s rour times of the	is three times of the
			maximum current
Short reverse power	100 % or less of Maximur		
flow *4*5	(reverse power flow time	$\leq$ 20 ms, discontinuous, 4	0 °C or lower)
Power capacity	6 kVA	12 kVA	18 kVA
Load power	0 to 1 (phase lead or phase	se lag, 45 Hz to 65 Hz, ex	ternal power injection and
factor	regeneration are not availa	able.)	
Frequency	40.00 Hz to 550.00 Hz (AC mode)		
setting range	1.00 Hz to 550.00 Hz (ACDC mode)		
Setting resolution	0.01 Hz		
Frequency accuracy	±0.01 % of set (23 °C±5 °C)		
Frequency stability *6	±0.005 %		
Voltage frequency characteristic *7	±1 %		
Output waveform	sine wave, arbitrary wave	(16 types), clipped sine wa	ave (3 types)
Output on phase	0.0° to 359.9° variable		
setting range			
Setting resolution	0.1°		
Output off phase	0.0° to 359.9° variable (a	otiva/inactiva salactohla)	
setting range	`	ctive/inactive selectable)	
Setting resolution	0.1°		
DC offset *8	Within ± 20 mV (typ. fine	adjustment available)	

- \*1 : In the case of 10 V to 150 V/20 V to 300 V, sine wave, no load, 45 Hz to 65 Hz, DC voltage setting 0 V, 23 °C±5 °C.
- \*2: If the output voltage is higher than the rated value, this is limited (lowered) to satisfy the power capacity. If there is the DC superimposition, the active current of AC+DC satisfies the maximum current. In the case of 40 Hz or lower or 400 Hz or higher, and that the ambient temperature is 40°C or higher, the maximum current may decrease.
- \*3: For the capacitor input type rectified load (crest factor=4 or 3), the rated output voltage, and 45 Hz to 65 Hz.
- \*4: In the case rated output voltage, 50 Hz or 60 Hz. If the output voltage is higher than the rated value, this is limited to satisfy the power capacity. It may reduce short reverse power flow if ambient temperature is 40°C or higher or repeated interval of reverse power flow is 15 minutes or less.
- \*5 : External power injection or regeneration which is over short reverse power flow capacity is not available
- \*6: For 45 Hz to 65 Hz, the rated output voltage, no load or the resistance load for the maximum current, and within the operating temperature.

- \*7 : For 40 Hz to 550 Hz, sine wave, the rated output voltage, the resistance load for the maximum current at 55 Hz, and 55 Hz reference.
- \*8 : In the case of the AC mode and 23°C $\pm$ 5°C.

		Polyphase output	
	DP060LM	DP120LM	DP180LM
Mode	Single-phase three-wire (1 Three-phase four-wire (Y- Floating output, the N-tern	connection) (3P4W) minal can be grounded.	
Setting mode *9	Balanced mode, Unbalanced mode		
Rated output voltage	100 V / 200 V (phase volt	age)	
Voltage setting range	phase in unbalanced mode 0.0 V to 160.0 V / 0.0 V to 0.0 Vp-p to 454.0 Vp-p / Line voltage setting (balar 1P3W: 0.0 V to 320.0 V / 3P4W: 0.0 V to 277.2 V /	Phase voltage setting (collective for all phases in balanced mode and each phase in unbalanced mode)  0.0 V to 160.0 V / 0.0 V to 320.0 V  0.0 Vp-p to 454.0 Vp-p / 0.0 Vp-p to 908.0 Vp-p (arbitrary wave)  Line voltage setting (balanced mode and sine wave only)  1P3W: 0.0 V to 320.0 V / 0.0 V to 640.0 V  3P4W: 0.0 V to 277.2 V /0.0 V to 554.2 V	
Setting resolution	Phase voltage setting: 0.1	V, Line voltage setting: 0.2	2 V
Voltage accuracy (Phase voltage) *10	$\pm$ (0.5 % of set + 0.6 V / 1	.2 V)	
Maximum current (Phase current) *11	20 A / 10 A	40 A / 20 A	60 A / 30 A
Maximum peak current (Phase current) *12	Peak value (Apk) which is four times of the maximum current  Peak value (Apk) which is three times of the maximum current		
Short reverse power flow *13*14	100 % or less of Maximum current (RMS) (reverse power flow time ≤20 ms, discontinuous, 40 °C or lower)		
Power capacity	1P3W: 4 kVA 3P4W: 6 kVA	1P3W: 8 kVA 3P4W: 12 kVA	1P3W: 12 kVA 3P4W: 18 kVA
Load power factor	regeneration are not availa		ternal power injection and
Frequency setting range		40.00 Hz to 550.00 Hz (AC mode) 1.00 Hz to 550.00 Hz (ACDC mode)	
Setting resolution	0.01 Hz		
Frequency accuracy	±0.01 % of set (23 °C±5 °	C)	
Frequency stability *15	±0.005 %		
Voltage frequency characteristic *16	±1 %		
Output waveform	sine wave, arbitrary wave	(16 types), clipped sine wa	ive (3 types)
Output on phase setting range *17	0.0° to 359.9° variable (se	etting resolution 0.1°)	
Setting resolution	0.1°		
Output off phase setting range *17	0.0° to 359.9° variable (setting resolution 0.1°, active/inactive selectable)		
Setting resolution	0.1°		
Setting range of the phase angle (Unbalanced mode) Setting resolution	1P3W L2 phase: 180° ±: 3P4W L2 phase: 120° ±:	35.0°, L3 phase: 240° ±35.0°	0°
Phase angle accuracy *18	45 Hz to 65 Hz: ±1.0° 40 Hz to 550 Hz: ±2.0°		
DC offset *19	Within ± 20 mV (typ. fine	adjustment available)	

- \*9 : Can be set only in the polyphase output.
- \*10 : In the case of 10 V to 150 V/20 V to 300 V, sine wave, no load, 45 Hz to 65 Hz, DC voltage setting 0 V, 23  $^{\circ}$ C±5  $^{\circ}$ C.
- \*11: If the output voltage is higher than the rated value, this is limited (lowered) to satisfy the power capacity. In the case of 40 Hz or lower or 400 Hz or higher, and that the ambient temperature is 40°C or higher, the maximum current may decrease.
- \*12 : For the capacitor input type rectified load (crest factor=4 or 3), the rated output voltage, and 45 Hz
- \*13: In the case rated output voltage, 50 Hz or 60 Hz. If the output voltage is higher than the rated value, this is limited to satisfy the power capacity. It may reduce short reverse power flow if ambient temperature is 40°C or higher or repeated interval of reverse power flow is 15 minutes or less.
- \*14 : External power injection or regeneration which is over short reverse power flow capacity is not available.
- \*15 : For 45 Hz to 65 Hz, the rated output voltage, no load and the resistance load for the maximum current, and the operating temperature.
- \*16: For 40 Hz to 550 Hz, sine wave, the rated output voltage, the resistance load for the maximum current at 55 Hz, and 55 Hz reference.
- \*17: Set for the L1 phase. The component of the phase angle setting is added for the other phases.
- \*18: In the case of 50 V or higher, sine wave, and same load condition and voltage setting for all phases.
- \*19: In the case of the AC mode and 23 °C±5 °C.

## 11.7 DC Output

[V]=Vdc, [A]=Adc, unless otherwise noted. The polarity is relative to the Lo terminal.

		Single-phase output	
	DP060LM	DP120LM	DP180LM
Mode	Floating output, the Lo ter	rminal can be grounded.	
Rated output voltage	100 V / 200 V		
Voltage setting range	-227.0 V to +227.0 V / -4	454.0 V to +454.0 V	
Setting resolution	0.1 V		
Voltage accuracy *20	± ( 0.5 % of set  + 0.6 V / 1.2 V)		
Maximum source current *21	60 A / 30 A	120 A / 60 A	180 A / 90 A
Maximum instantaneous source current *22	Peak value (Apk) which is four times of the maximum current  Peak value (Apk) which is three times of the maximum current		
Short sink current	100 % or less of Maximum source current		
*23	(reverse power flow time $\leq 20$ ms, discontinuous, 40 °C or lower)		
Power capacity	6 kW	12 kW	18 kW

<sup>\*20 :</sup> In the case of -212 V to -10 V, +10 V to +212 V / -424 V to -20 V, +20 V to +424 V, no load, AC setting 0 V,  $23^{\circ}$ C± $5^{\circ}$ C.

- \*21: If the output voltage is higher than the rated value, this is limited (lowered) to satisfy the power capacity. If there is the AC superimposition, the active current of DC+AC satisfies the maximum current. In the case that the ambient temperature is 40°C or higher, the maximum current may decrease
- \*22 : Instantaneous = within 2 ms, at the rated output voltage.
- \*23: In the case rated output voltage. If the output voltage is higher than the rated value, this is limited to satisfy the power capacity. It may reduce short reverse power flow if ambient temperature is 40°C or higher or repeated interval of reverse power flow is 15 minutes or less.

### 11.8 Output Voltage Stability

	All models
Fluctuation with input voltage (Phase voltage)  *24 *25	Within ±0.15 % (typ.)
Fluctuation with output current (Phase voltage) *26	DC (Only single-phase output) Within $\pm 0.15$ V/ $\pm 0.30$ V 45 Hz to 65 Hz Within $\pm 0.15$ V/ $\pm 0.30$ V 40 Hz to 550 Hz Within $\pm 0.5$ V/ $\pm 1.0$ V
Fluctuation with ambient temperature (Phase voltage) *27	Within ±0.01 %/°C (typ.)

- \*24: In the case of single-phase and three-phase three-wire input, for power input 170 V to 250 V, power input 200 V reference. In the case of three-phase four-wire input, for power input 323 V to 433 V, power input 380 V reference.
- \*25: For the resistance load at the maximum current, the rated output voltage, DC (only single-phase output) or 45 Hz to 65 Hz. Transition state immediately after a change of the input power-supply voltage is not included.
- \*26: In the case that the output current is changed from 0 % to 100 % of the maximum current. For output voltage 75 V to 150 V/150 V to 300 V, no load reference. However, if the output voltage is higher than the rated value, the maximum current is limited to satisfy the power capacity.
- \*27 : For power input 200 V (single-phase, three-phase three-wire input) or 380 V (three-phase four-wire input), no load, the rated output voltage, DC (only single-phase output) or 45 Hz to 65 Hz.

## 11.9 Distortion of Output Voltage Waveform

		All models
Distortion (Phase voltage)	*28	0.5 % or lower

<sup>\*28:40</sup> Hz to 550 Hz, 50 % or higher of the rated output voltage, the maximum current or lower, AC and ACDC modes, THD+N.

## 11.10 Power Input

For DP060LM and DP120LM, either single-phase input or three-phase three-wire input or three-phase four-wire input can be chosen when ordering. For DP180LM, either three-phase three-wire input or three-phase four-wire input can be chosen.

		DP060LM	DP120LM	DP180LM
Voltage		Overvoltage Category II		
	1P2W	200 V to 230 V ±15 %,		
	input	with limited to 250 V or	lower	
	3P3W	200 V to 220 V ±15 9/ v	with limited to 250 V or lo	war
	input	200 V to 220 V $\pm 15$ %, with limited to 250 V or lower		wei
	3P4W	380 V (phase voltage: 220 V) ±15 %,		
	input	with limited to 433 V (phase voltage: 250 V) or lower		
Frequency		50 Hz ±2 Hz or 60 Hz ±2	Hz	
Power factor	Power factor *29 0.90 or higher (typ.)			
Efficiency *29		77 % or higher(typ.)		
Maximum power consumption		9 kVA or lower	18 kVA or lower	27 kVA or lower

<sup>\*29:</sup> In the case of AC- INT, the rated output voltage, the resistance load at the maximum current, 45 Hz to 65 Hz output.

## 11.11 Withstand Voltage and Insulation Resistance

Power input - Output/Chassis and Power input/Chassis - Output

	All models	
Withstand voltage	AC 1500 V or DC 2130 V 1 minute	
Insulation resistance	30 MΩ or higher (DC 500 V)	

#### 11.12 Measurement Function

All accuracy of the measurement function is indicated for 23 °C±5 °C.

#### View

	All models
Normal	Displays almost all the measured and setting values excluding the harmonic
	current measurement on one screen.
Simple	Enlarges and displays three items among all the measured values except the
_	harmonic current measurement.

#### Voltage \*30 \*31

		Single-phase output	Polyphase output	
Effective	Full scale	250.0 V / 500.0 V		
value	Resolution	0.1 V		
(rms)	Accuracy	DC, 45 Hz to 65 Hz ± (0.5 % of rdg + 0.3 V / 0.6 V)	45 Hz to 65 Hz ± (0.5 % of rdg + 0.3 V / 0.6 V)	
		40 Hz to 550 Hz ± (0.7 % of rdg + 0.9 V / 1.8 V)		
DC average	Full scale	±250.0 V / ±500.0 V	_	
value	Resolution	0.1 V	_	
(avg)	Accuracy	DC ± ( 0.5 % of rdg  + 0.3 V / 0.6 V)	_	
Peak value	Full scale	±250.0 V / ±500.0 V		
(pk)	Resolution	0.1 V		
	Accuracy			
(each of	*32	DC, 45 Hz to 65 Hz	45 Hz to 65 Hz	
max and		$\pm ( 2\% \text{ of rdg}  + 1 \text{ V} / 2 \text{ V})$	$\pm ( 2\% \text{ of rdg}  + 1 \text{ V} / 2 \text{ V})$	
min)				

<sup>\*30 :</sup> The accuracy values are in the case that the output voltage is within voltage setting range.

#### Voltage (Line voltage of polyphase output, only with sine waveform output.)

		Polyphase output
Effective	Full scale	1P3W: 500.0 V / 1000.0 V
value		3P4W: 433.0 V / 866.0 V
(rms) *33	Resolution	0.1 V

<sup>\*33:</sup> The displayed value is the result of calculation with the phase voltage measured value and the phase angle setting value regarding the output voltage waveform as a sine wave.

<sup>\*31:</sup> In the polyphase output, it is a specification for phase voltage, and the DC average value display cannot be selected.

<sup>\*32:</sup> The accuracy of the peak value is for a waveform of DC or sine wave.

#### Current \*34

			Single-phase output	
		DP060LM	DP120LM	DP180LM
Effective	Full scale	80 A / 40 A	160 A / 80 A	240 A / 120 A
value	Resolution	0.01 A		0.1 A
(rms)	Accuracy	DC, 45 Hz to 65 Hz		
		$\pm$ (0.5 % of rdg	$\pm$ (0.5 % of rdg	± (1 % of rdg
		+ 0.16 A / 0.08 A)	+ 0.32 A / 0.16 A)	+ 0.5  A / 0.3  A)
		40 Hz to 550 Hz		
		$\pm$ (0.7 % of rdg	$\pm$ (0.7 % of rdg	$\pm$ (1.4 % of rdg
		+ 0.16 A / 0.08 A)	+ 0.32 A / 0.16 A)	+0.5  A / 0.3  A)
DC	Full scale	±80 A / ±40 A	±160 A / ±80 A	±240 A / ±120 A
average	Resolution	0.01 A	0.1 A	
value	Accuracy	DC		
(avg)		$\pm$ ( 0.5 % of rdg	$\pm$ ( 0.5 % of rdg	$\pm$ ( 1 % of rdg
		+ 0.16 A / 0.08 A)	+ 0.32 A / 0.16 A)	+ 0.5  A / 0.3  A)
Peak	Full scale	±320 A / ±160 A	±640 A / ±320 A	±960 A / ±480 A
value	Resolution	0.01 A		0.1 A
(pk)	Accuracy	DC, 45 Hz to 65 Hz		
(each of max and	(Reference value) *35	± ( 2 % of rdg  + 0.8 A / 0.4 A)	± ( 2 % of rdg  + 1.6 A / 0.8 A)	± ( 2 % of rdg  + 2.4 A / 1.2 A)
min)	Hold	Holds the maximum values of  max  and  min  with the polarity (with the clear function)		

		Polyphase output *36				
		DP060LM	DP120LM	DP180LM		
Effective	Full scale	26.67 A / 13.33 A	53.33 A / 26.67 A	80 A / 40 A		
value	Resolution	0.01 A		0.1 A		
(rms)	Accuracy	DC, 45 Hz to 65 Hz				
		$\pm$ (0.5 % of rdg	$\pm$ (0.5 % of rdg	$\pm$ (1 % of rdg		
		+ 0.06 A / 0.04 A)	+ 0.11  A / 0.06  A)	+ 0.2  A / 0.1  A)		
		40 Hz to 550 Hz	į			
		$\pm$ (0.7 % of rdg	$\pm$ (0.7 % of rdg	$\pm$ (1.4 % of rdg		
		+ 0.06 A / 0.04 A)	+ 0.11  A / 0.06  A)	+ 0.2  A / 0.1  A)		
Peak	Full scale	±106.67 A / ±53.33 A	±213.32 A / ±106.67 A	±320 A / ±160 A		
value	Resolution	0.01 A		0.1 A		
(pk)	Accuracy	45 Hz to 65 Hz				
(each of max and	(Reference value) *35	± ( 2 % of rdg  + 0.3 A / 0.2 A)	± ( 2 % of rdg  + 0.55 A / 0.3 A)	± ( 2 % of rdg  + 0.8 A / 0.4 A)		
min)	Hold	Holds the maximum valu	es of  max  and  min  with	the polarity (with the		
		clear function)				

<sup>\*34</sup>: The accuracy values are in the case that the output current is 5 % to 100 % of the maximum current.

<sup>\*35 :</sup> The accuracy of the peak value is for a waveform of DC or sine wave.

<sup>\*36:</sup> In the polyphase output, it is a specification for phase current, and the DC average value display cannot be selected.

#### Power \*37 \*38

			Single-phase output	
		DP060LM	DP120LM	DP180LM
Active	Full scale	7200 W	14400 W	21600 W
(W)	Resolution	0.1 W/1 W (1000 W or high	gher)	1 W
	Accuracy	45 Hz to 65 Hz		
	*39	$\pm (1 \% \text{ of rdg} + 3 \text{ W})$	$\pm (1 \% \text{ of rdg} + 6 \text{ W})$	$\pm (2 \% \text{ of rdg} + 9 \text{ W})$
Apparent	Full scale	9000 VA	18000 VA	27000 VA
(VA)	Resolution	0.1 VA/1 VA (1000 W or	1 VA	
	Accuracy	45 Hz to 65 Hz		
		$\pm (2 \% \text{ of rdg} + 6 \text{ VA})$	$\pm (2 \% \text{ of rdg} + 12 \text{ VA})$	$\pm$ (3 % of rdg + 18 VA)
Reactive	Full scale	9000 var	18000 var	27000 var
(var)	Resolution	0.1 var/1 var (1000 var or higher)		1 var
	Accuracy	45 Hz to 65 Hz		
	*40	$\pm$ (2 % of rdg + 6 var)	$\pm$ (2 % of rdg + 12 var)	$\pm$ (3 % of rdg + 18 var)

		Polyphase output *41 *42			
		DP060LM	DP120LM	DP180LM	
Active	Full scale	2400 W	4800 W	7200 W	
(W)	Resolution	0.1 W/1 W (1000 W or high	gher)	1 W	
	Accuracy	45 Hz to 65 Hz			
	*39	$\pm (1 \% \text{ of rdg} + 1.5 \text{ W})$	$\pm (1 \% \text{ of rdg} + 2 \text{ W})$	$\pm$ (2 % of rdg + 3 W)	
Apparent	Full scale	3000 VA	6000 VA	9000 VA	
(VA)	Resolution	0.1 VA/1 VA (1000 W or	1 VA		
	Accuracy	45 Hz to 65 Hz			
		$\pm$ (2 % of rdg + 3 VA)	$\pm$ (2 % of rdg + 4 VA)	$\pm$ (3 % of rdg + 6 VA)	
Reactive	Full scale	3000 var	6000 var	9000 var	
(var)	Resolution	0.1 var/1 var (1000 var or	1 var		
	Accuracy	45 Hz to 65 Hz			
	*40	$\pm$ (2 % of rdg + 3 var)	$\pm$ (2 % of rdg + 4 var)	$\pm$ (3 % of rdg + 6 var)	

<sup>\*37 :</sup> All in the case of sine wave, 50 V or higher output voltage, and that the output current is 10 % or higher of the maximum current.

#### Load power factor, Load crest factor

		All models
Power factor	Measurement range	0.00 to 1.00
*43	Resolution	0.01
Crest factor	Measurement range	0.00 to 50.00
	Resolution	0.01

<sup>\*43:</sup> The power factor is not displayed in the DC mode.

<sup>\*38:</sup> The apparent and reactive powers are not displayed in the DC mode.

<sup>\*39:</sup> For the load with the power factor 0.5 or higher.

<sup>\*40 :</sup> For the load with the power factor 0.5 or lower.

<sup>\*41:</sup> In the polyphase output, these are the specifications for each phase.

<sup>\*42:</sup> In the polyphase output, the all-phase total display is available.

#### Synchronization frequency (only SYNC)

	All models		
Display range	38.0 Hz to 525.0 Hz		
Resolution	0.1 Hz		
Accuracy	±0.2 Hz		

Harmonic current (AC - INT, fundamental wave 50 Hz/60 Hz only, phase current) \*44

		, , , , , , , , , , , , , , , , , , , ,					
		Single-phase output					
		DP060LM	DP120LM	DP180LM			
Effective value	Measurement range	Up to 40th order of the	Up to 40th order of the fundamental wave				
(rms)	Full scale	80 A / 40 A	160 A / 80 A	240 A / 120 A			
		100 %	100 %	100 %			
Percent	Resolution	0.01 A	0.1 A				
(%)		0.1 %	0.1 %				
	Accuracy (At RMS,	Up to 20th					
	reference	$\pm$ (1 % of rdg	$\pm$ (1 % of rdg	$\pm$ (2 % of rdg			
	value)	+0.8  A / 0.4  A)	$+ 1.6 \mathrm{A} / 0.8 \mathrm{A})$	+ 2.4 A / 1.2 A)			
		21st to 40th					
		$\pm$ (1.5 % of rdg	$\pm$ (1.5 % of rdg	$\pm$ (3 % of rdg			
		$+0.8 \mathrm{A}/0.4 \mathrm{A})$	$+ 1.6 \mathrm{A} / 0.8 \mathrm{A}$	+ 2.4 A / 1.2 A)			

		Polyphase output					
		DP060LM	DP120LM	DP180LM			
Effective value	Measurement range	Up to 40th order of the	Up to 40th order of the fundamental wave				
(rms)	Full scale	26.67 A / 13.33 A 100 %	53.33 A / 26.67 A 100 %	80 A / 40 A 100 %			
Percent (%)	Resolution	0.01 A 0.1 % 0.1 %					
	Accuracy (At RMS, reference value)	Up to 20th ± (1 % of rdg + 0.3 A / 0.2 A)	± (1 % of rdg + 0.55 A / 0.3 A)	± (2 % of rdg + 0.8 A / 0.4 A)			
		21st to 40th					
		± (1.5 % of rdg + 0.3 A / 0.2 A)	± (1.5 % of rdg + 0.55 A / 0.3 A)	± (3 % of rdg + 0.8 A / 0.4 A)			

<sup>\*44 :</sup> The measurement does not conform to the IEC or other standard.

## 11.13 Power Unit Energization Setting

The power consumption can be decreased by decreasing the number of the power units in operation according to the load capacity. Each power unit can be enabled (energized)/disabled (not energized) separately. For the polyphase output, match the number of energized power units for each phase.

	Single-phase output			Polyphase output		
	DP060LM	DP120LM	DP180LM	DP060LM	DP120LM	DP180LM
Maximum output power per unit	2 kVA	2 kVA	6 kVA	2 kVA	2 kVA	6 kVA
Number of energized units setting range	1 to 3	1 to 6	1 to 3	1	1 to 2	1
Energized setting *45	Yes			No	Yes	No

<sup>\*45:</sup> It can be set only in case that there are multiple units for each phase.

#### 11.14 Current Limiter

This controls the output voltage for the output current to be within the limiter setting value when the peak value or RMS exceeds it. The output can be configured to be turned off when the limited state continues over the specified time.

In the polyphase output, the settings are common to all the phases for the phase current.

When increasing or decreasing the number of working units by the power unit energization setting, replace the setting range and the factory default setting with the ratio of the number of working units to the total number of units. (Refer to the example below. Round the digits of less than resolution to the one with the larger absolute value). Limiter settings are reset to factory default setting when the number of working power units is changed.

#### Peak current limiter

		Single-phase output			
		DP060LM	DP120LM	DP180LM	
Positive current	Setting Range (Peak value)	+30.0 A to +252.0 A / +15.0 A to +126.0 A	+60.0 A to +504.0 A / +30.0 A to +252.0 A	+90.0 A to +567.0 A / +45.0 A to +283.5 A	
	Factory default	+252.0 A / +126.0 A	+504.0 A / +252.0 A	+567.0 A / +283.5 A	
Negative current	Setting Range (Peak value)	-252.0 A to -30.0 A /	-504.0 A to -60.0 A /	-567.0 A to -90.0 A /	
Current		-126.0 A to -15.0 A	−252.0 A to −30.0 A	−283.5 A to −45.0 A	
	Factory default	-252.0 A / -126.0 A	-504.0 A / -252.0 A	-567.0 A / -283.5 A	
Resolution		0.1 A			
Limiter operation		Select whether to recover automatically (continuous) or turn the output off when the limited state continues over the specified time (1 s to 10 s, resolution 1 s).  Factory default setting is output OFF when the limit state continues for			
		10 s.			

		Polyphase output				
		DP060LM	DP120LM	DP180LM		
Positive	Setting Range	+10.0 A to +84.0 A /	+20.0 A to +168.0 A /	+30.0 A to +189.0 A /		
current	(Peak value)	+5.0 A to +42.0 A	+10.0 A to +84.0 A	+15.0 A to +94.5 A		
	Factory default	+84.0 A / +42.0 A	+168.0 A / +84.0 A	+189.0 A / +94.5 A		
Negative	Setting Range	-84.0 A to -10.0 A /	-168.0 A to -20.0 A /	-189.0 A to -30.0 A /		
current	(Peak value)	−42.0 A to −5.0 A	−84.0 A to −10.0 A	−94.5 A to −15.0 A		
	Factory default	-84.0 A / -42.0 A	-168.0 A / -84.0 A	-189.0 A / -94.5 A		
Resolution		0.1 A				
Limiter operation		Select whether to recover automatically (continuous) or turn the output off when the limited state continues over the specified time (1 s to 10 s, resolution 1 s).  Factory default setting is output OFF when the limit state continues for 10 s.				

#### RMS current limiter

		Single-phase output		
	DP060LM	DP120LM	DP180LM	
Setting range	3.0 A to 63.0 A/	6.0 A to 126.0 A /	9.0 A to 189.0 A /	
(effective value)	3.0 A to 31.5 A	6.0 A to 63.0 A	9.0 A to 94.5 A	
Factory default	63.0 A / 31.5 A	126.0 A / 63.0 A	189.0 A / 94.5 A	
Resolution 0.1 A				
Limiter operation	when the limited state resolution 1 s).	Factory default setting is output OFF when the limit state continues for		

	Polyphase output			
	DP060LM	DP120LM	DP180LM	
Setting range (effective value)	1.0 A to 21.0 A / 1.0 A to 10.5 A	2.0 A to 42.0 A / 2.0 A to 21.0 A	3.0 A to 63.0 A / 3.0 A to 31.5 A	
Factory default	21.0 A / 10.5 A	42.0 A / 21.0 A	63.0 A / 31.5 A	
Resolution	0.1 A			
Limiter operation	Select whether to recover automatically (continuous) or turn the output off when the limited state continues over the specified time (1 s to 10 s, resolution 1 s).  Factory default setting is output OFF when the limit state continues for 10 s.			

#### Setting ranges and factory defaults when working unit number changed (example)

When the number of working units of DP060LM single-phase output is changed from 3(max.) to 1, setting ranges and factory defaults of each current limiter become 1/3 of those above. Here is an example:

#### Peak current limiter

Positive Setting range +30.0 A to +252.0 A / +15.0 A to +126.0 A  $\rightarrow +10.0 \text{ A}$  to +84.0 A / +5.0 A to +42.0 A Factory default Setting range  $+252.0 \text{ A} / +126.0 \text{ A} \rightarrow +84.0 \text{ A} / +42.0 \text{ A}$  -252.0 A to -30.0 A / -126.0 A to -15.0 A  $\rightarrow -84.0 \text{ A}$  to -10.0 A / -42.0 A to -5.0 A Factory default  $-252.0 \text{ A} / -126.0 \text{ A} \rightarrow -84.0 \text{ A} / -42.0 \text{ A}$ 

RMS current limiter

Setting range 3.0 A to 63.0 A / 3.0 A to 31.5 A  $\rightarrow 1.0 \text{ A to } 21.0 \text{ A} / 1.0 \text{ A to } 10.5 \text{ A}$ Factory default  $63.0 \text{ A} / 31.5 \text{ A} \rightarrow 21.0 \text{ A} / 10.5 \text{ A}$ 

## 11.15 Setting Range Limit Function

This is the limit function for the setting of the internal signal source. It works when the signal source is INT, VCA (frequency setting limit only), SYNC (voltage setting limit only), or ADD (internal signal source only). The limitation does not work for the Sequence and Simulation. It does not also work for the external signal source of EXT and ADD.

In the polyphase output, the setting is common to all the phases.

Voltage setting limit 1 (in the AC mode, and sine wave or clipped sine wave is selected)

		Sin	gle-phase out	put	Polyphase output
		DP060LM	DP120LM	DP180LM	DP060LM DP120LM DP180LM
Setting range	Phase voltage setting				
(effective value)		0.1 V to 160	0.0 V / 0.1 V 1	to 320.0 V	
	*46	_			Line voltage setting (single-phase three-wire) 0.2 V to 320.0 V / 0.2 V to 640.0 V Line voltage setting (three-phase four-wire) 0.2 V to 277.2 V / 0.2 V to 554.2 V
Factory default		Phase voltage setting, 160.0 V/320.0 V			
Resolution		Phase voltage setting: 0.1 V			
		_			Line voltage setting: 0.2 V

<sup>\*46:</sup> The line voltage setting is available only when the output voltage setting is set as the line voltage and sine wave is selected in the balanced mode of the polyphase output.

#### Voltage setting limit 2 (other than Voltage setting limit 1, phase voltage setting only) \*47

		All models
Positive voltage	Setting Range (Peak value)	+0.1 V to +227.0 V / +0.1 V to +454.0 V
	Factory default	+227.0 V / +454.0 V
Negative voltage	Setting Range (Peak value)	−227.0 V to −0.1 V / −454.0 V to −0.1 V
	Factory default	-227.0 V / -454.0 V
Resolution		0.1 V

<sup>\*47 :</sup> The limitation is applied to the additional values of the AC voltage setting (recalculated to a peak value) and the DC voltage setting.

#### Frequency setting limit (the lower limit ≤ the upper limit) \*48

		All models	
Upper	Setting Range	1.00 Hz (AC mode : 40.00 Hz) to 550.00 Hz	
limit	Factory default	550.00 Hz	
Lower	Setting Range	1.00 Hz (AC mode : 40.00 Hz) to 550.00 Hz	
limit	Factory default	1.00 Hz (AC mode : 40.00 Hz)	
Resolution		0.01 Hz	

<sup>\*48:</sup> In the AC mode, the setting range is 40.00 Hz to 550.00 Hz.

#### 11.16 Remote sensing

This switches the voltage used for measurement. When the remote sensing is on, the sensing input terminal voltage is used. When it is off, the output terminal voltage is used.

By combining with AGC or Autocal, a voltage drop due to wiring to the load can be compensated. When the remote sensing is on, the output voltage detection point corrected by the AGC or Autocal function is switched to the sensing input terminal. When AGC or Autocal is off, only the detection voltage used for measurement display is switched.

Remote sensing ON or FB setting can be selected in the AC-INT, AC-VCA, AC-SYNC, DC-INT, and DC-VCA modes. For in the AC mode, it can be selected only when the waveform is a sine wave. It is turned off when the Sequence or Simulation is selected.

However, in case the stand-by state of sequence mode (step 0) effective only for AC-INT, ACDC-INT and DC-INT and when the waveform is sine wave or DC. Remote sensing cannot be set to either ON or FB unless either AC voltage or DC voltage setting is 0 V for ACDC-INT. Also, if the Remote sensing is ON, remote sensing is turned OFF once when you change ACDC mode from AC mode of DC mode even in stand-by state. Turn ON it again when you need.

When setting remote sensing to FB, the voltage feedback detection point is changed from inside (output terminal) to outside (sensing input terminal), and AGC or Autocal cannot be set. Remote sensing can be set to FB only when DIP or RIN is connected and the function of external control is set to DevCtrl. For external control, see 11.27.

External control Remote sensing		Voltage feedback detection point	Measurement voltage, power, power factor	AGC / Autocal setting	
Enable/Disable		ON		Use the sensing input terminal voltage	
		OFF	Inside	Use the output terminal voltage	Enable
		ON	(output terminal)	Use the sensing input terminal voltage	Ellable
DevCtrl		OFF		Use the output terminal voltage	
Beveur	*49	FB *50	Outside (sensing input terminal)	Use the sensing input terminal voltage	Disable

<sup>\*49:</sup> It is used to control DIP or RIN. Put DIP or RIN near this product.

<sup>\*50:</sup> It is enabled switching ON⇔FB or OFF⇔FB only when the output is OFF. The cable connecting the input terminal of DIP or RIN to the output terminal of this product should be as short as possible (3 m or less) and use twisted or parallel.

#### 11.17 AGC

When the AGC (Automatic Gain Control) is on, the detection point voltage is always measured, and the output voltage is continuously corrected so that its effective value is equal to the output voltage setting value. The fluctuation of the detection point voltage can be suppressed even when the load is fluctuated. The detection point can be switched between the sensing input terminal (remote sensing on) and the output terminal (remote sensing off). When setting remote sensing to FB, AGC cannot be set, see 11.16.

Effective only for AC-INT, AC-VCA, AC-SYNC, DC-INT, and DC-VCA and when the waveform is sine wave or DC. It is turned off when the Sequence or Simulation is selected. It cannot be selected when the Autocal is set to on.

	All models	
Response time	Within 100 ms (typ.)	
	(DC/50 Hz/60 Hz, at the rated output voltage)	
Operation range	The output voltage setting is 8 V or higher	
Calibration range	Within $\pm 10$ % (difference between the output voltage and measured value)	
	The output voltage should be within the allowed voltage setting range of the product.	
Accuracy	Within ±0.5 V / ±1.0 V	
	(in the case of DC or 40 Hz to 550 Hz, 50 V or higher output voltage, resistance	
	load, the output current is the maximum current or less)	

#### 11.18 Autocal

When the Autocal (Automatic Calibration) is on, the detection point voltage is always measured, and the output voltage is continuously corrected so that its effective value is equal to the output voltage setting value. The ratio (correction factor) of the detection point voltage to the output voltage setting value is used until the Autocal or the power is turned off. Therefore, the detection point voltage is not necessarily maintained if the load changes while the Autocal is on. The detection point can be switched between the sensing input terminal (remote sensing on) and the output terminal (remote sensing off). When setting remote sensing to FB, AGC cannot be set, see 11.16.

Unlike the AGC, it cannot follow a load fluctuation because it does not keep track of the voltage. On the other hand, when the load is stable, it has a merit of short response time on changing the output voltage setting.

Effective only for AC-INT, AC-VCA, AC-SYNC, DC-INT, and DC-VCA and when the waveform is sine wave or DC. It is turned off when the Sequence or Simulation is selected. It cannot be selected when the AGC is set to on.

However, in case the stand-by state of sequence mode (step 0) effective only for AC-INT, ACDC-INT and DC-INT and when the waveform is sine wave or DC. Autocal cannot be activated unless either AC voltage or DC voltage setting is 0 V for ACDC-INT. Also, Autocal is turned off once when you change ACDC mode from AC mode of DC mode even in stand-by state. Turn ON it again when you need.

	All models
Restriction when on	The output voltage setting is 8 V or higher
Calibration range *51	Within $\pm 10$ % (difference between the output voltage and measured value) The output voltage should be within the allowed voltage setting range of the product.
Accuracy *51	Within $\pm 0.5$ V / $\pm 1.0$ V (in the case of DC or 40 Hz to 550 Hz, 50 V or higher output voltage, resistance load, the output current is the maximum current or less)

<sup>\*51:</sup> The values of the calibration range and accuracy are the ones at the time when the Autocal is turned

## 11.19 Sequence

Effective only for AC-INT, ACDC-INT, and DC-INT.

	All models
Number of memories	5 (non-volatile)
Number of steps	Maximum 255 (for each sequence)
Setting range of Step Time	0.0010 s to 999.9999 s
Intra-Step behavior	Constant, Keep, Linear Sweep
Parameter	Output range
*52 *53 *54 *55	AC/DC mode (The signal source is fixed to INT)
	(The above 2 items are common within one sequence)
	AC phase voltage, frequency, waveform
	DC voltage
	Start Phase
	Stop Phase
	Phase angle
	Step termination
	Jump count (1 to 9999, or infinite)
	Specification of the Jump-to step
	Synchronous step output (2bit)
	Specification of the branch step
	Trigger output
Sequence control	Start
	Stop
	Hold
	Resume
	Branch 1, Branch 2

<sup>\*52:</sup> The output of AC phase voltage, Frequency and DC voltage of step 0 can be changed on Sequence Edit View during output ON.

<sup>\*53:</sup> For DC-INT, the AC phase voltage, frequency, waveform, Start Phase, and Stop Phase cannot be set.

<sup>\*54:</sup> The DC voltage cannot be set in the polyphase output.

<sup>\*55:</sup> The Phase angle can be set only in the polyphase output. The Start Phase and Stop Phase are specified for the L1 phase, and the component of the Phase angle setting is added to them for the other phases.

## 11.20 Simulation

This allows you to simulate power line abnormalities, such as blackout, voltage rise, voltage drop, abrupt phase change, and abrupt frequency change. It can be used only for AC, sine wave, and ACDC-INT. For the polyphase output only the balanced mode is available. Note that it does not support IEC or other standards test. When performing the tests specified by the standards, use appropriate peripheral equipment.

	All models
Number of memories	5 (non-volatile)
Number of steps	6 (Initial, Normal 1, Trans 1, Abnormal, Trans 2, Normal 2)
Setting range of Step Time	0.0010 s to 999.9999 s (0 s is available only for the Transition Step)
Parameter	Output range (The above item is common within the Simulation) AC voltage Frequency Waveform (sine wave only) Start Phase (excluding the Transition Step) Stop Phase (excluding the Transition Step) Synchronous step output (2bit) Trigger output Repeat count (1 to 9999 times or infinite)
Simulation control	Start Stop

## 11.21 Clipped Sine Wave

The peak clipped sine wave can be output, based on the crest factor (CF) setting or the percent setting to the peak value.

		All models
Number of memories		3 (non-volatile)
CF	Variable range	1.10 to1.41
*56 *57	Factory default	1.41
	Setting resolution	0.01
	Effective value correction	Yes
Clip ratio	Variable range	40.0 % to100.0 %
*56 *58	Factory default	100.0 %
	Setting resolution	0.1 %
	Effective value correction	None

<sup>\*56:</sup> In the polyphase output, it is the setting for phase voltage.

Example) For the output voltage setting of 100 Vrms and the clip rate of 80 %, the peak is clipped at 113.1 Vpk.

## 11.22 Arbitrary Wave

This uses the waveform data saved in the internal memory, which is transferred and recalled using the external interface or USB memory.

	All models
Number of memories	16 (non-volatile)
Waveform length	4096 words
Amplitude resolution	16 bit

<sup>\*57:</sup> The crest factor is represented as "voltage peak value/voltage effective value." It is 1.41 for sine wave.

<sup>\*58:</sup> When the clip ratio is specified, the peak is clipped by the voltage corresponding to the specified % to the peak value of the setting voltage (100 %).

## 11.23 External Signal Input

The external signal input works differently depending on the selection of the signal source.

#### 11.23.1 External Synchronous Signal Input (Signal Source SYNC only)

This is the signal to synchronize the frequency of the internal signal source with the one of the external signal source.

When the signal source is SYNC, you can select whether to synchronize with this external signal input or the power input frequency of this product. When synchronizing with the power input frequency, no signal input is needed.

	All models	Factory default
Synchronization signal source switch	External synchronization signal (EXT) or Power input (LINE)	LINE
Synchronization frequency range	40 Hz to 500 Hz	
Input terminal	BNC connector (rear panel, unbalanced)	
Input impedance	1 ΜΩ	
Threshold of input voltage	TTL level	
Minimum pulse width	500 μs	
Nondestructive maximum input voltage	±10 V	

#### 11.23.2 Voltage Setting Signal Input (Signal Source VCA only)

This is the signal to set the output voltage amplitude of the internal signal source (DC input).

Output voltage (Vpk) = Voltage setting signal (Vdc) x Gain (Vpk/Vdc).

Example 1) For the AC mode, signal source = VCA, the gain of 100.0, and the voltage setting signal input of 1 Vdc, the output voltage is 100 Vpk.

Example 2) For the AC mode, signal source = VCA, the gain of 141.4, and the voltage setting signal input of 1 Vdc, the output voltage is 141.4 Vpk(=100 Vrms).

	Specification	Factory default	
Gain setting range *59	100 V range: 0.0 to 227.0 times	100	
	200 V range: 0.0 to 454.0 times	200	
Setting resolution *59	0.1		
Gain accuracy *60	±5 %		
Input terminal	BNC connector (rear panel, unbalanced)		
	Also used as the external synchronization signal input		
Input impedance	1 ΜΩ		
Input voltage range	±2.2 V (A/D resolution 10 bit)		
Nondestructive maximum input	±10 V		
voltage	±10 V		

<sup>\*59:</sup> In the polyphase output, the setting is common to all the phases.

<sup>\*60 :</sup> In the DC mode (only in single-phase output) or 45 Hz to 65 Hz, factory default gain, rated output voltage, and no load.

## 11.23.3 External Signal Input (only EXT and ADD)

This multiplies the input signal by the specified gain and outputs it. For ADD, the internal signal source is added.

EXT: Output voltage (V) = External signal input (V) x Gain (V/V)

ADD: Output voltage (V) = External signal input (V) x Gain (V/V)

+ Internal signal source setting (V)

External Signal Input cannot be used in the polyphase output.

	1 51 1	
	Specification	Factory default
Setting Range for gain	100 V range: 0.0 to 227.0 times	100
	200 V range: 0.0 to 454.0 times	200
Setting resolution	0.1	
Gain accuracy *61	±5 %	
Input-output phase	In-phase	
Input terminal	BNC connector (rear panel, unbalanced)	
	Also used as the external synchronization signal input	
Input impedance	1 ΜΩ	
Input voltage range	±2.2 V (A/D resolution 10 bit)	
Nondestructive	±10 V	
maximum input voltage	110 V	
Input frequency range	DC to 550 Hz (sine wave)	
	DC to 100 Hz (other than sine wave)	

<sup>\*61:</sup> In the DC mode (only in single-phase output) or 45 Hz to 65 Hz, factory default gain, rated output voltage, and no load.

#### 11.24 General Function

		Description	Factory default
LCD	Contrast	0 to 99	
display setting	Color	Blue tone or white tone	Blue tone
Beep (key operation)	on, erroneous	On or Off Alarms on abnormal situation regardless of the setting	On
Key lock		On or Off On: Only key lock-off and output-off are available	Off
Output relay	control	Enable: The output relay is used to turn the output on/off Disable: The output relay is not used. High impedance to turn the output off	Enable
Output settir at power-on	ng	On or Off On: Output on after power-on	Off
Trigger outp	out setting	Polarity: positive  or negative  Pulse width: 0.1 ms to 10 ms (resolution 0.1 ms)	Negative 10 ms
Time unit se Sequence an	tting for d Simulation	ms or s	S
Reset function	Resets the items stored in the System Setting Memory (excluding the external interface setting and external control setting) and the items that are to be reset at power-on, to the factory default settings.		

## 11.25 Memory Function

You can save basic settings (AC/DC mode, signal source, output range, AC setting, DC setting, current limiter, setting range limit, etc.) for each output phase configuration in the non-volatile Basic Setting Memory of No.1 to No.30, and recall them to use when the output is off. The No.1 setting is restored at power-on. The No.0 setting includes the setting items for the factory default.

The external control, display, and other settings are saved in non-volatile System Setting Memory when they are changed by the panel operation or remote command.

The Sequence, Simulation, clipped sine wave, and arbitrary wave are saved in their own non-volatile memories.

#### Items in the Basic Setting Memory \*62

	Factory default
Output range	100 V range
AC/DC mode	AC mode
Signal source	INT
External synchronization signal (LINE or EXT)	LINE
AC voltage setting	0 V
Frequency	50 Hz
Output waveform	Sine wave
Output on phase and output off phase	0.0°
Phase voltage/Line voltage setting selection	Phase voltage
Phase angle setting	Single-phase three-wire: 180°
	Three-phase four-wire: 120°, 240°
Balanced/Unbalanced	Balanced
DC voltage setting	0 V
Current limiter	See 11.14
Setting range limit	See 11.15
External input gain	100 / 200

<sup>\*62 :</sup> Some items do not exist depending on the AC/DC mode or signal source.

### Items in the System Setting Memory

	Factory default
Output function	Continuous
DC offset setting	0 mV
Measurement display mode	Normal View
Measurement unit selection	rms
Power unit energization setting	All enabled (energization)
Output phase configuration	Single-phase two-wire
Remote sensing	Off
AGC	Off
General function	See 11.24 (excluding the time unit setting of the Step Time
	for the Sequence and Simulation)
Monitor output target	Current (L1 phase)
External interface	USB
External control	Disabled

# 11.26 Self-diagnosis/Protection Function

At power-on	Description
ROM check	Checks the internal ROM.
RAM check	Checks the internal RAM.
Basic setting Memory check	Checks the Basic Setting Memory.
System Setting Memory check	Checks the System Setting Memory.
Waveform Memory check	Checks the Waveform Memory.
Sequence Memory check	Checks the Sequence Memory.
Simulation Memory check	Checks the Simulation Memory.
Adjustment value memory check	Checks the adjustment data memory.
Version check	Checks the version of the internal software.
Output phase configuration check	Checks the output phase configuration.

While energizing	Description	
Abnormal output	Turns off the panel display and output when an output overvoltage or	
_	overcurrent is detected.	
Power unit error	Turns off the panel display and output when a power unit error is detected.	
Internal control error	Turns off the panel display and output when an internal communication or	
	other error is detected. Also stops all the operations excluding power-off.	

### 11.27 External Control Function

The following functions can be selected.

Item	Description
Disable	Disable the control input of the CONTROL I/O. The status output signal is output.
	(See 11.27.1)
Enable	Enable the CONTROL I/O. (See 11.27.1)
DevCtrl	You can control DIP or RIN. (See 11.27.2)

#### 11.27.1 CONTROL I/O

When you enabled the external control from the menu,

You can control this product by using the external signal (or non voltage contact). The state output is always on. The detection and state switching is done at 10 ms-cycle.

If the Remote state is achieved by the external interface, a control input is ignored.

It is not available to use 11.27.2 at the same time.

Item		Description	Factory default		
Control	External	ternal control input		Enabled or Disabled	
input	Input lev	Input level		TTL *63	
	Nondesti	ructive maximum input		+10 V / -5 V	
	Input im	pedance		Pull-up to +5 V via 47 k $\Omega$	
	Control	Output Off		Falling Off	
		Output On		Falling On	
		Sequence start/resume	*64		
		Stop of sequence	*64	Falling Stop	
		Sequence is in the Hold status		Falling Hold	
		Sequence branch 1		Falling Branch start	
		Sequence branch 2		Falling Branch start	
		Memory recall (+ compile)	*65	Falling Recall	
		Memory specification 1		Specify 0 to 3	
		Memory specification 2		(Equivalent to memory 1 to	4,
				respectively)	
		Clear the current peak-hold val	ue	Falling Clear	
State	Output le			TTL *66	
output		npedance		220 Ω	
	Polarity		*67	Positive or negative	negative
	Status	Power On/Off		Low: Off, High: On	
		Output On/Off*			gative)
				Low: Off, High: On (Pos	itive)
		Protection operation*		Low: Active, High: None	(Negative)
				Low: None, High: Active	(Positive)
		Limiter operation*		Low: Active, High: None	(Negative)
				Low: None, High: Active	(Positive)
	AGC/Autocal settin			Low: On, High: Off (Neg	
		_		Low: Off, High: On (Pos	itive)
		Software busy*		Low: Busy, High: Ready	(Negative)
				Low: Ready, High: Busy	(Positive)
		Output range		Low: 200 V, High: 100 V	
		Sequence operation		Ź	
		Step sync 1	*64	High layed on I are layed	
		Sequence operation		High level or Low level	
		Step sync 2	*64		
		Trigger		positive or negative	Г
Terminal	D-sub 25-pin multi-connector (rear panel, female, M2.6 screw)				

<sup>\*63:</sup> Low: 0.8 V or lower, High: 2.6 V or higher, the chassis potential,

<sup>\*64:</sup> Sequence start and stop of the control input are effective for the Simulation as well. Also, step sync output 1 and 2 of the control output are effective for the Simulation as well.

<sup>\*65:</sup> The memory recall input of the control input recalls the setting memory for the Normal (Continuous), the Sequence Memory for the Sequence, and the Simulation Memory for the Simulation. For the Sequence and Simulation, the compile data is also included.

\*66: Low: 0.4 V or lower, High: 2.7 V or higher, the chassis potential,

\*67: Polarity reverse (collective) is available only for the state with \*.

### 11.27.2 Control of Peripherals by Device Control

You can control DIP or RIN.

Set external control function to DevCtrl and connect between CONTROL I/O connector and CONTROL IN connector of this product with the attached control cable. You can use CONTROL SIGNAL connector, QUICK CHANGE SYNC OUTPUT connector, and STATUS OUTPUT connector.

It is not available to use 11.27.1 at the same time.

Connector name	Terminal	
CONTROL IN	D-sub 25-pin multi connector	
CONTROL IN	(Rear panel, Female, M2.6 screw)	
CONTROL SIGNAL	D-sub 37-pin multi connector	
CONTROL SIGNAL	(Rear panel, Female, M2.6 screw)	
OLUCK CHANCE CYNC OLITHIT	BNC connector	
QUICK CHANGE SYNC OUTPUT	(Rear panel, unbalanced)	
STATUS OUTPUT	BNC connector	
STATUS OUTPUT	(Rear panel, unbalanced)	

### 11.28 External Interface

This is the interface to control the product from an external computer. The RS232 and USB interfaces are provided by default, and either GPIB or LAN interface can be chosen when ordering. (Both GPIB and LAN cannot be chosen.)

The command language is compliant with the SCPI Specification Version 1999.0. (Factory default is USB).

USB interface (USB1.1) \*68

Item	Description
Device class	USBTMC
ID	Already assigned for each device
Terminator	"LF"

\*68: The use of USB hub may cause a communication failure. It is recommended to use a fully-shielded, short cable.

#### RS232 interface \*69 \*70

Item	Description or Selection	Factory default
Terminal	D-sub 9-pin (male, UNC #4-40 screw)	
Baud rate	9600 / 19200	9600 bps
Terminator	"CR" "LF" / "CR" / "LF"	"CR" "LF"
Parity	None/Odd/Even	None
Stop bit	1/2	1 bit
Data bit	7 / 8	8 bit
Flow control	None/Hardware/Software	None

<sup>\*69:</sup> Binary transmission is not supported.

#### GPIB interface (IEEE488.1 std 1987) \*71 \*72

Item	Description or Selection	Factory default
Address	0 to 30	2
Terminator	"LF"	

<sup>\*71 :</sup> Binary transmission is not supported.

### LAN interface (IEEE802.3, LXI 1.4 Core 2011) \*73

Item	Description or Selection Factory default	
Terminal	RJ-45 modular jack	
Transmission method	Ethernet(100BASE-TX / 10BASE-T)	
Communication protocol	SCPI-RAW	
Terminator	"LF"	
IP address setting	Auto, Fixed	Auto

<sup>\*73 :</sup> Binary transmission is not supported.

# 11.29 USB Memory Interface

Commercial USB memory sticks can be used.

		Description
Available memory	*74	USB 1.1 or USB 2.0-compliant product
Connector		USB-A (front panel)
Format		FAT32
Writable/readable contents		Basic Setting Memory, Sequence, Simulation, arbitrary wave
File operation	*75	Create dedicated directory, rename, load, and save 2-byte characters (Japanese, etc.) are not supported.

<sup>\*74:</sup> We do not guarantee that all USB memories can be operational with this product.

<sup>\*70:</sup> Use a cross cable.

<sup>\*72 :</sup> Query for the main unit status byte using a serial poll is not supported.

<sup>\*75:</sup> The time stamp recorded on a file is different from the actual date and time.

# 11.30 Waveform Monitor Output

This can monitor the waveform of the output voltage or current. (only one terminal).

		DP060LM				
		Single-phase output			Polyphase output	
Number of working power units		3	2	1	1	
Monitore	d	Output phase volt	tage or output phase	e current (switched		
Gain	Phase voltage (V/V)	$\frac{1}{200} / \frac{1}{400}$				
	Phase current (V/A)	$\frac{1}{150} / \frac{1}{75}$	$\frac{1}{100} / \frac{1}{50}$	$\frac{1}{50}/\frac{1}{25}$	$\frac{1}{50} / \frac{1}{25}$	
Accuracy *76		±5 %				
Output terminal		BNC connector (rear panel, unbalanced)				
Output in	npedance	600 Ω	_	_		

		DP120LM					
			Single-phase output				
Number of working power units		6, 5	4, 3	2, 1	2, 1		
Monitore	ed	Output phase vol	Output phase voltage or output phase current (switched)				
Gain							
	Phase current (V/A)	$\frac{1}{300} / \frac{1}{150}$	$\frac{1}{200} / \frac{1}{100}$	$\frac{1}{100} / \frac{1}{50}$	$\frac{1}{100} / \frac{1}{50}$		
Accuracy *76		±5 %					
Output terminal		BNC connector (rear panel, unbalanced)					
Output in	npedance	600 Ω					

		DP180LM					
		;	Single-phase outpu	Polyphase output			
Number of working power un		3	2	1	1		
Monitore	d	Output phase volt	Output phase voltage or output phase current (switched)				
Gain	Phase voltage (V/V)	$\frac{1}{200} / \frac{1}{400}$					
	Phase current (V/A)	$\frac{1}{450} / \frac{1}{225}$	$\frac{1}{300} / \frac{1}{150}$	$\frac{1}{150} / \frac{1}{75}$	$\frac{1}{150} / \frac{1}{75}$		
Accuracy *76		±5 %					
Output terminal		BNC connector (rear panel, unbalanced)					
Output in	npedance	600 Ω					

<sup>\*76:</sup> No load on the monitor output, the rated output voltage, the resistance load at the maximum current.

### 11.31 EMC

Only DP120LM (power input: three-phase three-wire and three-phase four-wire input)

		Description
EMC	*77 *78 *79	Compliant with the following standard requirement.
		KN 11
		KN 61000-6-2

<sup>\*77:</sup> Current limiter operation or indication malfunction of LEDs or measured values may occur if this product is exposed to a strong radiated radio frequency electromagnetic field or a strong radio frequency conducted disturbance.

### 11.32 Operation Environment

	All models
Operation Environment	Indoor, Pollution Degree 2
Altitude	2000 m or lower
Operating temperature/	0 °C to +50 °C, 5 % to 85 %RH
humidity	The absolute humidity should be 1 to 25 g/m <sup>3</sup> , without dew condensation.
	On some specifications, the temperature range limit is more strict.
Storage temperature/	-10 °C to +60 °C, 5 % to 95 %RH
humidity	The absolute humidity should be 1 to 29 g/m <sup>3</sup> , without dew condensation.

Figure 11-1 Range of Ambient Temperature/Humidity shows the ranges of the ambient temperature and the humidity.

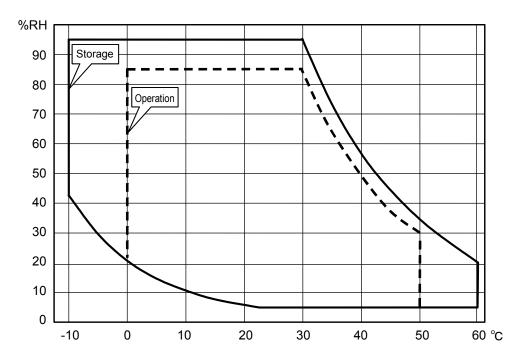


Figure 11-1 Range of Ambient Temperature/Humidity

<sup>\*78:</sup> Electromagnetic emissions from this product may interfere with reception of radio and television broadcasts. Unless the user takes special measures to reduce electromagnetic emissions, using this product in a residential area must be avoided.

<sup>\*79:</sup> For compliant manufacturing lot, please contact us or our agent.

# 11.33 Externals, Weight, and Terminal Block


	DP060LM	DP120LM	DP180LM	
Dimensions (W × H × D) (Excluding projections)	455×887×803 mm	455×1407×803 mm	910×1580×803 mm	
Weight	125 kg approx.	200 kg approx.	350 kg approx.	
Power input terminal (rear)	Single-phase, three-phase three-wire, three-phase four-wire input: M6 screw	Single-phase, three-phase three-wire input: M8 upset bolt Three-phase four-wire input: M6 screw	Three-phase three-wire, three-phase four-wire input: M10 upset bolt	
Single-phase Output terminal (rear)	M6 screw	M8 upset bolt	M10 upset bolt	
Polyphase Output terminal (rear)	M6 screw			
Sensing input terminal (rear)	M4 screw			

# **11.34 Option**

Option name	Description	Remarks
Remote Controller	Multifunctional remote controller with	On order and
DP008	numeric keypad and jog shuttle.	after purchase
Fixing Bracket PA-001-2973 (Type2L cabinet, for fixing front, rear, left and right side) PA-001-2971 (Type4L cabinet, for fixing front and rear side) PA-001-2887 (Type5L, 6L cabinet, for fixing front, rear, left and right side)	For fixing this product to the floor.  Type 4L cabinet is only for fixing front and rear side because the stabilizer which fixes left and right side is attached.	On order and after purchase
Replacement Air Filter PA-001-2792 (for grill 1L) PA-001-2793 (for grill AL) PA-001-2794 (for grill 2L, BL) PA-001-2969 (for grill 3L) PA-001-2970 (for grill 4L)	Replacement air filters. Please refer to the correspondence table for the used number and shape of the air filter corresponding to each model.	On order and after purchase
Power Cable (3 m) PA-001-3252 PA-001-3254 PA-001-3256 PA-001-3258 PA-001-3259 PA-001-3263 PA-001-3264 PA-001-3265	Cables for the power input. Please refer to the correspondence table.	On order and after purchase

### Correspondence table of air filter

Model name	Ontion nama	Description	Number of used sheets		
Woder manne	Option name	Description	DP060LM	DP120LM	DP180LM
PA-001-2792	Replacement Air Filter 1L	For front grill 1L 1sheet	1	1	1
PA-001-2793	Replacement Air Filter AL	For front grill AL 1sheet	0	0	1
PA-001-2794	Replacement Air Filter 2L,BL	For front grill 2L,BL 1sheet	0	1	4
PA-001-2969	Replacement Air Filter 3L	For front grill 3L 1sheet	1	0	0
PA-001-2970	Replacement Air Filter 4L	For front grill 4L 1sheet	0	1	0

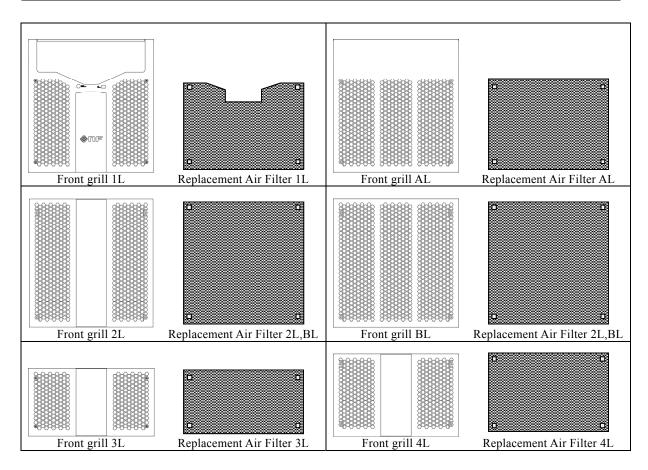

### Correspondence table of power cable

	DP060LM	DP120LM	DP180LM
Single-phase input	PA-001-3252	PA-001-3254	
Three-phase three-wire input	PA-001-3256	PA-001-3258	PA-001-3259
Three-phase four-wire input	PA-001-3263	PA-001-3264	PA-001-3265

# 11.35 Outline Dimensional Drawing

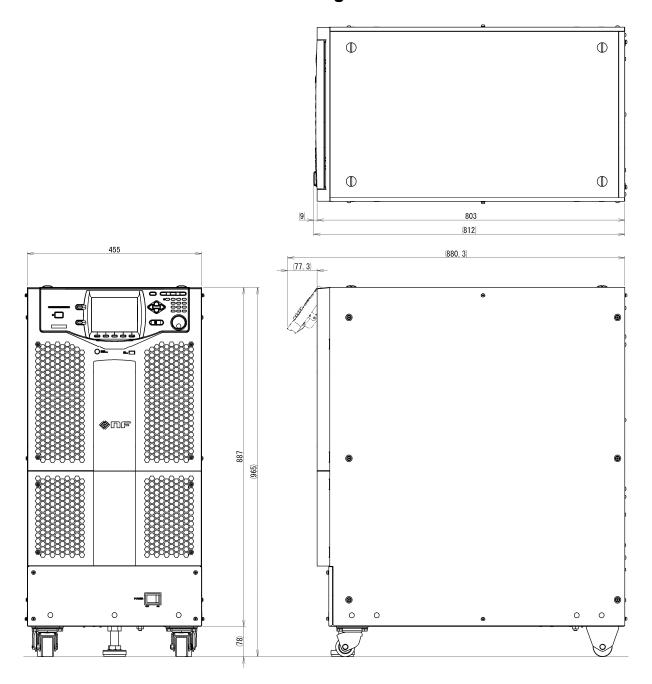


Figure 11-2 DP060LM (Type2L cabinet)

The stabilizer (accessory) is installed.

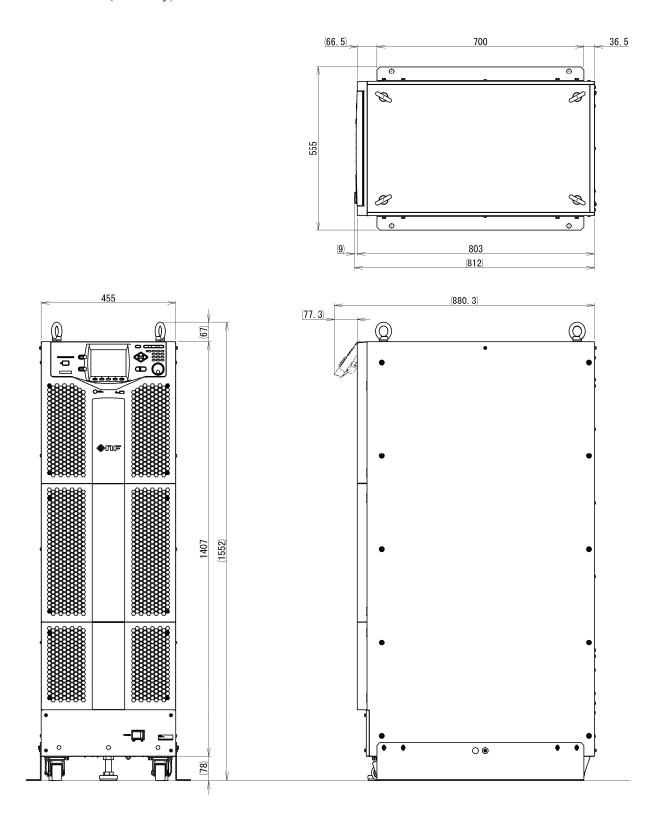


Figure 11-3 DP120LM (Type4L cabinet)

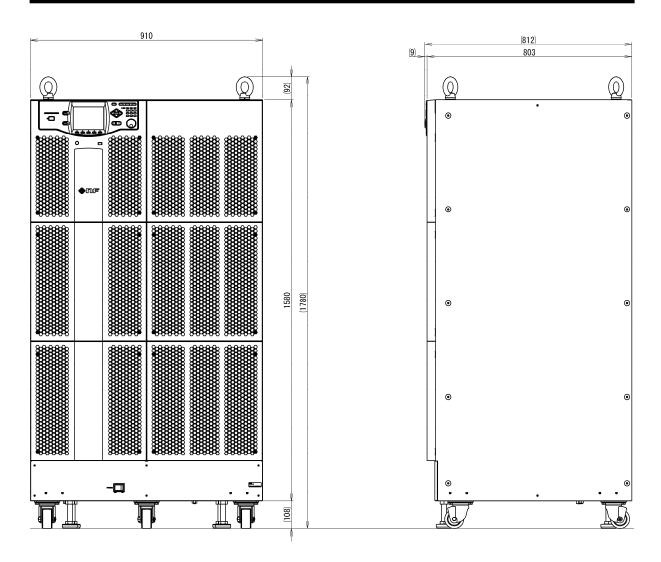


Figure 11-4 DP180LM (Type5L cabinet)

# \_\_\_\_\_ Index \_\_\_\_\_

1	busy	199
100 V range	.46 <b>C</b>	
0	calibration	26
2	CANCEL key	32, 37
200 V range	caster	12, 28
200 V range	CF	55, 134, 200
	character string entry box	39
A	clip ratio	132
	clipped sine wave	132
AC coupling	compile	86, 115
AC mode	component name	28
AC Output	251 Const	73
AC/DC mode	Continuous function	41, 202
Accessories	8 CONTROL I/O connector	30
ACDC mode	43 CONTROL IN connector	30
active power	.54 control panel	28
ACV	49 CONTROL SIGNAL	30
ADD43, 1	crest factor	55, 132
Adjuster Foot9,	28	
AGC161, 1		
air filter	D	
air outlet	data list box	26
Amplifying the External Signal Input		
apparent power	DC mode	
Arbitrary Waveform 1		
Arbitrary Waveform Memory1		
arrow key	.32	
asynchronous	DCV	49
Autocal	199	
AVG	.55	
R	eject operation	155
	ENTER key	32
balanced mode	error ID	228
Basic Setting Memory	ERROR LED	31
beep	error message	228, 231
branch stan	EXT	43, 185

Ext Control	179, 183, 205	Ipk-Hold	54, 132, 200
external control function	176, 205		
external signal input	185	1	
external signal input connector	30, 173, 185	J	
ExtOut Pol	180, 205	Jog	22
Eyebolt	28	Jump count	
		· ·	
_		Jump-to step	/4
Г			
F	55, 200	K	
F key	•		
factory default setting		Keep	73
Firmware Version		key lock	191, 199
frequency			
frequency setting range limit		1	
front grill		L	
nont gim	20, 212, 213	LAN	214
		LAN connector	
G		LCD	
		LIMIT LED	
GPIB	212	Limiter	
GPIB connector	30	limiting action	
		line voltage	
ш		line voltage display	
11		Local State	
harmonic current	128	Local State	210
narmonic current	120		
		M	
I			
		measured value area	198, 200
I	54, 200	Measurement Function	54
I key	32	Measuring Mode	55
Iavg	54, 200	Memory Function	140
Imax	54, 200	MEMORY key	31, 140
Imin	54, 200	Memory View	140
Immunity Test Software	5, 222	menu composition	202
Information	205, 245	MENU key	31, 35
Initial Step	104	Monitor	156, 205
Inrush Current	130	Monitor Function	155
Installation Environment	9	monitor output connector	30
INT	43		
Intra-Step parameter	72, 105		

NI		power factor	55, 200
IN		power input terminal	14, 30
Normal View	57	power on/off	32
numeric keypad		power switch	28
numerical entry box		power unit energization setting	34, 189, 199, 229
numerical entry box	30	protection type	228
		PU-ON	190, 205, 228, 229
0		PwOn Mode	99, 125, 205
		PwON Output	189, 205
off phase	52		
on phase	52		
operation check	23	Q	
options	217		54 200
OutPhsMd	41, 205	Q	•
output current peak-hold function	131	Quick change sync output connect	or30
output current peak-hold value5	4, 59, 131		
output display area	198	R	
output function	35		
OUTPUT key	31	RANGE key	31
OUTPUT LED	31	rated power icon	34, 199
output mode	198	reactive power	54
output off	53, 230	Reference Impedance Network	5, 222
output phase configuration	41, 198	Relay Cntrl	187, 205
output range	46, 198	Remote20	05, 209, 211, 212, 214
output relay control	186	remote controller	28, 218
output setting display area	201	Repeat	107
output voltage	49	reset	194, 196, 205
output-on at power-on setting	33, 188	Resin-molded cover	30
		RMS	55
<b>n</b>		RMS current limiter	199
Р		RS232	210
		RS232 connector	30
P	,		
Peak		0	
peak current limiter		S	
Peripherals			
PF		S	,
phase current		screen title	,
phase voltage		selection box	
Polyphase		Sensing input terminal	
Polyphase output terminal		Sequence Control View	
power cable	14, 220	Sequence Edit View	79, 100

Sequence function	71, 203	<b>-</b>	
Sequence Memory	82, 152	ı	
SHIFT key	32, 40	4 1	50
SHIFT LED	32, 40	three-phase	
Shift state	40	Transition Step	
Shortcut operations	40	Transition to	
Shuttle	32	Trig Out	
signal source	43	Trigger output	76, 106
Simple View	57		
Simulation Control View	115, 127	U	
Simulation Edit View	115		
Simulation function	204	unbalanced mode	169
Simulation Memory	153	USB Communication	208
Single-phase	18, 49	USB connector	30
single-phase output terminal	30	USB Eject	155, 205
single-phase three-wire	50	USB ID	210
Soft-key	31, 36	USB Memory	154
soft-key function	198	USB memory connector	28
Start Phase	75, 106	USBTMC	208
status icon	198, 199		
Status output connector	30	\	
Step Behavior	73	V	
Step parameter	104	<b>V</b> 7	54 200
Step sync code output	75, 106	V	
step termination	75	V key	
Step Time	74, 105	Vavg	, and the second se
Step-control parameter	72, 105	VCA	
Stop Phase	76, 106	VISA	
storage	244	Vmax	•
SV	160, 200	Vmin	·
SVavg	200	Voltage Dips Simulator	
SVmax	200	Voltage Setting Range Limit	68
SVmin	200		
Sweep	73	W	
SYNC	43, 183		
synchronization	183, 199	Wattage Limiter	70, 199
synchronization frequency	55	waveform	47
SYSTEM I/O connector	30	window	198
System Lock	230		
System menu	205		

# WARRANTY -

NF Corporation certifies that this product was thoroughly tested and inspected and found to meet its published specifications when it was shipped from our factory. In the unlikely event that you experience an issue during use, please contact our company or agency of our company from which you purchased the product.

All NF products are warranted against defects in materials and workmanship for a period of one year from the date of shipment. During the warranty period, NF will repair the defective product without any charge for the parts and labor.

For repair service under warranty, the product must be returned to either NF or an agent designated by NF. The Purchaser shall prepay all shipping cost, duties and taxes for the product to NF from another country, and NF shall pay shipping charges to return the product to the purchaser.

This warranty shall not apply when corresponding to following particulars.

- A) Failure caused by improper handling or use of the product in a manner that does not conform with the provisions of the Instruction Manual.
- B) Failure or damage caused by transport, dropping, or other handling of the product after purchase.
- C) Failure caused by repair, adjustment, or modification of the product by a company, organization, or individual not approved by NF.
- D) Failure caused by abnormal voltage or the influence of equipment connected to this product.
- E) Failure caused by the influence of supply parts from the customer.
- F) Failure caused by such as corrosion that originate in the use of causticity gas, organic solvent, and chemical.
- G) Failure caused by the insect or small animal that invaded from the outside.
- H) Failure or damage caused by fire, earthquakes, flood damage, lightning, war, or other uncontrollable accident.
- I) Failure caused by the reason that was not able to be foreseen by the science and technology level when shipped from our company.
- J) Replacement and replenishment of consumables such as batteries.

**NF** Corporation

WABUN: (DA00059069)

If there are any misplaced or missing pages, we will replace the manual. Contact the sales representative.

#### **NOTES**

- Reproduction of the contents of this manual is forbidden by applicable laws.
- The contents of this manual may be revised without notice.
- Information provided in this manual is intended to be accurate and reliable. However, we assume no responsibility for any damage regarding the contents of this manual.
- We assume no responsibility for influences resulting from the operations in this manual.

©Copyright 2017-2019, NF Corporation

# Programmable AC Power Source DP060LM/DP120LM/DP180LM Instruction Manual

NF Corporation 6-3-20, Tsunashima Higashi, Kohoku-ku, Yokohama 223-8508 JAPAN Phone +81-45-545-8111 Fax +81-45-545-8191

